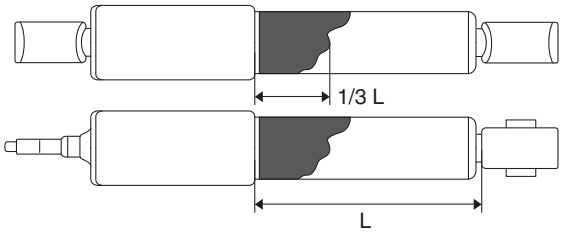
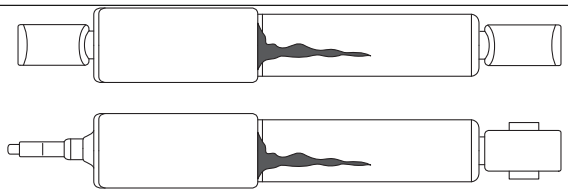
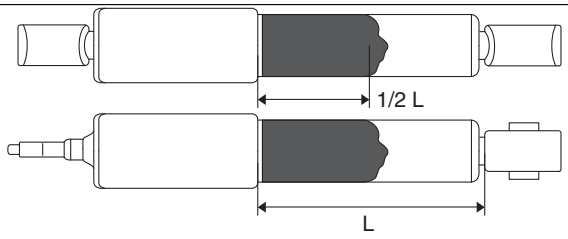
REAR SHOCK ABSORBER INSPECTION [REAR BRAKE (DISC)]

id0214c8128900

1. Remove the wheel and tire.
2. Remove the rear shock absorber. (See REAR SHOCK ABSORBER REMOVAL/INSTALLATION [REAR BRAKE (DISC)].)
3. Inspect the rear shock absorber for damage.
   - If there is any malfunction, replace the rear shock absorber. (See REAR SHOCK ABSORBER REMOVAL/INSTALLATION [REAR BRAKE (DISC)].)
4. Inspect the rear shock absorber for oil leakage and if there is any malfunction, replace the rear shock absorber. (See REAR SHOCK ABSORBER REMOVAL/INSTALLATION [REAR BRAKE (DISC)].)

Caution

- **Even if there is no oil leakage, there may be gas leakage or internal part damage. Gas leakage and internal part damage cause a lowered vehicle height, unstable vehicle movement, or abnormal noise. Perform the stroke inspection and verify that there is no malfunction.**

SYMPTOM	DETAIL	ACTION
	**OIL STAIN BELOW DUST BOOT** • Oil stain is below the dust boot as shown in the figure. • The oil stain area is 1/3 of L or less. **Note** • The oil stain is not progressive because the area dampens and dries repeatedly. • The damping function is operating normally.	Wipe off any dust or oil on the surface.
	**OIL LEAKAGE RUNS DOWN IN STRIP** • Oil is running down in a strip along the side of the rear shock absorber as shown in the figure.	Replace the rear shock absorber. (See REAR SHOCK ABSORBER REMOVAL/INSTALLATION [REAR BRAKE (DISC)].)
	**OIL LEAKAGE BELOW DUST BOOT** • The oil leakage area is 1/2 of L or more as shown in the figure.	

5. Expand and contract the rear shock absorber piston rod 3 times or more at a certain speed and after the 4th time verify that the weight in a full stroke is constant with no abnormal response and noise.
   - If there is any malfunction, replace the rear shock absorber. (See REAR SHOCK ABSORBER REMOVAL/INSTALLATION [REAR BRAKE (DISC)].)