
TORSION BEAM AXLE REMOVAL/INSTALLATION [REAR BRAKE (DRUM)]

id0214c9128000

Caution


- **Performing the following procedures without first removing the rear ABS wheel-speed sensor may possibly cause an open circuit in the wiring harness if it is pulled by mistake. Before performing the following procedures, disconnect the rear ABS wheel-speed sensor wiring harness (axle side) and fix the wiring harness to an appropriate place where it will not be pulled by mistake while servicing the vehicle.**

1. Remove the main silencer and the three-way catalytic converter as a single unit. (SKYACTIV-G 1.3, SKYACTIV-G 1.5) (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
2. Remove the main silencer and middle pipe as a single unit. (SKYACTIV-D 1.5) (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Remove the rear ABS wheel-speed sensor from the wheel hub component.
4. Remove the rear ABS wheel-speed sensor wiring harness from the bracket and set it aside so that it does not interfere with the servicing.

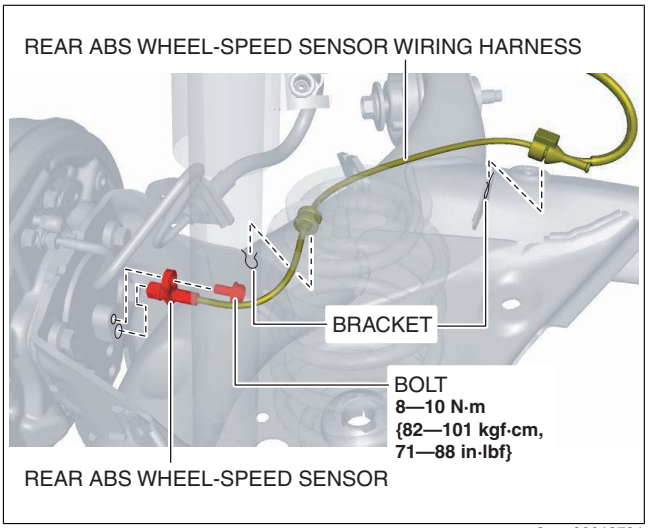


am2zzw00012781

5. Disconnect the auto leveling sensor link. (With headlight auto leveling system)

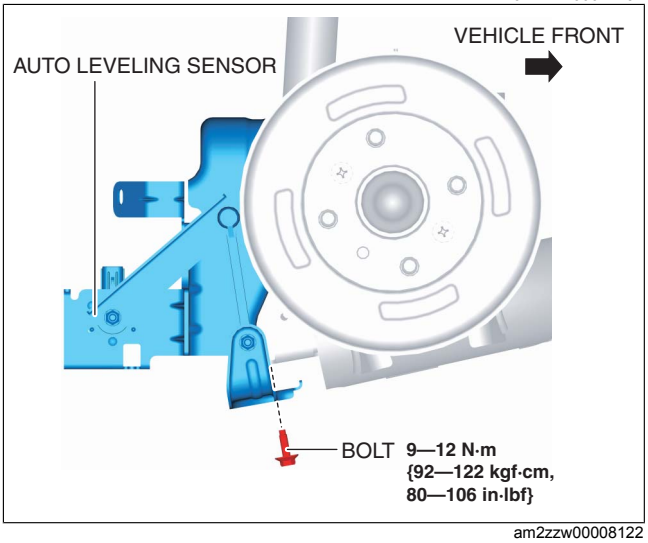


am2zzw00008122

6. Disconnect the rear parking brake cable end from the case of the end cable.

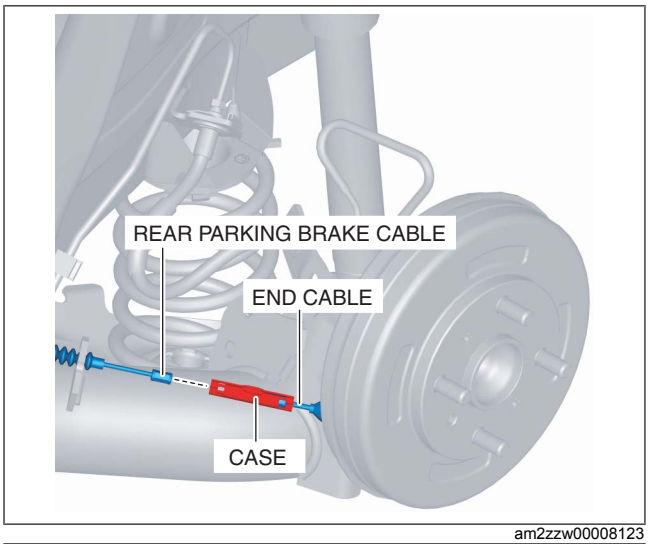


am2zzw00008123

7. Remove the clip and disconnect the rear brake pipe.

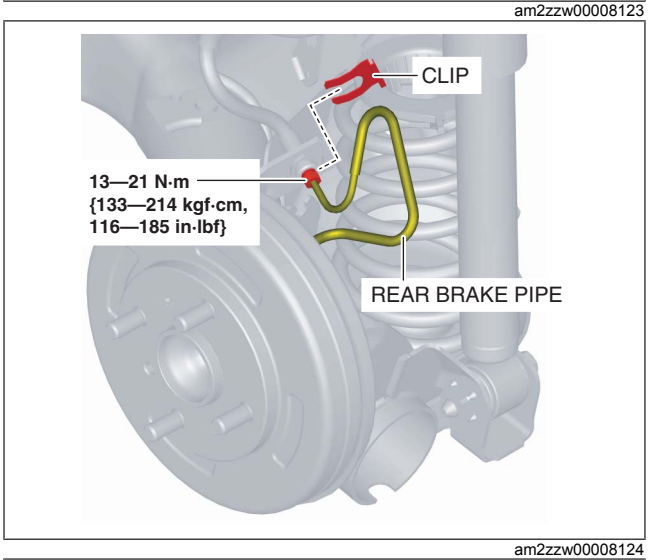


am2zzw00008124

8. Remove the screws, and remove the brake drum.

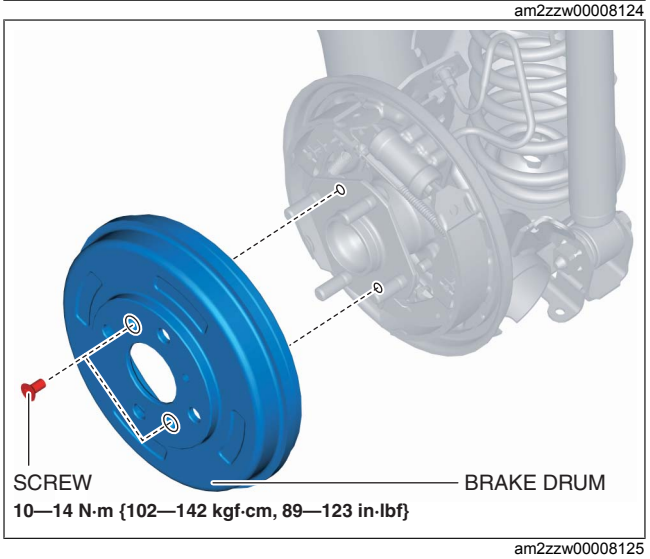

am2zzw00008125

9. Remove the bolts, and remove the wheel hub component and the rear brake component from the torsion beam axle.

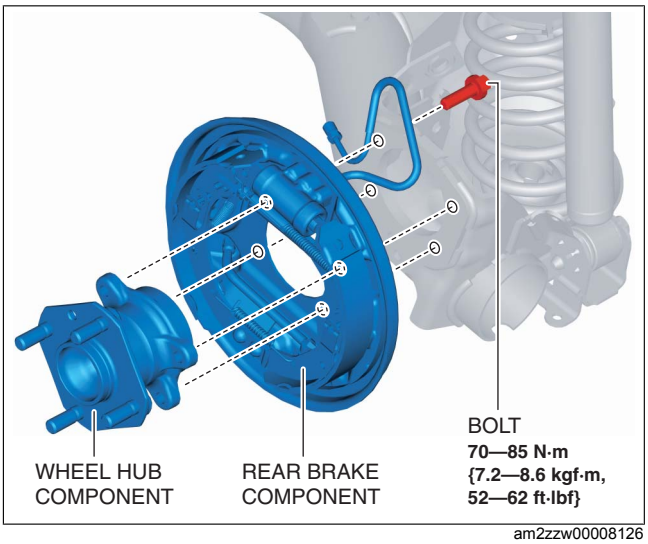


am2zzw00008126

10. Support the torsion beam axle using a jack.

Warning


- **If the torsion beam axle falls off while it is removed/installed, it may cause serious injury or death, or vehicle damage. Always use a jack when removing/installing the torsion beam axle and verify that it is securely supported.**

11. Remove the rear coil spring. (See REAR COIL SPRING REMOVAL/INSTALLATION [REAR BRAKE (DRUM)].)

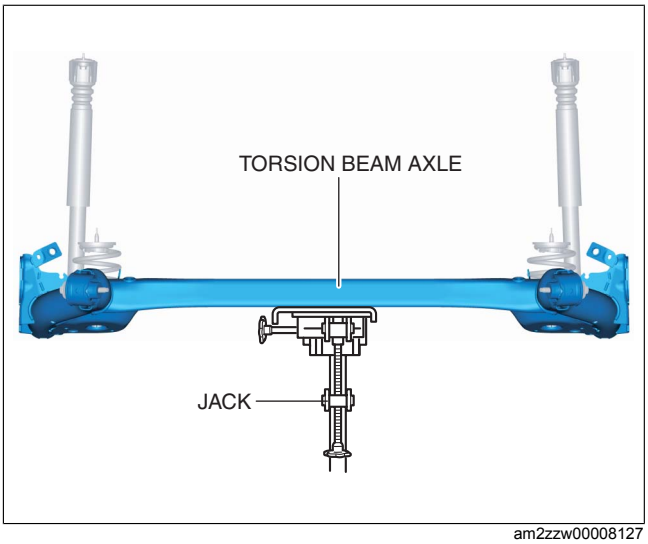


am2zzw00008127

12. Remove the bolts. (See Torsion Beam Axle Installation Note.)

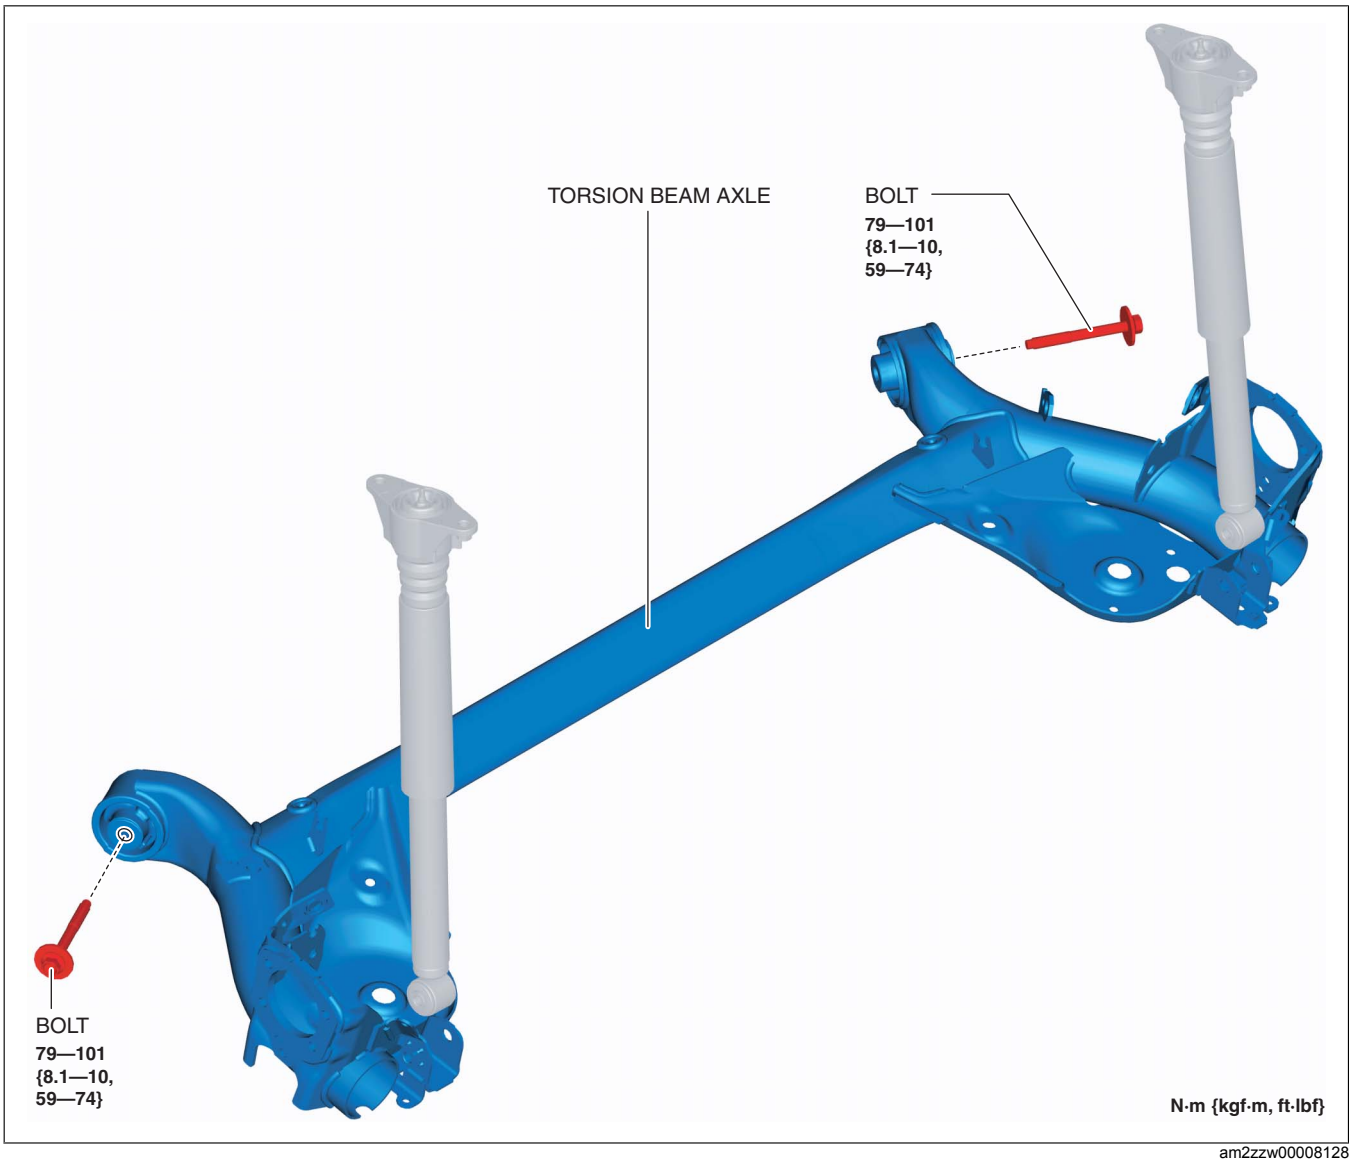

am2zzw00008128

13. Lower the jack slowly and remove the torsion beam axle.
14. Remove the bolts and nuts. (with dynamic damper)

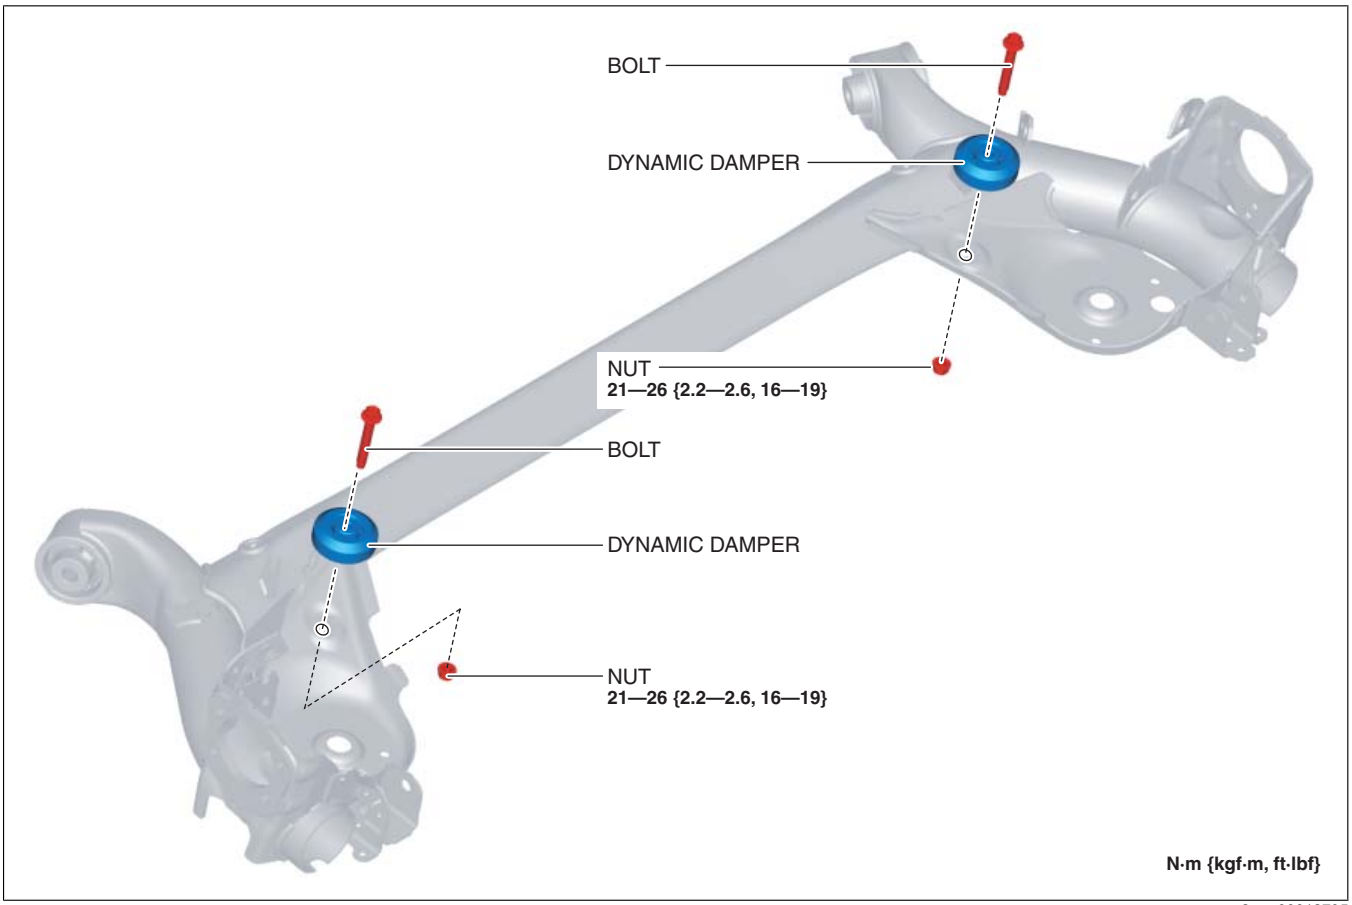


am2zzw00012795

15. Remove the dynamic dampers. (with dynamic damper)
16. Install in the reverse order of removal.

Torsion Beam Axle Installation Note

1. While pressing both ends of the torsion beam axle bushing to the stoppers shown in the figure, install the bolts.

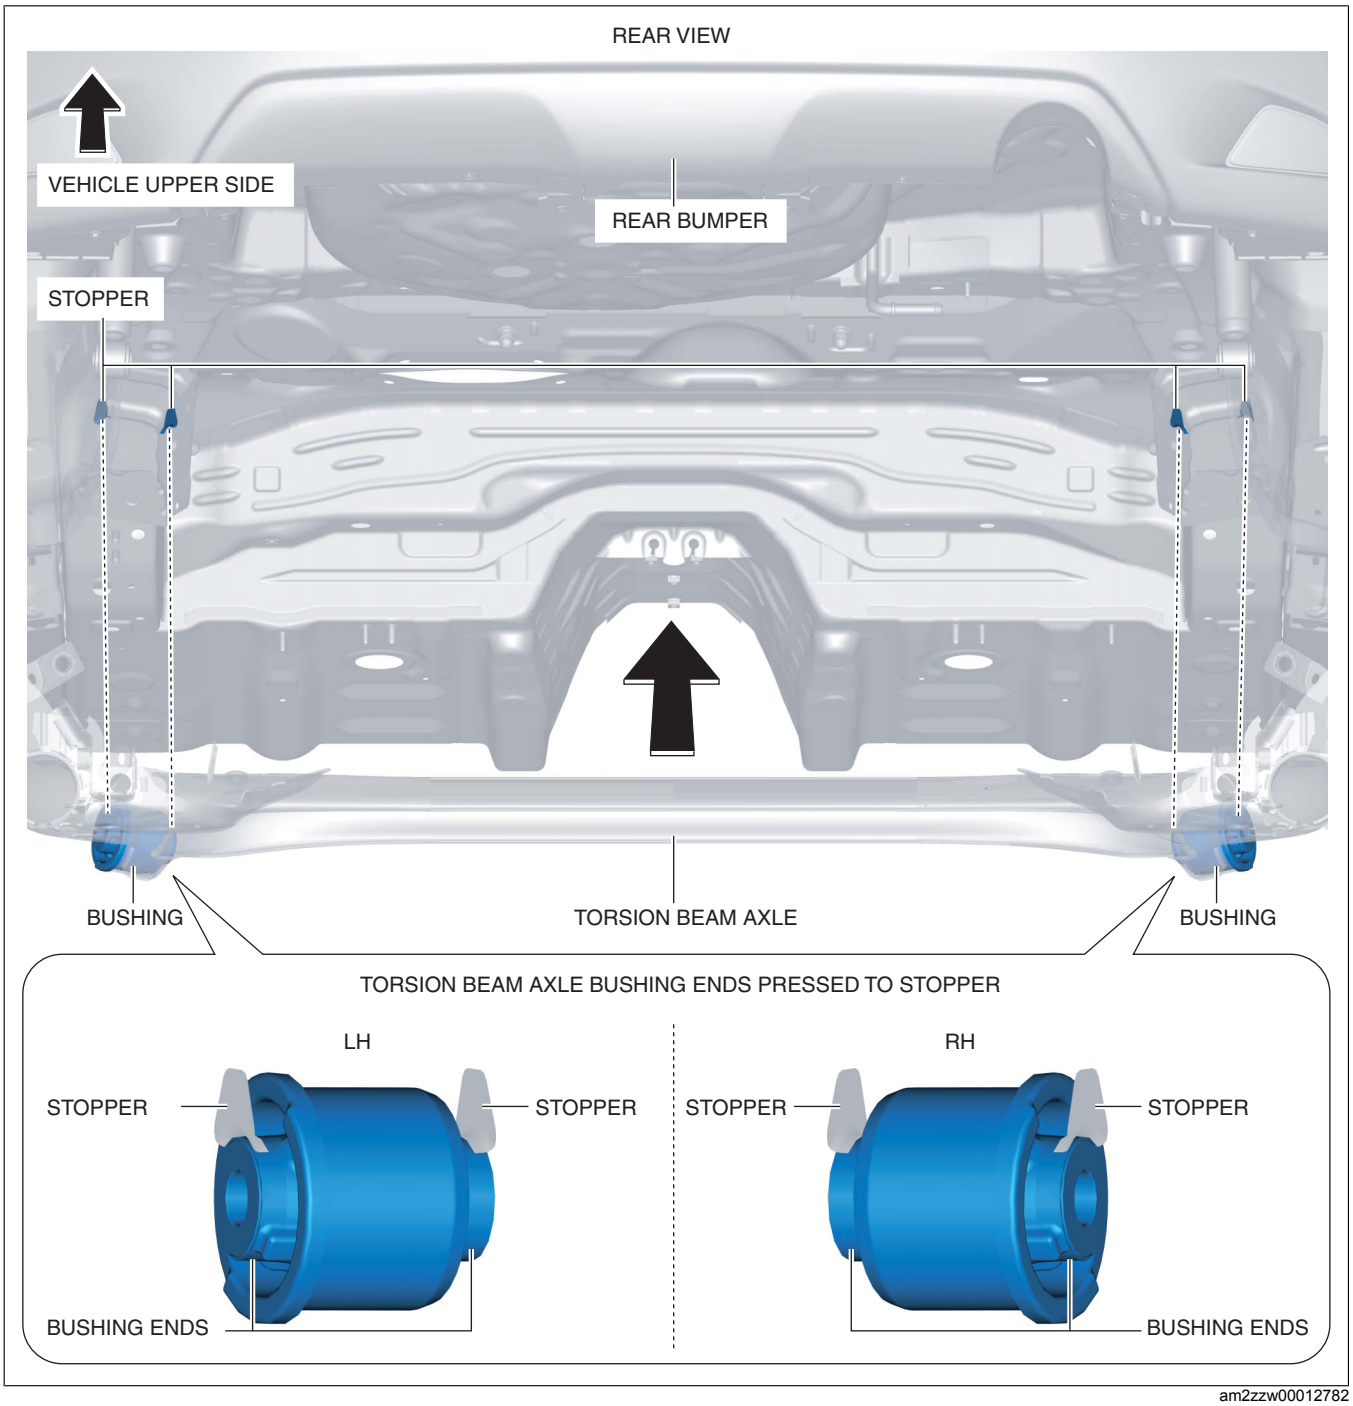

am2zzw00012782