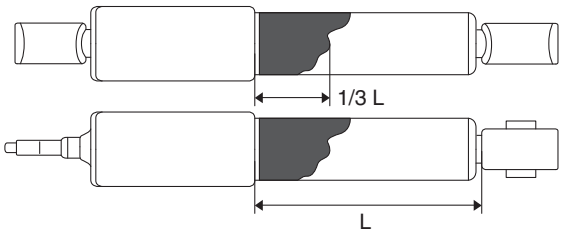
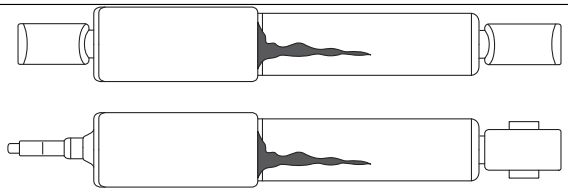
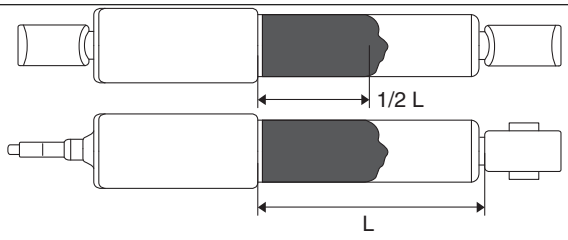
## REAR SHOCK ABSORBER INSPECTION [REAR BRAKE (DRUM)]

id0214c9128900

1. Remove the rear shock absorber. (See REAR SHOCK ABSORBER REMOVAL/INSTALLATION [REAR BRAKE (DRUM)].)
2. Inspect the rear shock absorber for damage or oil leakage.
   - If there is any malfunction, replace the rear shock absorber. (See REAR SHOCK ABSORBER REMOVAL/INSTALLATION [REAR BRAKE (DRUM)].)
3. Compress and extend the rear shock absorber piston rod at least three times at a steady rate. From the fourth compression stroke, verify that the operational force does not change and that there is no unusual noise.
   - If there is any malfunction, replace the rear shock absorber. (See REAR SHOCK ABSORBER REMOVAL/INSTALLATION [REAR BRAKE (DRUM)].)
4. Remove the wheel and tire.
5. Remove the rear shock absorber. (See REAR SHOCK ABSORBER REMOVAL/INSTALLATION [REAR BRAKE (DRUM)].)
6. Inspect the rear shock absorber for damage.
   - If there is any malfunction, replace the rear shock absorber. (See REAR SHOCK ABSORBER REMOVAL/INSTALLATION [REAR BRAKE (DRUM)].)
7. Inspect the rear shock absorber for oil leakage and if there is any malfunction, replace the rear shock absorber. (See REAR SHOCK ABSORBER REMOVAL/INSTALLATION [REAR BRAKE (DRUM)].)

**Caution**

- **Even if there is no oil leakage, there may be gas leakage or internal part damage. Gas leakage and internal part damage cause a lowered vehicle height, unstable vehicle movement, or abnormal noise. Perform the stroke inspection and verify that there is no malfunction.**

| SYMPTOM | DETAIL | ACTION |
|---|---|---|
|  | **OIL STAIN BELOW DUST BOOT**<br>• Oil stain is below the dust boot as shown in the figure.<br>• The oil stain area is 1/3 of L or less.<br>**Note**<br>• The oil stain is not progressive because the area dampens and dries repeatedly.<br>• The damping function is operating normally. | Wipe off any dust or oil on the surface. |
|  | **OIL LEAKAGE RUNS DOWN IN STRIP**<br>• Oil is running down in a strip along the side of the rear shock absorber as shown in the figure. | Replace the rear shock absorber. (See REAR SHOCK ABSORBER REMOVAL/INSTALLATION [REAR BRAKE (DRUM)].) |
|  | **OIL LEAKAGE BELOW DUST BOOT**<br>• The oil leakage area is 1/2 of L or more as shown in the figure. | |

8. Expand and contract the rear shock absorber piston rod 3 times or more at a certain speed and after the 4th time verify that the weight in a full stroke is constant with no abnormal response and noise.
   - If there is any malfunction, replace the rear shock absorber. (See REAR SHOCK ABSORBER REMOVAL/INSTALLATION [REAR BRAKE (DRUM)].)