
FRONT WHEEL HUB BOLT REPLACEMENT


id031100800200

1. Remove the front brake caliper component and suspend it out of the way using a cable. (See WHEEL HUB, STEERING KNUCKLE REMOVAL/INSTALLATION.)
2. Remove the front disc plate.
3. Remove the front wheel hub bolt using the **SST** as shown in the figure.
4. Place a new front wheel hub bolt in the wheel hub.

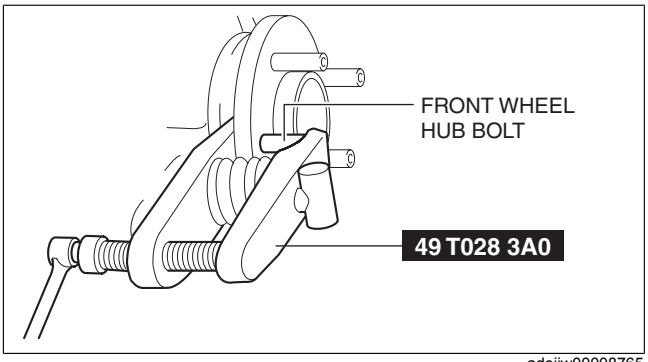

adejjw00008765

5. Install the front wheel hub bolt by placing an appropriate-sized washer on the wheel hub and tightening the wheel nut as shown in the figure.

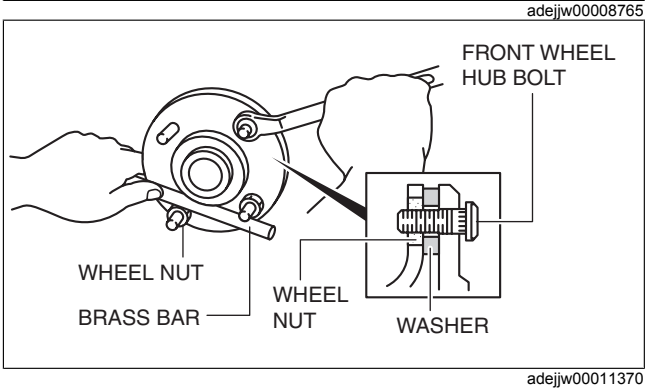

adejjw00011370