
REAR WHEEL HUB BOLT REPLACEMENT [REAR BRAKE (DISC)]


id0312a7800200

1. Remove the rear brake caliper component and suspend it out of the way using a cable. (See WHEEL HUB COMPONENT REMOVAL/INSTALLATION [REAR BRAKE (DISC)].)
2. Remove the rear disc plate. (See WHEEL HUB COMPONENT REMOVAL/INSTALLATION [REAR BRAKE (DISC)].)
3. Remove the rear wheel hub bolt using the **SST** as shown in the figure.
4. Place a new rear wheel hub bolt in the wheel hub component.

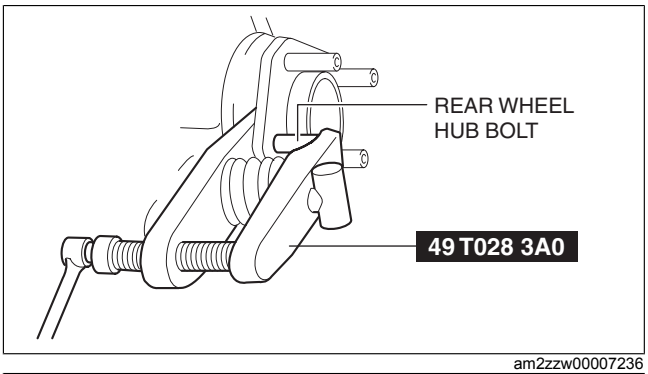

am2zzw00007236

5. Install the rear wheel hub bolt by placing an appropriate-sized washer on the wheel hub component and tightening the wheel nut as shown in the figure.

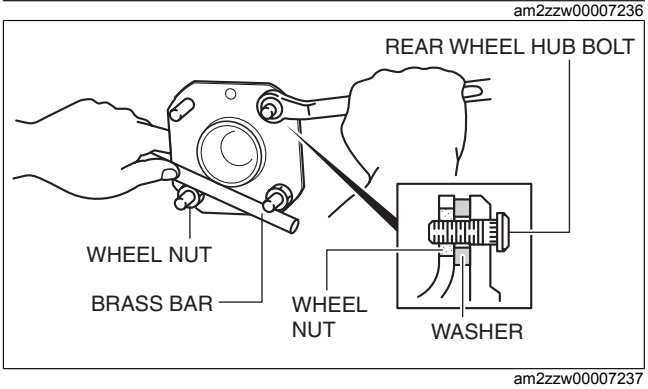

am2zzw00007237