WHEEL HUB COMPONENT INSPECTION [REAR BRAKE (DISC)]


id0312a7800300

Rear Wheel Bearing Excessive Play Inspection

1. Remove the rear brake caliper component and suspend it out of the way using a cable. (See WHEEL HUB COMPONENT REMOVAL/INSTALLATION [REAR BRAKE (DISC)].)
2. Remove the rear disc plate. (See WHEEL HUB COMPONENT REMOVAL/INSTALLATION [REAR BRAKE (DISC)].)
3. Install the magnetic base and dial gauge as shown in the figure and measure the rear wheel bearing axial excessive play.

   Rear wheel bearing maximum play [Rear brake (disc)]
   0.05 mm {0.002 in}

   - If it exceeds the maximum specification, replace the wheel hub component. (See WHEEL HUB COMPONENT REMOVAL/INSTALLATION [REAR BRAKE (DISC)].)

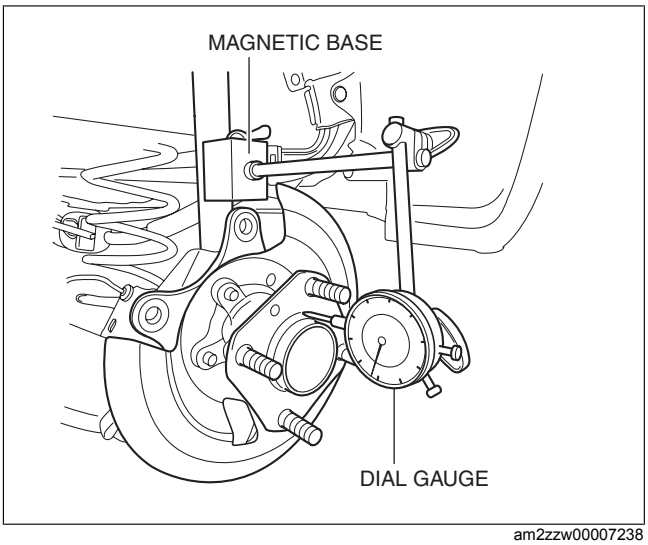

am2zzw00007238