
REAR WHEEL HUB BOLT REPLACEMENT [REAR BRAKE (DRUM)]


id0312a8800200

1. Remove the rear brake drum. (See REAR BRAKE (DRUM) REMOVAL/INSTALLATION.)
2. Remove the rear wheel hub bolt using the **SST** as shown in the figure.
3. Place a new rear wheel hub bolt in the wheel hub component.

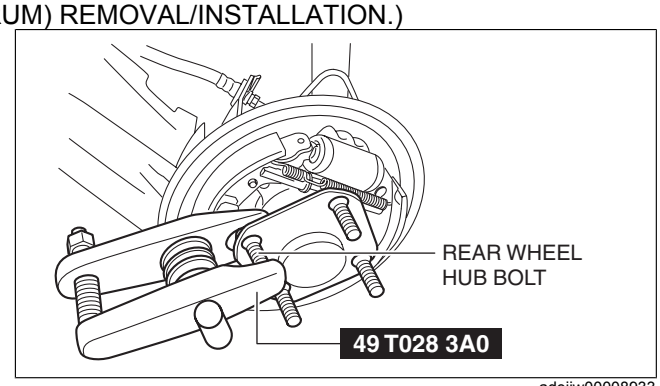

adejjw00008933

4. Install the rear wheel hub bolt by placing an appropriate-sized washer on the wheel hub component and tightening the wheel nut as shown in the figure.

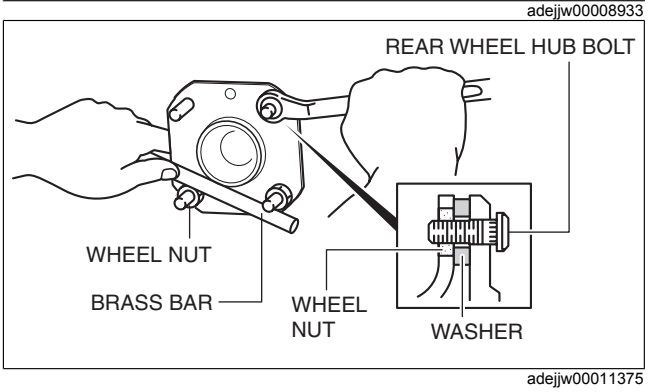

adejjw00011375