WHEEL HUB COMPONENT INSPECTION [REAR BRAKE (DRUM)]


id0312a8800300

Rear Wheel Bearing Excessive Play Inspection

1. Remove the rear brake drum. (See REAR BRAKE (DRUM) REMOVAL/INSTALLATION.)
2. Install the magnetic base and dial gauge as shown in the figure and measure the rear wheel bearing axial excessive play.

   Rear wheel bearing maximum play [Rear brake (drum)]
   0.05 mm {0.002 in}

   - If it exceeds the maximum specification, replace the wheel hub component. (See WHEEL HUB COMPONENT REMOVAL/INSTALLATION [REAR BRAKE (DRUM)].)

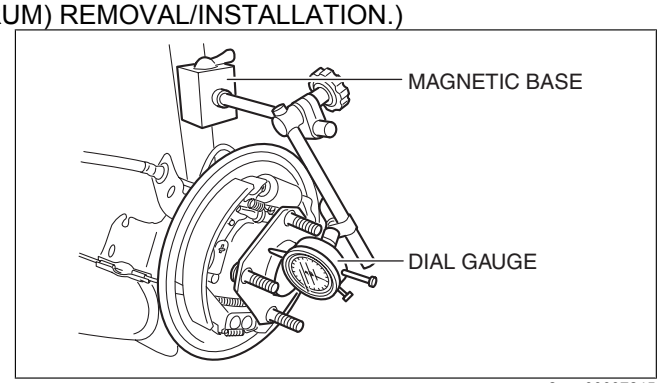

am2zzw00007245