
FRONT DRIVE SHAFT INSPECTION

id031300801200

1. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
2. Inspect the connections for any looseness.

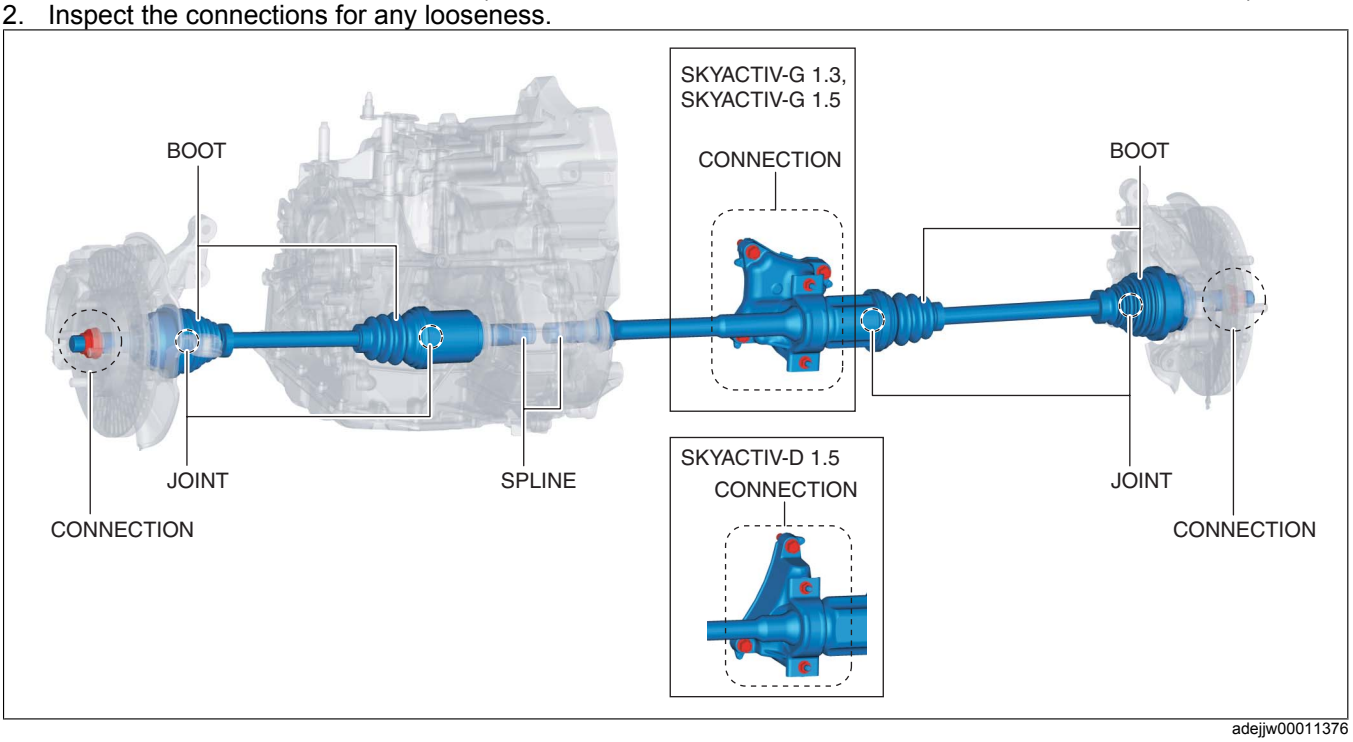

adejjw00011376

- If there is any malfunction, tighten or replace the applicable part. (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)

3. Inspect the boot for damage and cracks.
   - If there is any malfunction, replace the applicable part. (See FRONT DRIVE SHAFT (TRIPOD JOINT) DISASSEMBLY/ASSEMBLY.) (See FRONT DRIVE SHAFT (DOUBLE OFFSET JOINT) DISASSEMBLY/ASSEMBLY.)
4. Move the spline and joint up and down, left and right by hand and verify that there is no excessive play.
   - If there is any malfunction, replace the applicable part.(See FRONT DRIVE SHAFT (TRIPOD JOINT) DISASSEMBLY/ASSEMBLY.) (See FRONT DRIVE SHAFT (DOUBLE OFFSET JOINT) DISASSEMBLY/ASSEMBLY.)