

DTC C0040:64 [ABS HU/CM]

id040260877500


DTC	C0040:64	Brake switch
DETECTION CONDITION		• Brake switch ON signal is input for 6 min or more when driving at a vehicle speed of 20 km/h {12 mph} or more
FAIL-SAFE FUNCTION		Refer to DTC TABLE. (See DTC TABLE [ABS HU/CM].)
POSSIBLE CAUSE		• Open or short to GND circuit in wiring harness between IG1 relay and ABS HU/CM terminal Q • Open or short to power supply circuit in wiring harness between brake switch terminal D and PCM terminal 2G • Brake switch malfunction • PCM malfunction • Poor connection at each connector

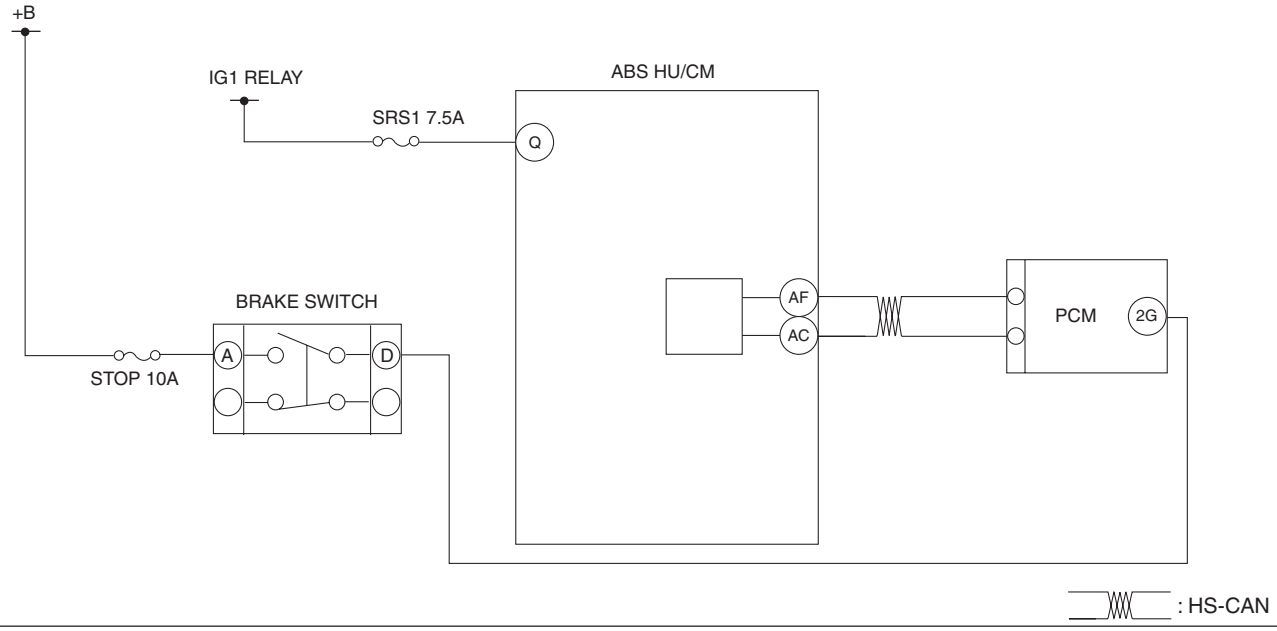


BRAKE SWITCH WIRING HARNESS-SIDE CONNECTOR

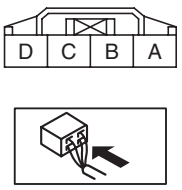

PCM WIRING HARNESS-SIDE CONNECTOR

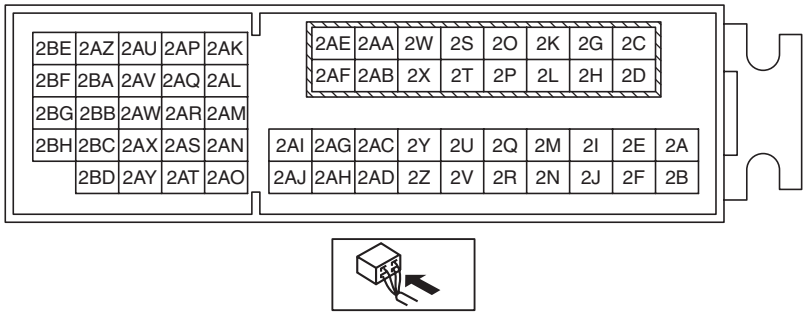

ABS HU/CM WIRING HARNESS-SIDE CONNECTOR

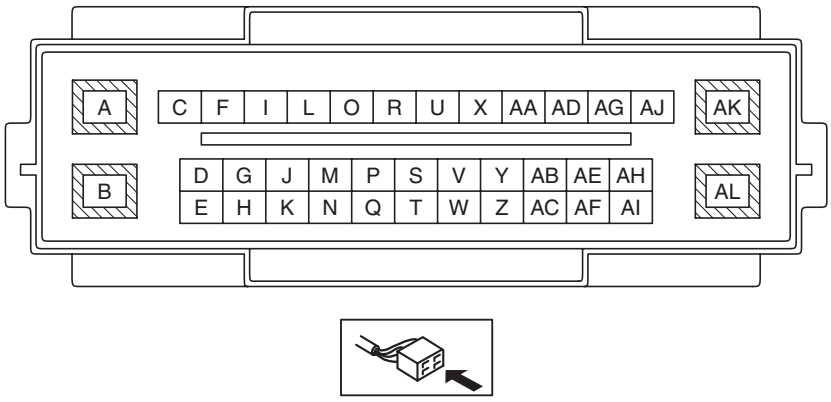

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT POWER SUPPLY CIRCUIT IN ABS HU/CM** • Switch the ignition OFF. • Disconnect the ABS HU/CM connector. • Measure the voltage between ABS HU/CM terminal Q (wiring harness-side) and body ground. • Is the voltage within followings? — Ignition switch OFF: 1 V or less — Ignition switch ON (engine off): B+	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between IG1 relay and ABS HU/CM terminal Q. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open or short circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open or short circuit. Go to Step7.
2	**INSPECT BRAKE SWITCH SIGNALCIRCUIT** • Measure the voltage between PCM terminal 2G (wiring harness-side)—body ground • Is the voltage within followings? — Brake pedal depressed: B+ — Brake pedal released: 1 V or less	Yes	Go to Step7.
		No	• If it is B+ under any condition, then go to the next step. • If it is 1 V or less under any condition, then go to Step 4
3	**INSPECT BRAKE SWITCH SIGNALCIRCUIT FOR SHORT TO POWER SUPPLY** • Disconnect the brake switch connector. • Measure the voltage between brake switch terminal D (wiring harness-side) and body ground. • Is the voltage **1 V or less**?	Yes	Go to Step5.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between brake switch terminal D and PCM terminal 2G. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to power supply. Go to Step7.
4	**INSPECT BRAKE SWITCH SIGNALCIRCUIT FOR OPEN CIRCUIT** • Disconnect the PCM connector. • Inspect for continuity between brake switch terminal D (wiring harness-side) and PCM terminal 2G. • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between brake switch terminal D and PCM terminal 2G. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step7.
5	**INSPECT BRAKE SWITCH** • Inspect brake switch. (See BRAKE SWITCH INSPECTION.) • Is the brake switch normal?	Yes	Go to the next step.
		No	Replace the brake switch, then go to Step7. (See BRAKE PEDAL REMOVAL/INSTALLATION [L.H.D.].) (See BRAKE PEDAL REMOVAL/INSTALLATION [R.H.D.].)
6	**VERIFY PCM DTC** • Using the M-MDS, perform the PCM DTC inspection. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Are any DTCs present?	Yes	Go to applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) DTC troubleshooting completed, then go to the next step.
		No	Go to the next step.

Step	Inspection		Action
7	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Reconnect all disconnected connectors. • Using the M-MDS, clear the DTC from the ABS HU/CM. (See CLEARING DTC [ABS HU/CM].) • Start the engine and drive the vehicle at 10 km/h {6.2 mph} or more. • Using the M-MDS, perform the ABS HU/CM DTC inspection. (See DTC INSPECTION [ABS HU/CM].) • Is the same DTC present?	Yes	Repeat the inspection from Step1. If the malfunction recurs, replace the ABS HU/CM, then go to the next step. (See ABS HU/CM REMOVAL/INSTALLATION [L.H.D.].) (See ABS HU/CM REMOVAL/INSTALLATION [R.H.D.].)
		No	Go to the next step.
8	**VERIFY NO DTC IS PRESENT** • Are any DTCs present?	Yes	Go to applicable DTC inspection. (See DTC TABLE [ABS HU/CM].)
		No	DTC troubleshooting completed.