
DTC C1109:64 [DSC HU/CM]

id040262878700

DTC	C1109:64	DSC OFF switch
DETECTION CONDITION		• Continuous ON signal from the DSC OFF switch for 10 s or more is detected
FAIL-SAFE FUNCTION		Refer to DTC TABLE. (See DTC TABLE [DSC HU/CM].)
POSSIBLE CAUSE		• The DSC OFF switch is pressed and held for 10 s or more • Open or short to GND circuit in wiring harness between instrument cluster terminal 1V and DSC OFF switch terminal B • Open or short to GND circuit in wiring harness between instrument cluster terminal 1A and DSC OFF switch terminal C • DSC OFF switch malfunction • Poor connection at each connector

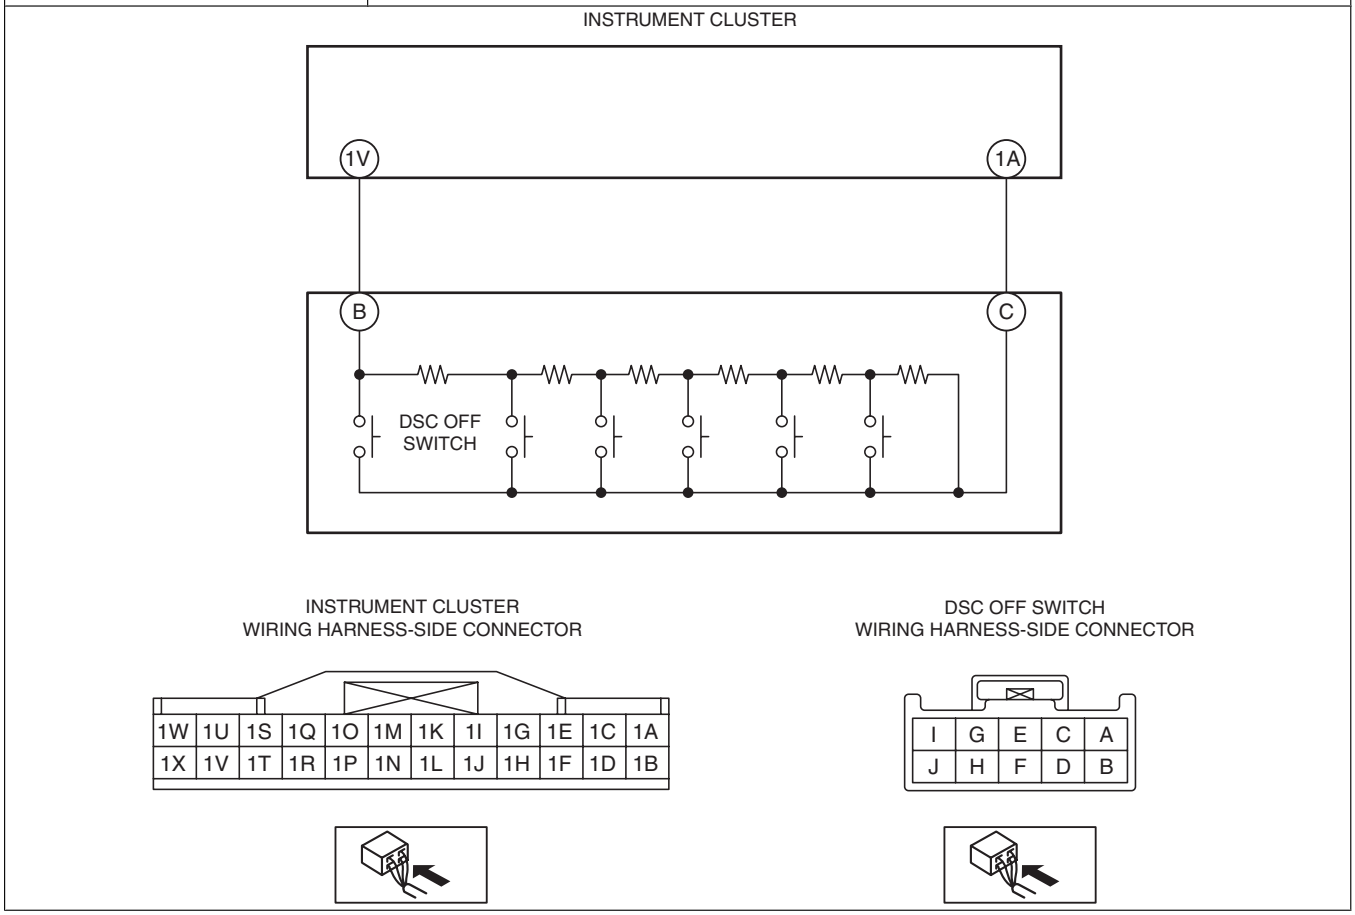

Diagnostic Procedure

Step	Inspection		Action
1	**VERIFY INSTRUMENT CLUSTER DTC** • Using the M-MDS, perform the instrument cluster DTC inspection. (See DTC INSPECTION [INSTRUMENT CLUSTER].) • Are any DTCs present?	Yes	Go to applicable DTC inspection. (See DTC TABLE [INSTRUMENT CLUSTER].) DTC troubleshooting completed, then go to the next step.
		No	Go to the next step.

Step	Inspection		Action
2	**INSPECT DSC OFF SWITCH SIGNAL CIRCUIT FOR SHORT TO GROUND** • Switch the ignition OFF. • Disconnect the instrument cluster connector. • Inspect for continuity as followings: — Instrument cluster terminal 1V (wiring harness-side)—body ground — Instrument cluster terminal 1A (wiring harness-side)—body ground • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector in the followings: • Instrument cluster terminal 1V—DSC OFF switch terminal B • Instrument cluster terminal 1A—DSC OFF switch terminal C **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to Step5.
		No	Go to the next step.
3	**INSPECT DSC OFF SWITCH SIGNAL CIRCUIT FOR OPEN CIRCUIT** • Switch the ignition OFF. • Disconnect the instrument cluster connector. • Disconnect the DSC OFF switch connector. • Inspect for continuity as followings: — Instrument cluster terminal 1V (wiring harness-side)—DSC OFF switch terminal B (wiring harness-side) — Instrument cluster terminal 1A (wiring harness-side)—DSC OFF switch terminal C (wiring harness-side) • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector in the followings: • Instrument cluster terminal 1V—DSC OFF switch terminal B • Instrument cluster terminal 1A—DSC OFF switch terminal C **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step5.
4	**INSPECT DSC OFF SWITCH** • Inspect DSC OFF switch. (See DSC OFF SWITCH INSPECTION.) • Is the DSC OFF switch normal?	Yes	Go to the next step.
		No	Replace the DSC OFF switch, then go to the next step. (See DSC OFF SWITCH REMOVAL/INSTALLATION.)
5	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Reconnect all disconnected connectors. • Using the M-MDS, clear the DTC from the DSC HU/CM. (See CLEARING DTC [DSC HU/CM].) • Using the M-MDS, perform the DSC HU/CM DTC inspection. (See DTC INSPECTION [DSC HU/CM].) • Is the same DTC present?	Yes	Repeat the inspection from Step1. If the malfunction recurs, replace the DSC HU/CM, then go to the next step. (See DSC HU/CM REMOVAL/INSTALLATION [L.H.D.].) (See DSC HU/CM REMOVAL/INSTALLATION [R.H.D.].)
		No	Go to the next step.
6	**VERIFY NO DTC IS PRESENT** • Are any DTCs present?	Yes	Go to applicable DTC inspection. (See DTC TABLE [DSC HU/CM].)
		No	DTC troubleshooting completed.