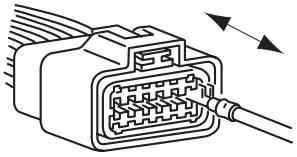
NO.1 ANY OF THE FOLLOWING LIGHTS ARE NOT ILLUMINATED WITH THE IGNITION SWITCHED ON: (ABS WARNING LIGHT, BRAKE SYSTEM WARNING LIGHT, TCS/DSC INDICATOR LIGHT AND/OR DSC OFF INDICATOR LIGHT) [DYNAMIC STABILITY CONTROL (DSC)]

id0403b2896900

1	**Any of the following lights are not illuminated with the ignition switched ON: (ABS warning light, brake system warning light, TCS/DSC indicator light and/or DSC OFF indicator light)**
POSSIBLE CAUSE	• DSC HU/CM does not operate. • Communication error between DSC HU/CM and instrument cluster • DSC HU/CM internal malfunction • Instrument cluster malfunction

Diagnostic procedure

STEP	INSPECTION		ACTION
1	**CONFIRM DSC HU/CM DTC** • Retrieve the DSC HU/CM DTC using the M-MDS. (See DTC INSPECTION [DSC HU/CM].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC INSPECTION [DSC HU/CM].)
		No	Go to the next step.
2	**VERIFY WHETHER MALFUNCTION IS INSTRUMENT CLUSTER OR ELSEWHERE** • Switch the ignition ON. • Are other warning and indicator lights illuminated?	Yes	Go to the next step.
		No	Inspect the instrument cluster for power supply and ground circuit. (See INSTRUMENT CLUSTER INSPECTION.) • If there is a malfunction, repair or replace any malfunctioning parts according to the inspection result. (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.)
3	**INSPECT CONNECTION OF DSC HU/CM CONNECTOR** • Inspect connection of the DSC HU/CM connector. • Is the DSC HU/CM connector connected securely?	Yes	Go to the next step.
		No	Connect the DSC HU/CM connector securely, then go to the next step.
4	**INSPECT CONNECTION OF CONNECTOR TERMINAL** • Is there a poor connection in the DSC HU/CM, instrument cluster, or related-connector terminal?  INSERT MALE TERMINAL INTO MATCHING SHAPE OF FEMALE TERMINAL AND CHECK FOR EXCESSIVE PLAY	Yes	Repair the poor connection location of the terminal.
		No	Go to the next step.
5	**VERIFY DTC FOR CAN SYSTEM WIRING HARNESS** • Retrieve the DSC HU/CM DTC using the M-MDS. (See DTC INSPECTION [DSC HU/CM].) • Is the DTC U0001:88 present?	Yes	Go to the next step.
		No	Inspect the instrument cluster. (See INSTRUMENT CLUSTER INSPECTION.) • If there is malfunction, replace the instrument cluster. (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.)
6	**VERIFY DTC FOR MODULE COMMUNICATION** • Retrieve the DSC HU/CM DTC using the M-MDS. (See DTC INSPECTION [DSC HU/CM].) • Is the DTC U0100:00, U0101:00, U0104:00, AU0131:00, U0154:00, AU0155:00, U0214:00 or U0235:00 present?	Yes	Go to the applicable DTC inspection. (Communication error between each module (CAN)) (See DTC U0001:88/U0100:00/U0101:00/U0131:00/U0151:00/U0155:00/U0235:00 [DSC HU/CM].)
		No	Inspect the instrument cluster. (See INSTRUMENT CLUSTER INSPECTION.) • If there is malfunction, replace the instrument cluster. (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.))