
CONVENTIONAL BRAKE SYSTEM LOCATION INDEX

id041100800100


Vehicle Front Side (L.H.D.)

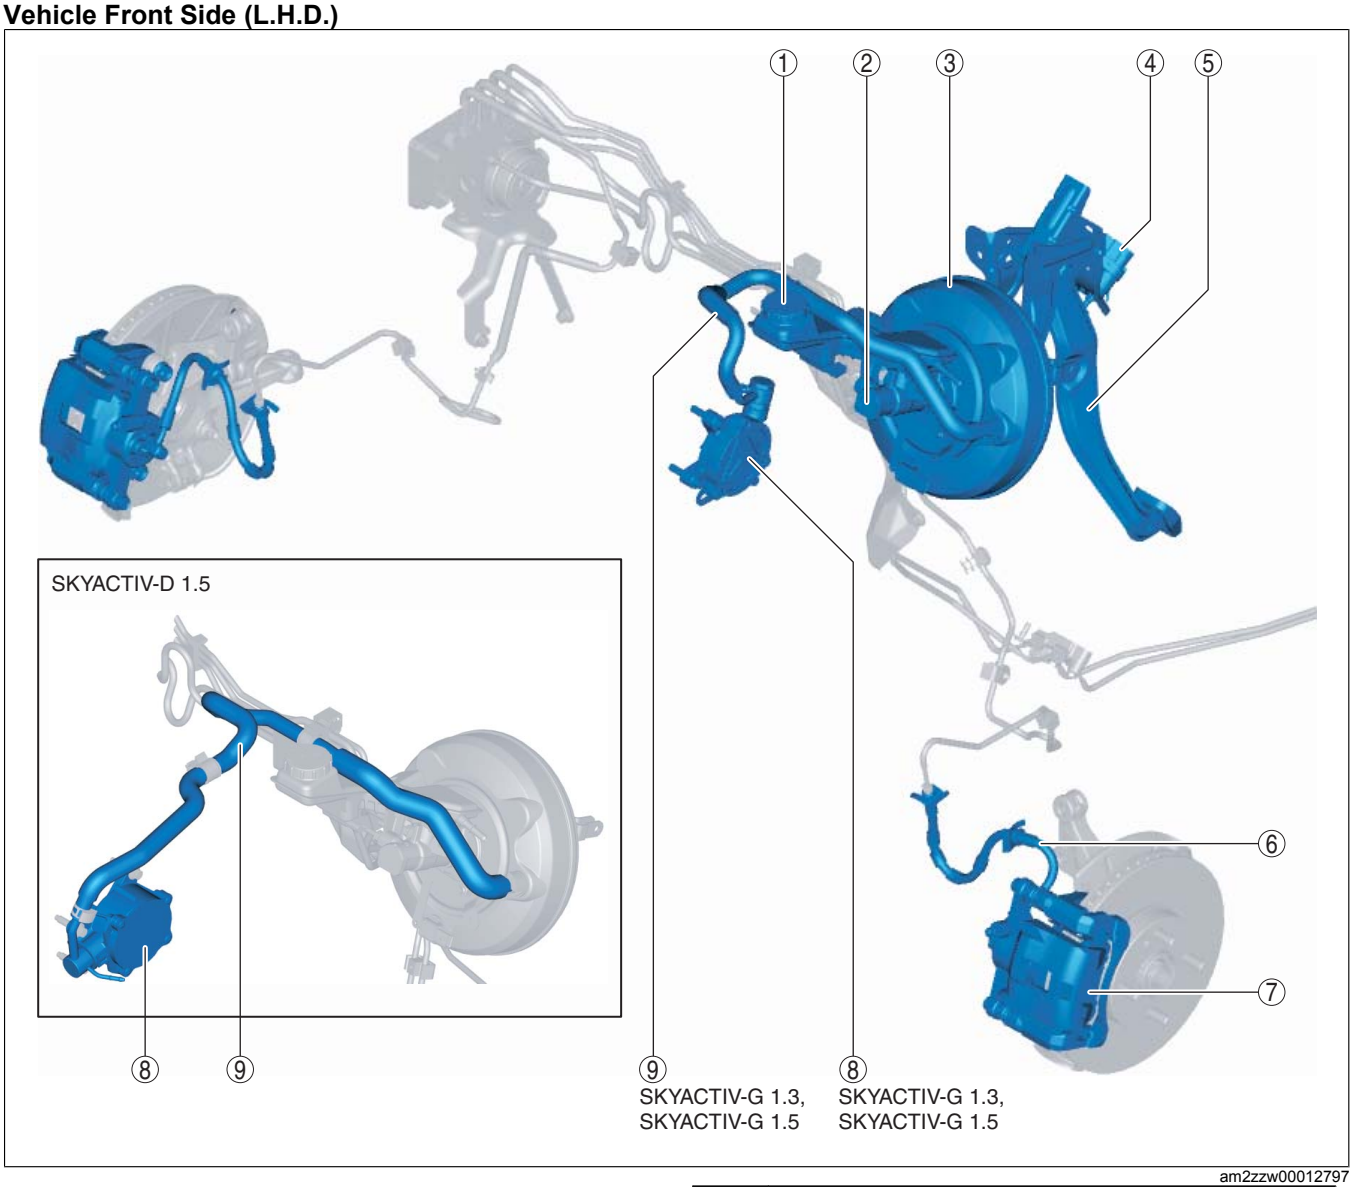

am2zzw00012797

1	Brake fluid (See BRAKE FLUID INSPECTION.) (See BRAKE FLUID AIR BLEEDING.)
2	Master cylinder (See MASTER CYLINDER REMOVAL/INSTALLATION [L.H.D.].) (See BRAKE FLUID LEVEL SENSOR INSPECTION.)
3	Power brake unit (See POWER BRAKE UNIT INSPECTION.) (See POWER BRAKE UNIT REMOVAL/INSTALLATION [L.H.D.].)
4	Brake switch (See BRAKE SWITCH INSPECTION.)
5	Brake pedal (See BRAKE PEDAL INSPECTION.) (See BRAKE PEDAL REMOVAL/INSTALLATION [L.H.D.].)
6	Front brake hose (See BRAKE HOSE (FRONT) REMOVAL/INSTALLATION.)
7	Front brake (disc) (See FRONT BRAKE (DISC) INSPECTION.) (See FRONT BRAKE (DISC) REMOVAL/INSTALLATION.) (See DISC PAD (FRONT) REPLACEMENT.) (See CALIPER (FRONT) DISASSEMBLY/ASSEMBLY.)
8	Vacuum pump (See VACUUM PUMP INSPECTION.) (See VACUUM PUMP REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See VACUUM PUMP REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
9	Vacuum line (See VACUUM LINE INSPECTION.) (See VACUUM HOSE REMOVAL/INSTALLATION [L.H.D.].)

Vehicle Front Side (R.H.D.)

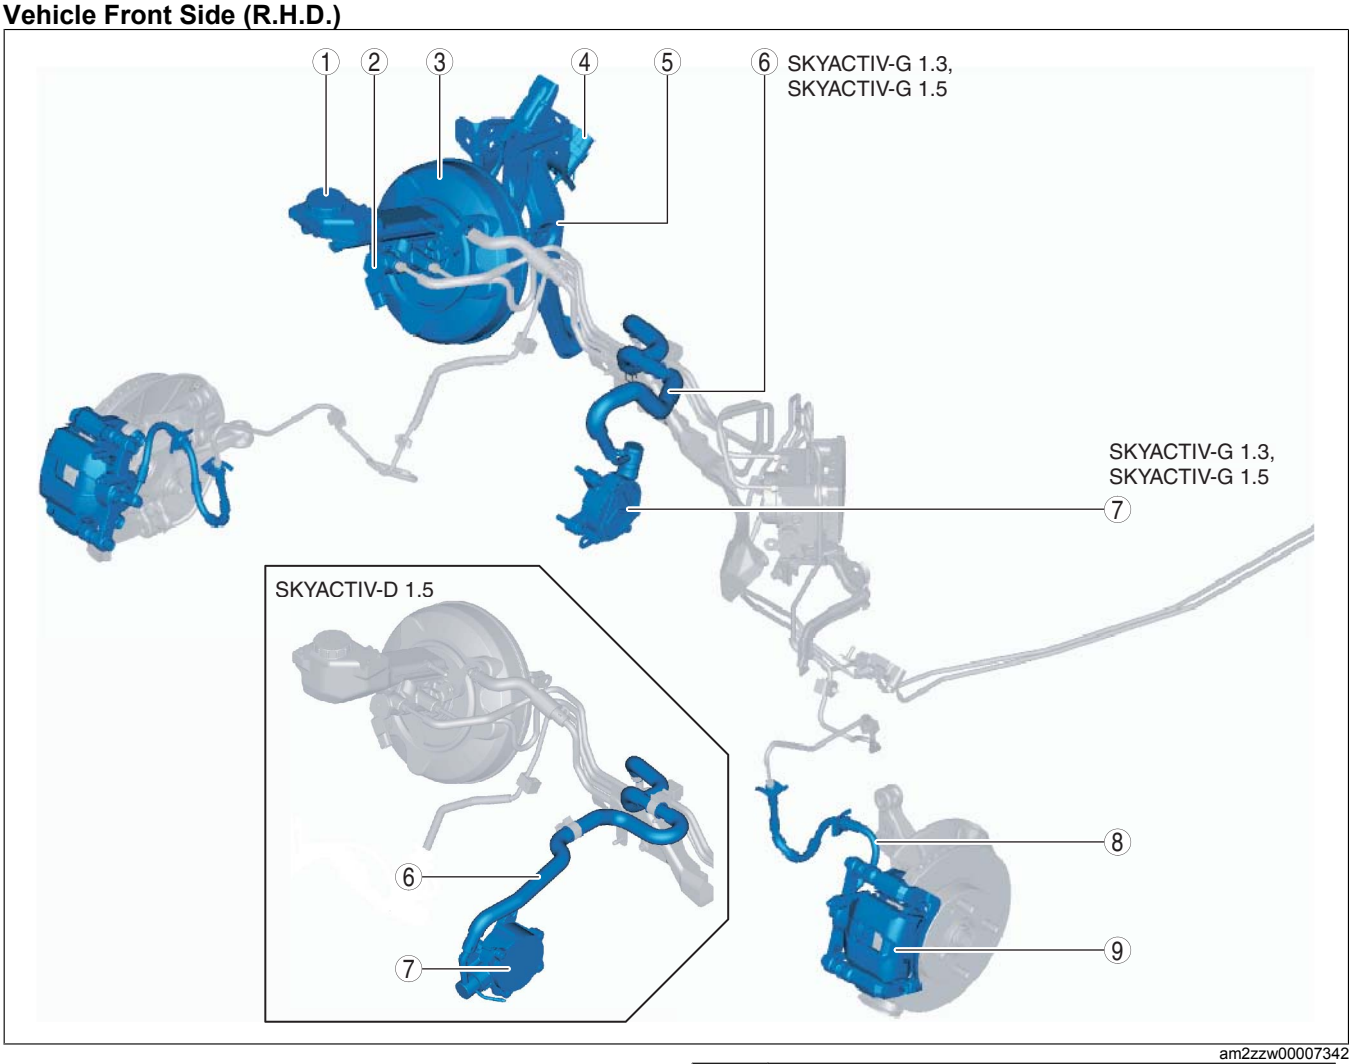


am2zzw00007342

1	Brake fluid (See BRAKE FLUID INSPECTION.) (See BRAKE FLUID AIR BLEEDING.)
2	Master cylinder (See MASTER CYLINDER REMOVAL/ INSTALLATION [R.H.D.].) (See BRAKE FLUID LEVEL SENSOR INSPECTION.)
3	Power brake unit (See POWER BRAKE UNIT INSPECTION.) (See POWER BRAKE UNIT REMOVAL/ INSTALLATION [R.H.D. (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].) (See POWER BRAKE UNIT REMOVAL/ INSTALLATION [R.H.D. (SKYACTIV-D 1.5)].)
4	Brake switch (See BRAKE SWITCH INSPECTION.)
5	Brake pedal (See BRAKE PEDAL INSPECTION.) (See BRAKE PEDAL REMOVAL/INSTALLATION [R.H.D.].)

6	Vacuum line (See VACUUM LINE INSPECTION.) (See VACUUM HOSE REMOVAL/INSTALLATION [R.H.D.].)
7	Vacuum pump (See VACUUM PUMP INSPECTION.) (See VACUUM PUMP REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See VACUUM PUMP REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
8	Front brake hose (See BRAKE HOSE (FRONT) REMOVAL/ INSTALLATION.)
9	Front brake (disc) (See FRONT BRAKE (DISC) INSPECTION.) (See FRONT BRAKE (DISC) REMOVAL/ INSTALLATION.) (See DISC PAD (FRONT) REPLACEMENT.) (See CALIPER (FRONT) DISASSEMBLY/ ASSEMBLY.)

Vehicle Rear Side

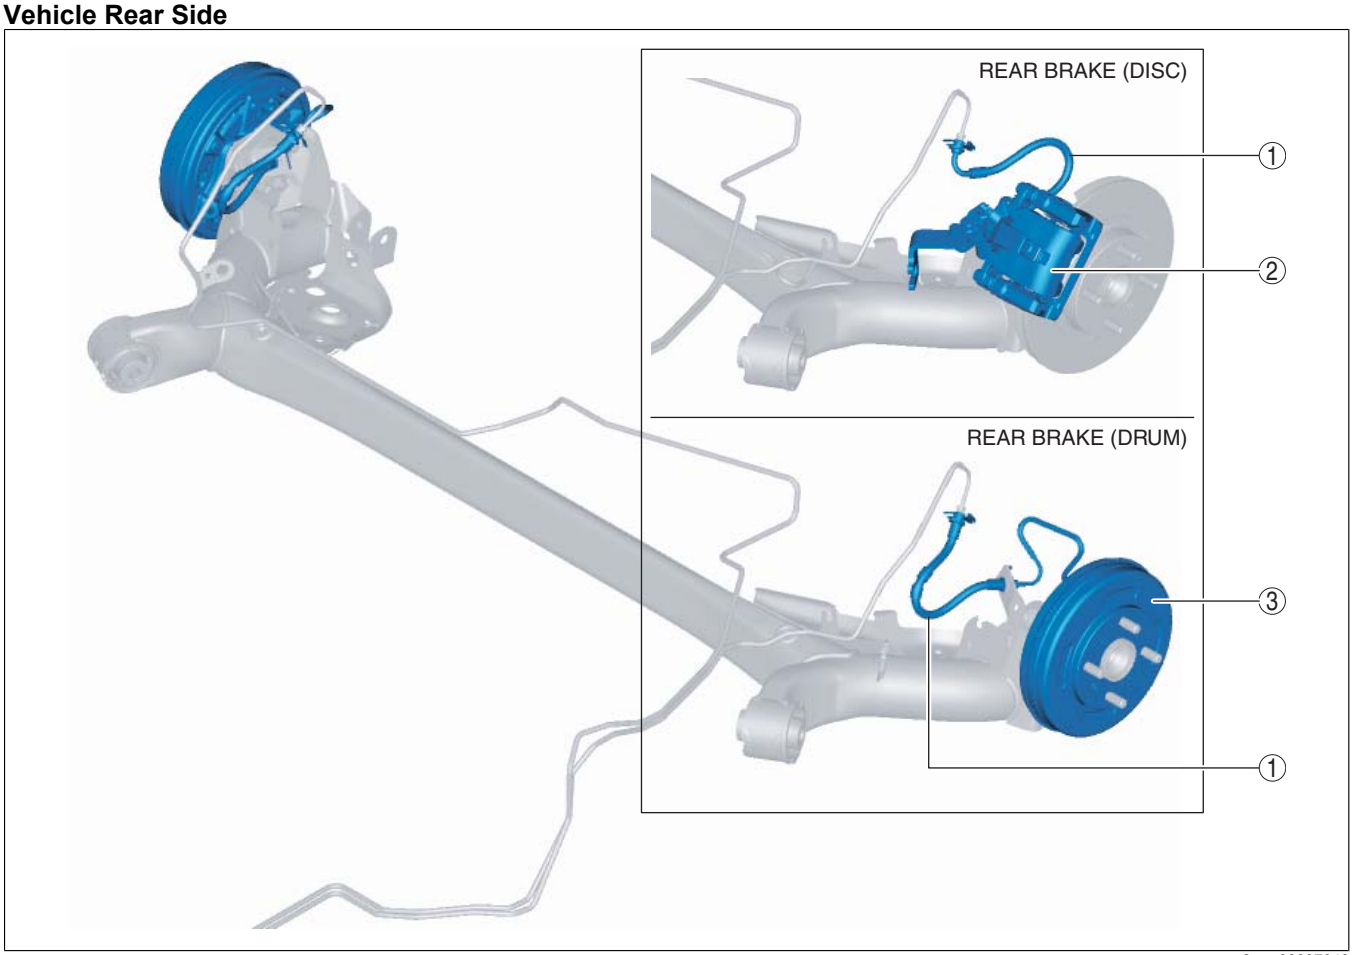

am2zzw00007343

1	Rear brake hose (See BRAKE HOSE (REAR) REMOVAL/ INSTALLATION.)
2	Rear brake (disc) (See REAR BRAKE (DISC) INSPECTION.) (See REAR BRAKE (DISC) REMOVAL/ INSTALLATION.) (See DISC PAD (REAR) REPLACEMENT.) (See CALIPER (REAR) DISASSEMBLY/ ASSEMBLY.)

3	Rear brake (drum) (See REAR BRAKE (DRUM) INSPECTION.) (See REAR BRAKE (DRUM) REMOVAL/ INSTALLATION.) (See WHEEL CYLINDER DISASSEMBLY/ ASSEMBLY.)