
REAR BRAKE (DISC) REMOVAL/INSTALLATION

id041100800500

1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.
3. After installation, add brake fluid, bleed the air, and inspect for fluid leakage. (See BRAKE FLUID AIR BLEEDING.)
4. Pump the brake pedal a few times and inspect the following:
   - — The disc pad projection is securely installed to the piston groove
   - — Parking brake lever stroke
   - — Brake drag

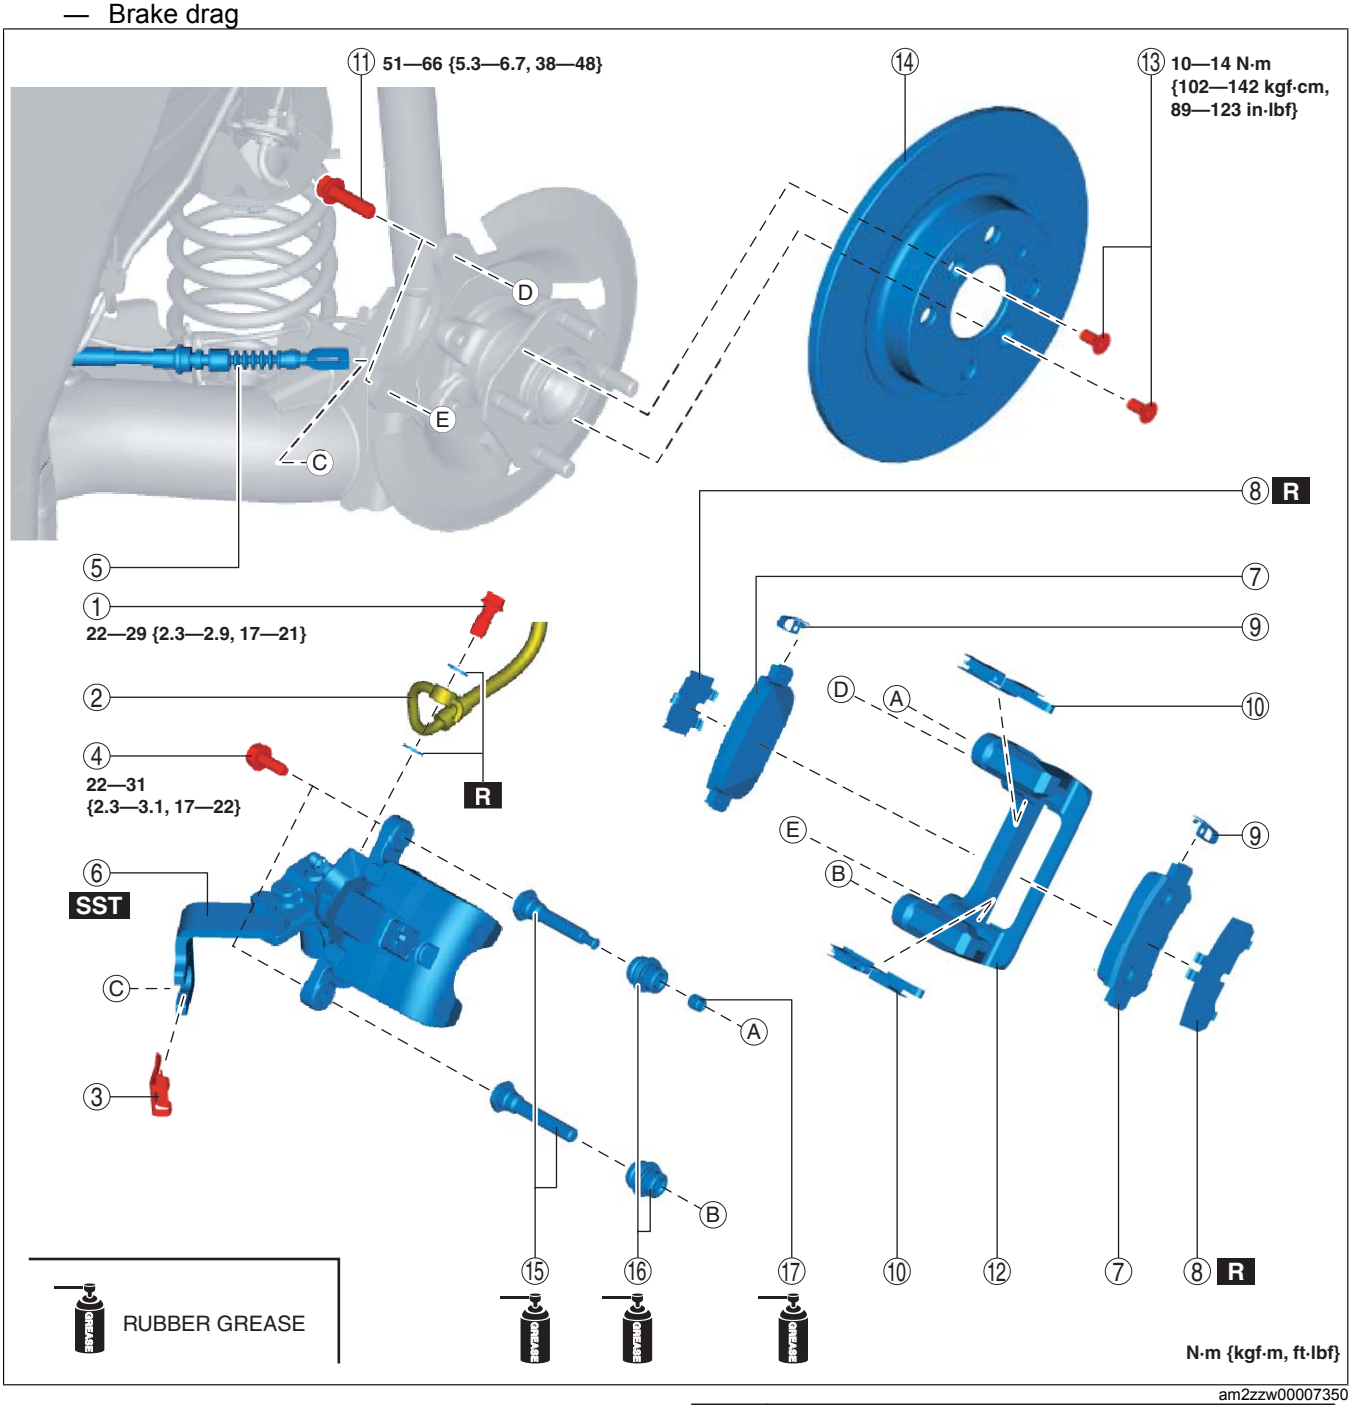

am2zzw00007350

1	Bolt
2	Brake hose
3	Clip
4	Bolt
5	Rear parking brake cable
6	Caliper (See Caliper Installation Note.)
7	Disc pad


8	Shim
9	Wear indicator
10	Guide plate
11	Bolt
12	Mounting support
13	Screw
14	Disc plate
15	Slide pin

16	Dust boot

17	Bushing

Caliper Installation Note

1. Clean the exposed area of the piston.
2. Rotate the piston clockwise slowly using the **SST** and push the piston completely until the piston grooves are in the position shown in the figure.
3. Install the caliper.

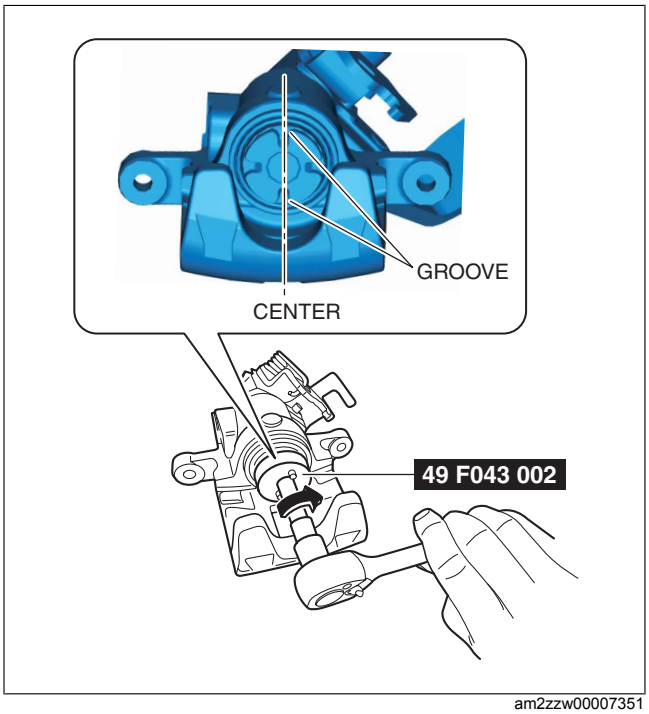

am2zzw00007351