
CALIPER (REAR) DISASSEMBLY/ASSEMBLY

id041100800600

1. Disassemble in the order indicated in the table.

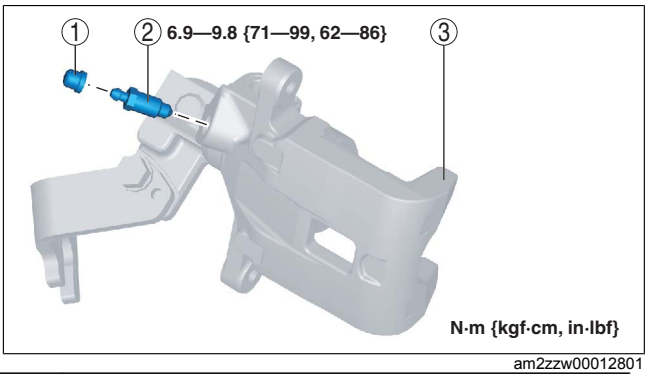

am2zzw00012801

1	Bleeder cap
2	Bleeder screw
3	Caliper body

2. Assemble in the reverse order of removal.