
BRAKE FLUID LEVEL SENSOR INSPECTION

id041100801400

1. Disconnect the brake fluid level sensor connector. (See MASTER CYLINDER REMOVAL/INSTALLATION [L.H.D.].) (See MASTER CYLINDER REMOVAL/INSTALLATION [R.H.D.].)
2. Verify that the continuity is as indicated in the table.
   - If not as indicated in the table, replace the master cylinder component. (See MASTER CYLINDER REMOVAL/INSTALLATION [L.H.D.].) (See MASTER CYLINDER REMOVAL/INSTALLATION [R.H.D.].)

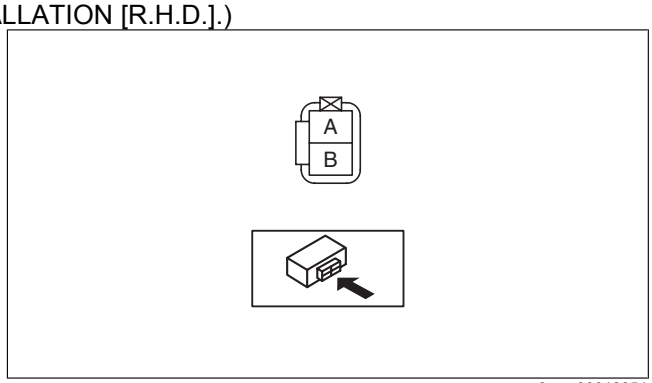

am3uuw00012851

○—○: Continuity

Condition	Terminal	
	A	**B**
Above MIN		
Below MIN	○	○

am3zzw00015878