
VACUUM HOSE REMOVAL/INSTALLATION [R.H.D.]


id041100801652

1. Detach the vacuum hose from the clip.
2. Remove the following parts:
   (1) Windshield wiper arm and blade (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
   (2) Cowl grille (See COWL GRILLE REMOVAL/INSTALLATION.)
   (3) Windshield wiper motor and link (See WINDSHIELD WIPER MOTOR AND LINK REMOVAL/INSTALLATION.)
   (4) Cowl panel (See COWL PANEL REMOVAL/INSTALLATION.)

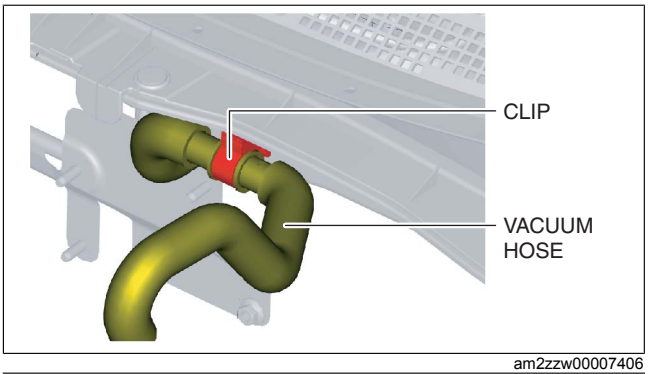


am2zzw00007406

3. Pinch open the clamps using pliers and remove the vacuum hose.

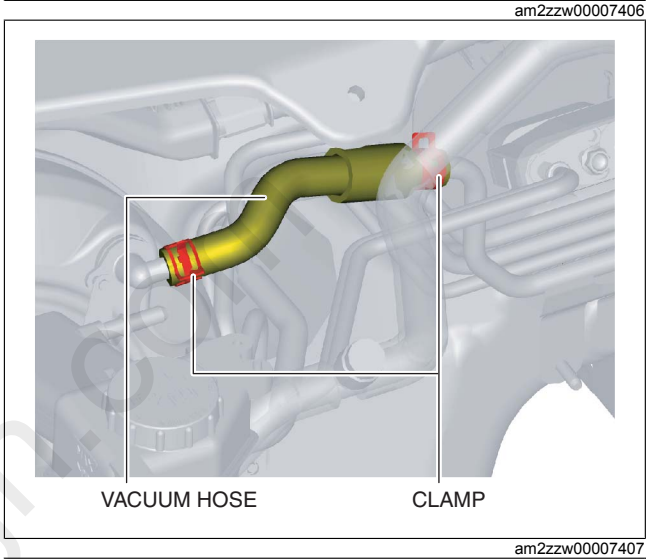


am2zzw00007407

4. Pinch open the clamp using pliers and disconnect the vacuum hose.

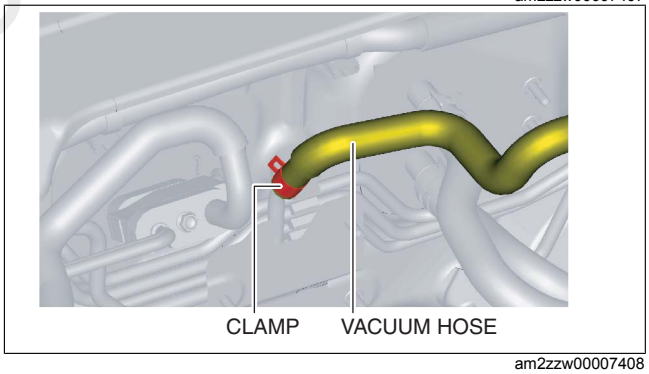

am2zzw00007408

5. For SKYACTIV-G 1.3 or SKYACTIV-G 1.5, perform the following procedure:
   (1) Pinch open the clamp using pliers and disconnect the vacuum hose.

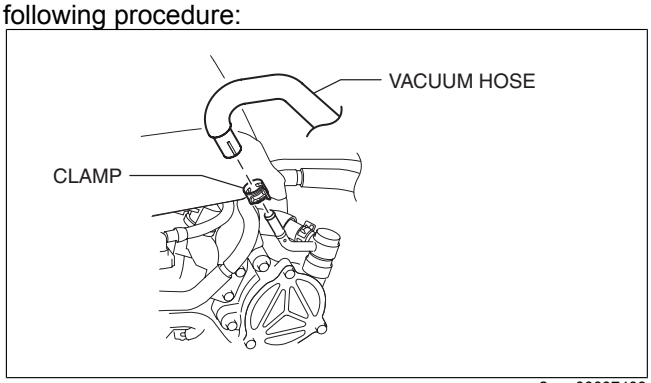


am2zzw00007409

6. For SKYACTIV-D 1.5, perform the following procedure:
   (1) Remove the engine cover. (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

cardiagn.com

(2) Detach the vacuum hose from the clip.
(3) Pinch open the clamp using pliers and disconnect the vacuum hose.

7. Remove the vacuum hose.
8. Install in the reverse order of removal. (See Vacuum Hose Installation Note.)

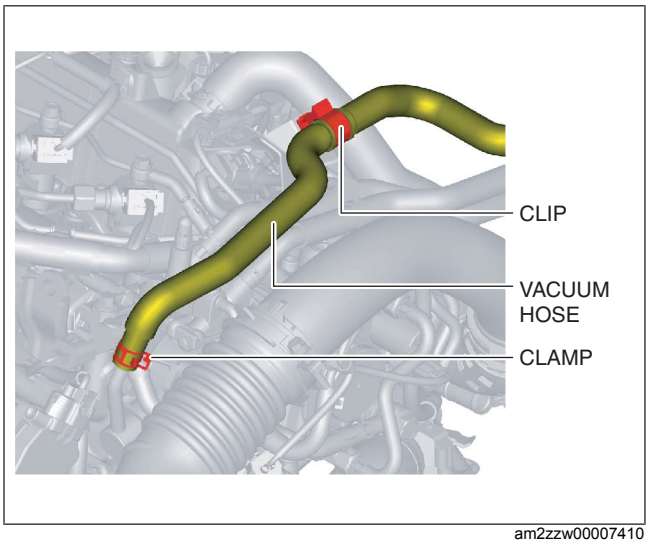


am2zzw00007410

Vacuum Hose Installation Note

1. Install the vacuum hose as shown in the figure.


cardiagn.com

SKYACTIV-G 1.3, SKYACTIV-G 1.5

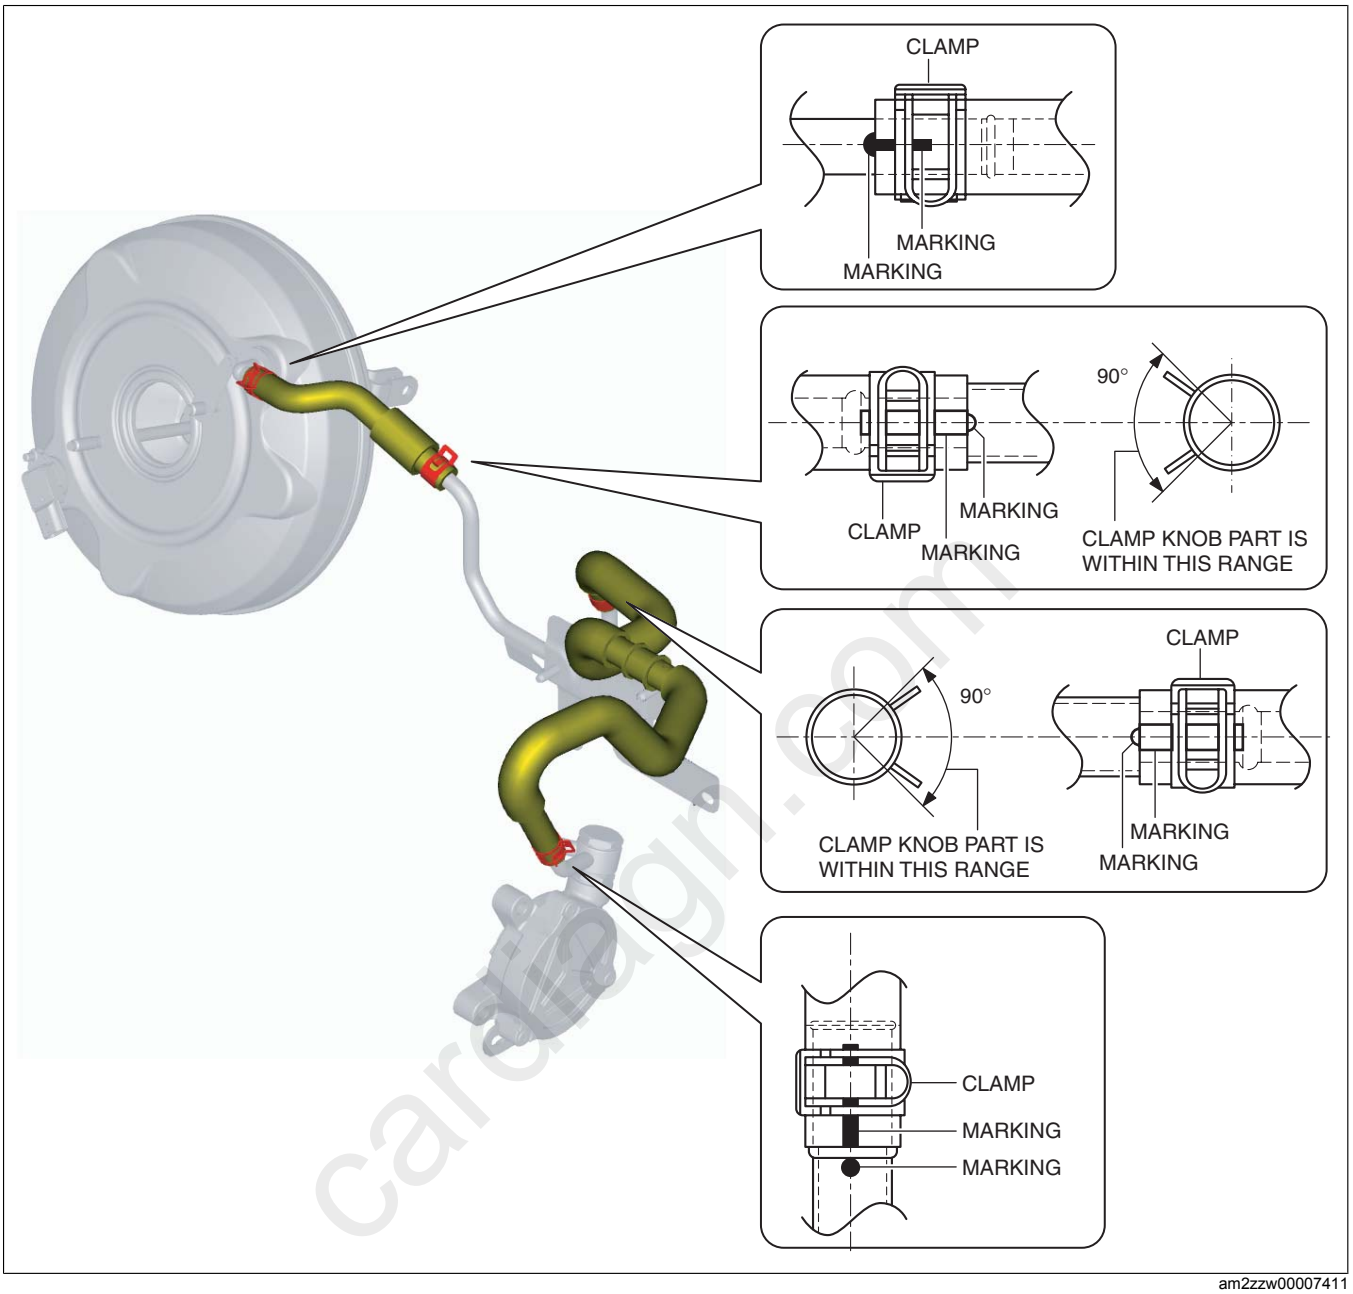

am2zzw00007411

SKYACTIV-D 1.5

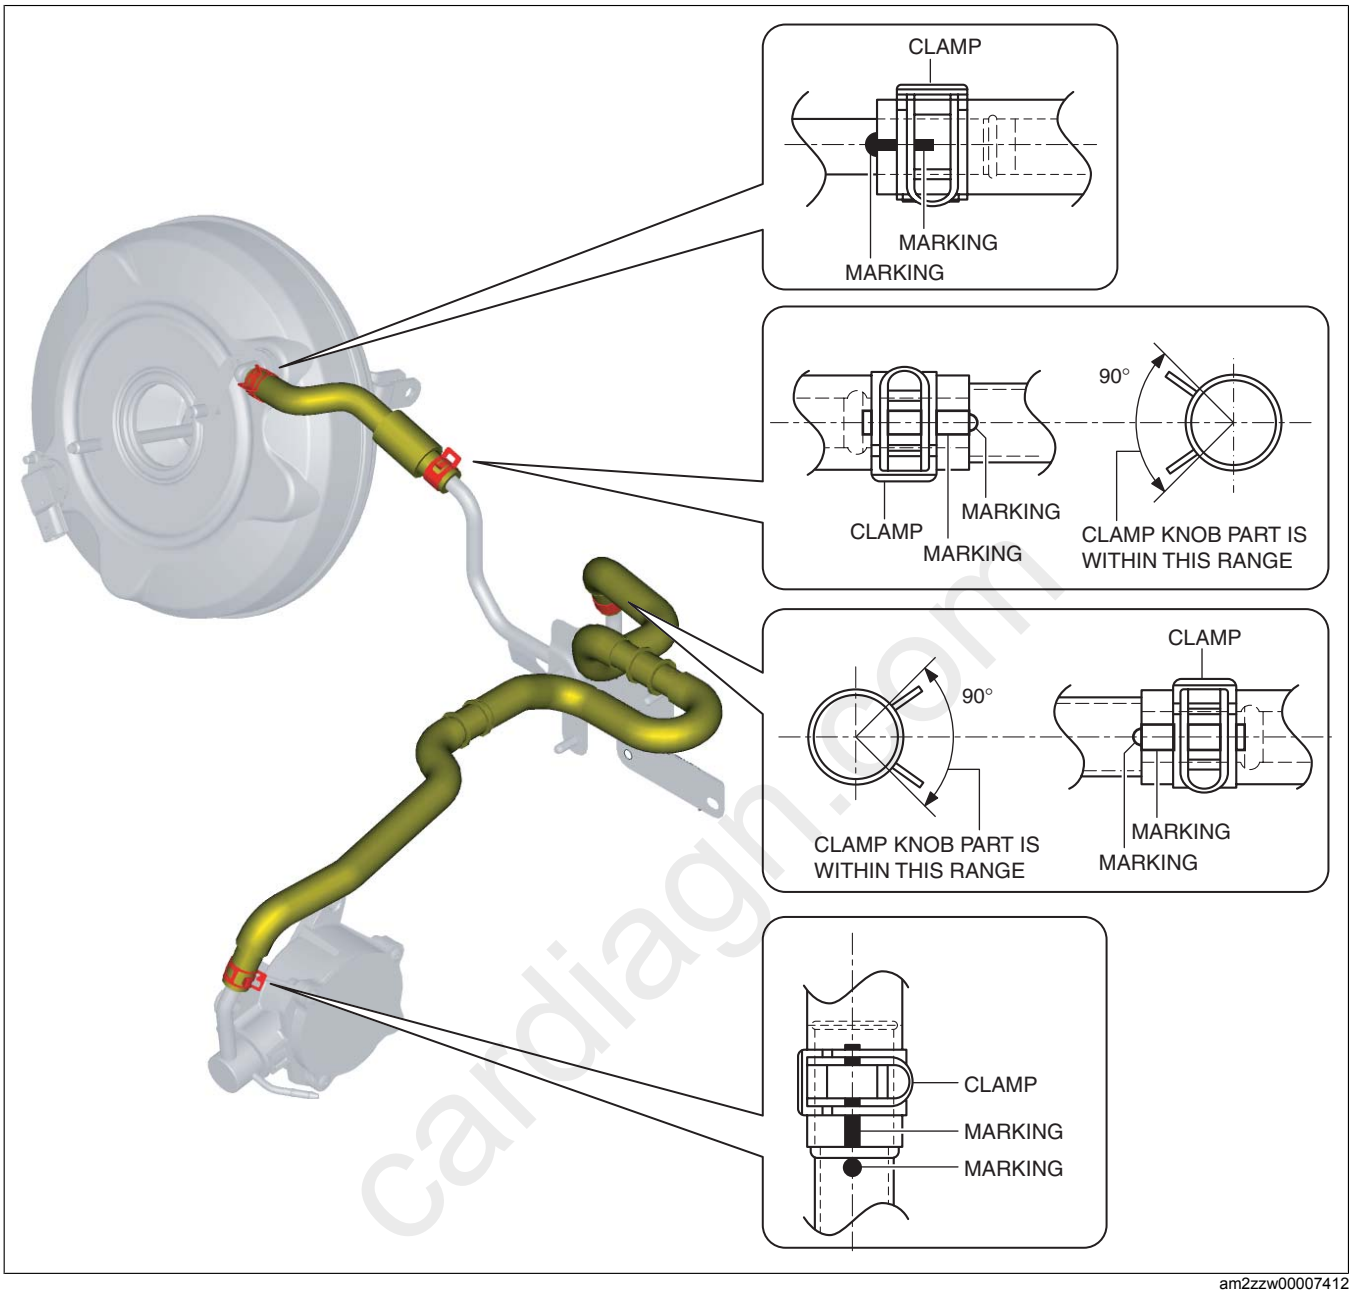

am2zzw00007412

cardiagn.com