
POWER BRAKE UNIT REMOVAL/INSTALLATION [R.H.D. (SKYACTIV-D 1.5)]

id0411008018u6

Caution


- **Once the brake switch clearance has automatically been adjusted, it cannot be adjusted again. Therefore, replace the switch with a new one when replacing the power brake unit or performing any procedure that changes the pedal stroke.**

1. Remove the following parts:
   (1) Engine cover (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
   (2) Windshield wiper arm and blade (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
   (3) Cowl grille (See COWL GRILLE REMOVAL/INSTALLATION.)
   (4) Windshield wiper motor and link (See WINDSHIELD WIPER MOTOR AND LINK REMOVAL/INSTALLATION.)
   (5) Cowl panel (See COWL PANEL REMOVAL/INSTALLATION.)
   (6) Master cylinder (See MASTER CYLINDER REMOVAL/INSTALLATION [R.H.D.].)
2. Remove the cooler hose (LO) installation nut. (See REFRIGERANT LINE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

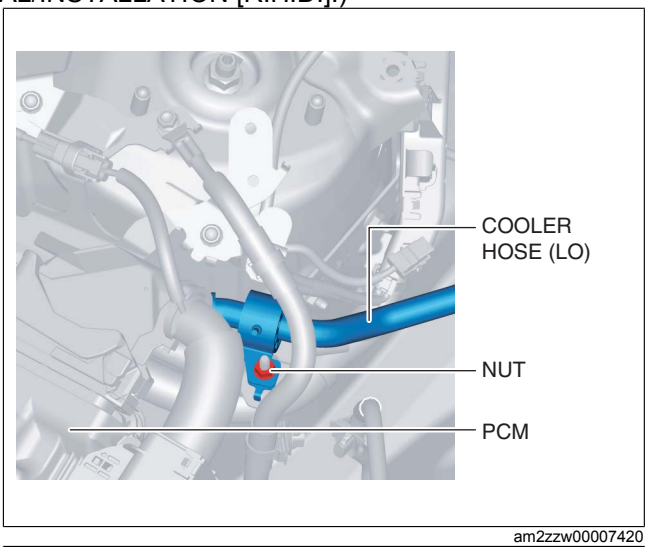


am2zzw00007420

3. Remove the wiring harness from the PCM bracket. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

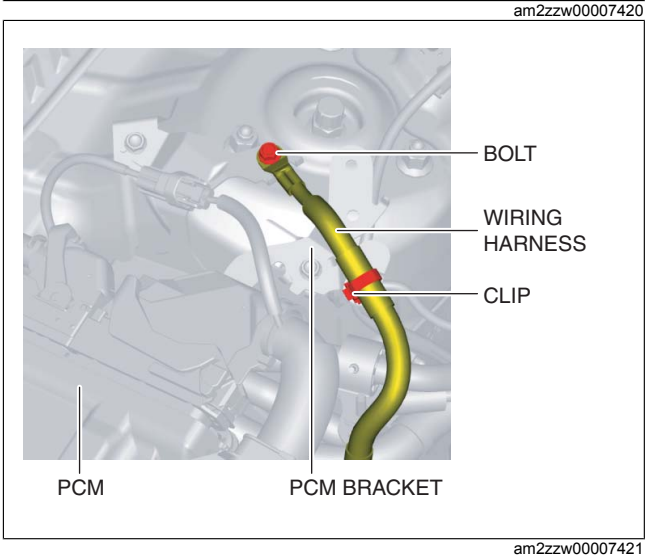


am2zzw00007421

4. Remove the PCM bracket installation bolts and nut. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
5. Remove the PCM wiring harness installation bolt.
6. Set the PCM component out of the way.

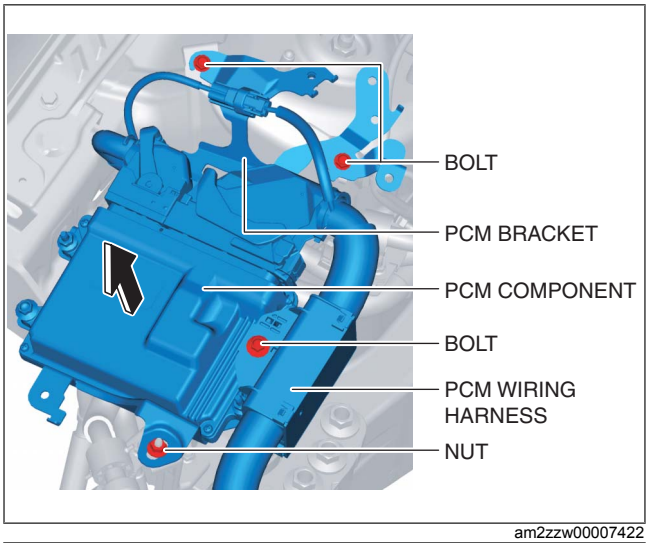


am2zzw00007422

7. Remove the cooler hose (LO) installation nut. (See REFRIGERANT LINE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
8. Detach the cooler pipe from the clip.

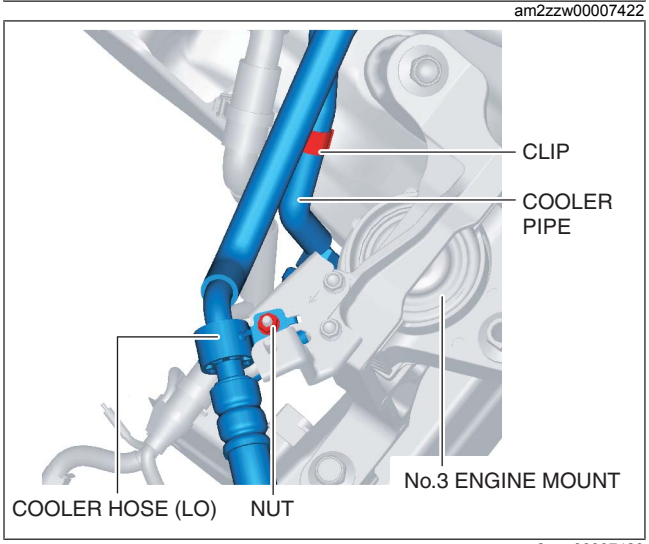


am2zzw00007423

9. Detach the cooler pipe from the clip.

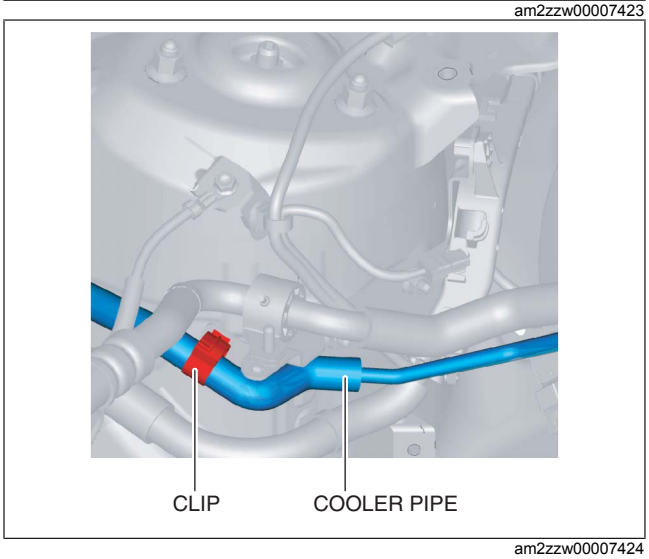


am2zzw00007424

10. Remove the bracket installation nuts.

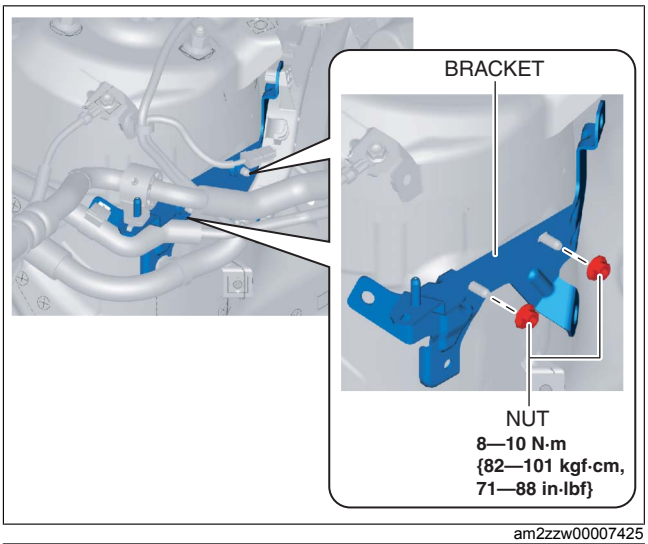


am2zzw00007425

11. Remove the clip from the body.

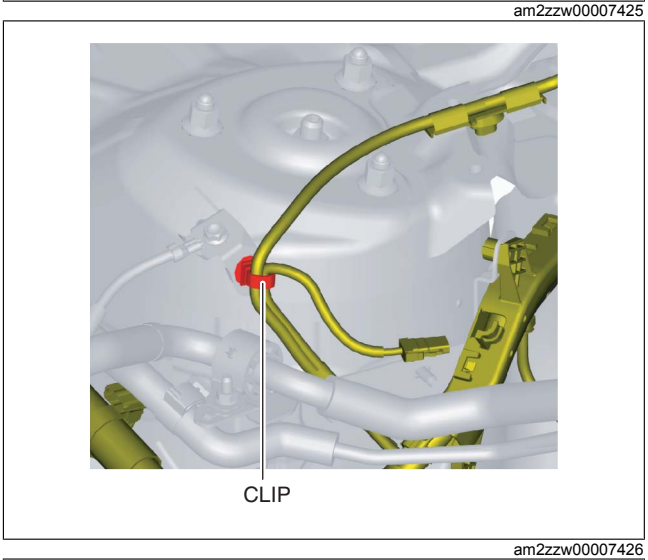


am2zzw00007426

12. Remove the wiring harness from the bracket.
13. Remove the bracket.
14. Remove the catalytic converter (DPF) insulator. (See EXHAUST SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)

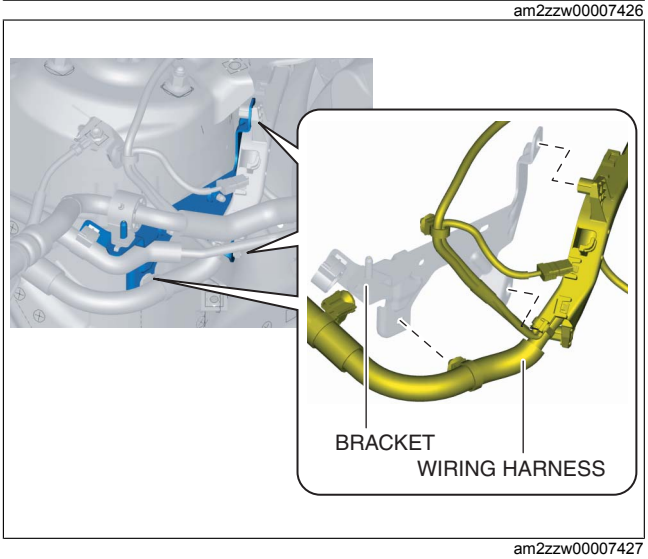


am2zzw00007427

15. Disconnect the brake pipes from the DSC HU/CM. (See DSC HU/CM REMOVAL/INSTALLATION [R.H.D.].)

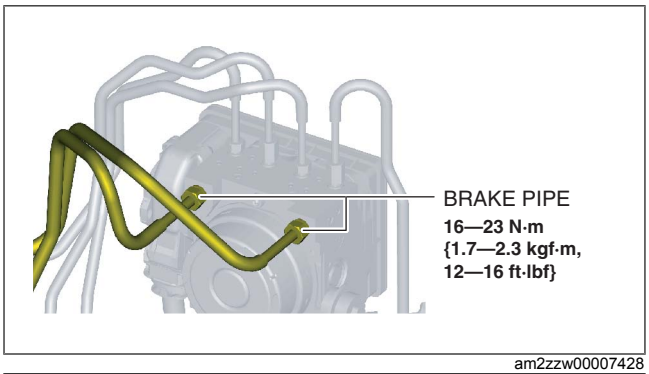


am2zzw00007428

16. Detach the brake pipes from the clip.
17. Remove in the order indicated in the table.
18. Install in the reverse order of removal.
19. After installation, add brake fluid, bleed the air, and inspect for fluid leakage. (See BRAKE FLUID AIR BLEEDING.)
20. Remove the brake switch. (See BRAKE PEDAL REMOVAL/INSTALLATION [R.H.D.].)
21. Inspect the brake pedal. (See BRAKE PEDAL INSPECTION.)
22. Install a new brake switch. (See BRAKE PEDAL REMOVAL/INSTALLATION [R.H.D.].)

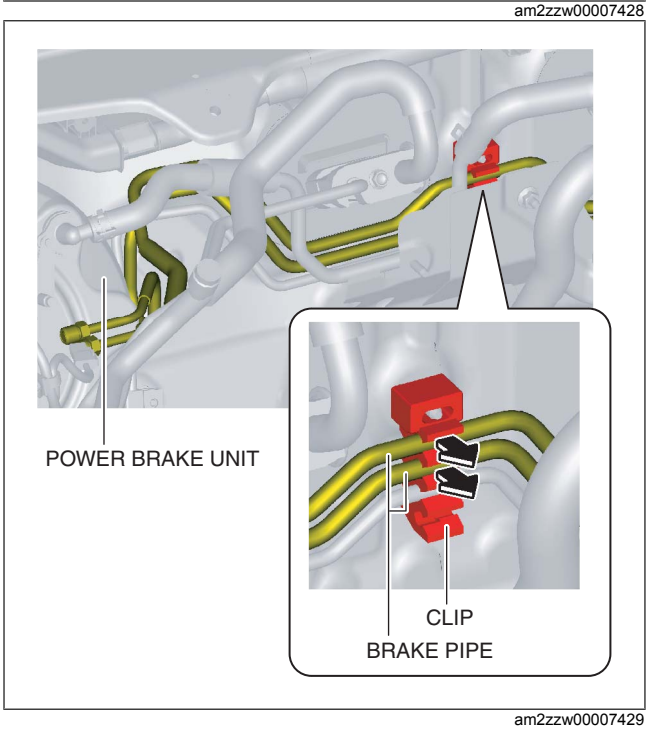

am2zzw00007429

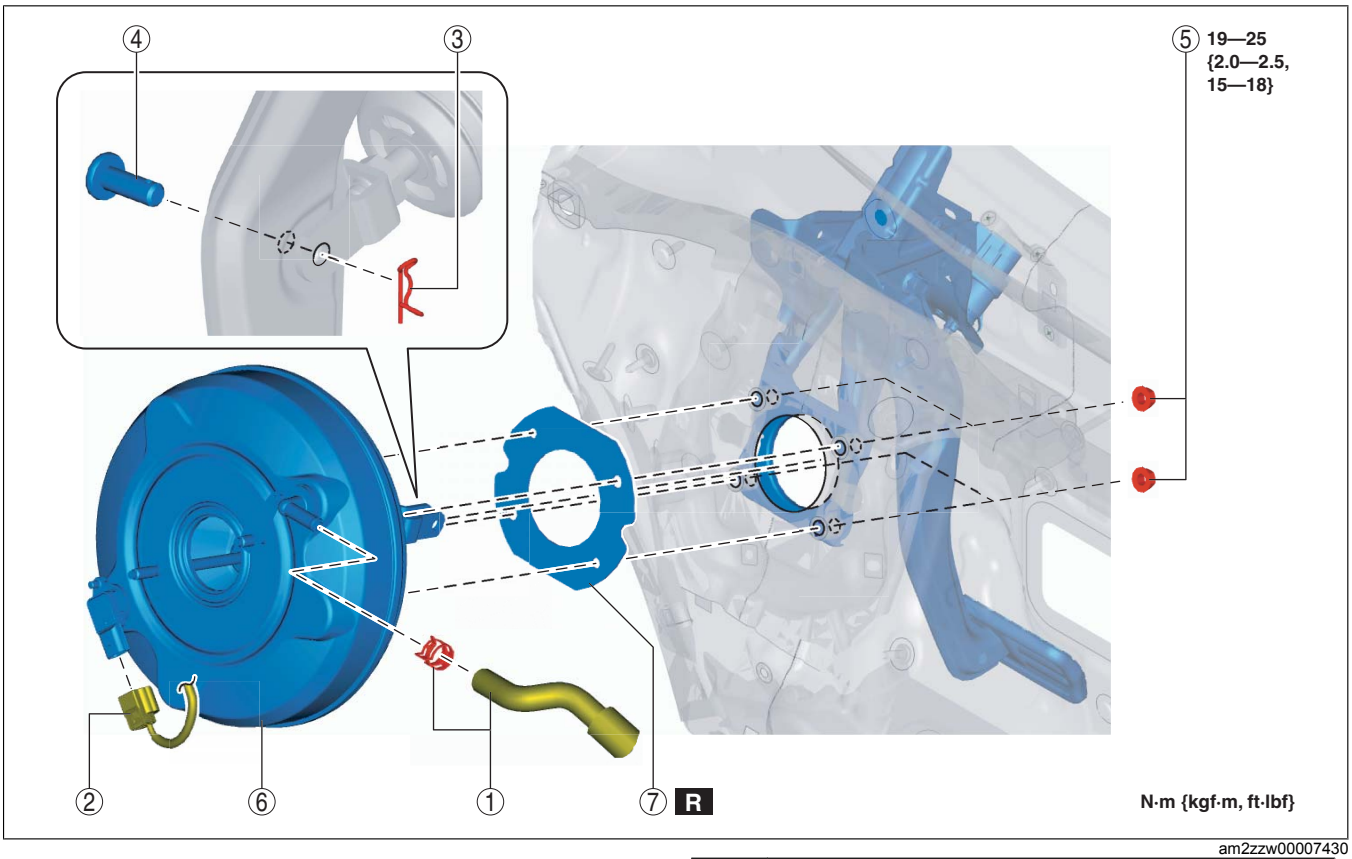


am2zzw00007430

1	Vacuum hose, clamp
2	Power brake unit vacuum sensor connector
3	Snap pin (See Snap Pin Installation Note.)
4	Clevis pin

5	Nut
6	Power brake unit
7	Gasket

Power Brake Unit Removal Note


1. Move the power brake unit towards the front of the vehicle.
2. Remove the wiring harnesses shown in the figure from the body.
3. Set the wiring harness out of the way.
4. Remove the power brake unit.

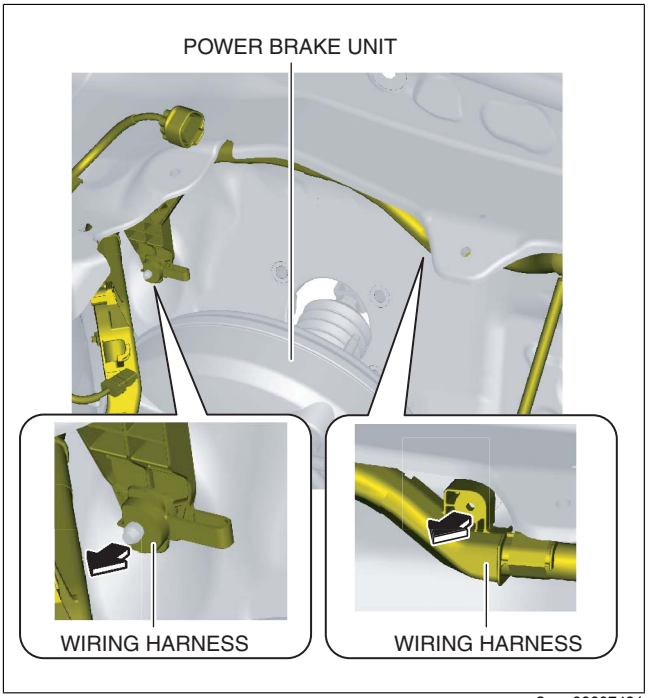

am2zzw00007431

Snap Pin Installation Note

1. Install the snap pin as shown in the figure.

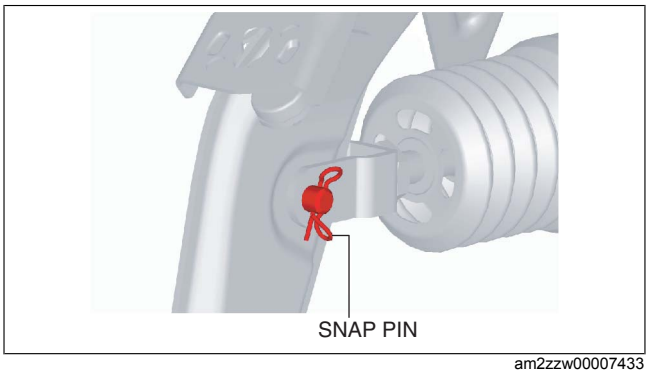

am2zzw00007433