
BRAKE SWITCH INSPECTION

id041100801900

Caution

- **Inspect the brake switch with it installed to the brake pedal, otherwise the brake switch may not operate normally. If the brake switch is removed from the brake pedal, replace the brake switch with a new one.**

1. Disconnect the brake switch connector. (See BRAKE PEDAL REMOVAL/INSTALLATION [L.H.D.].) (See BRAKE PEDAL REMOVAL/INSTALLATION [R.H.D.].)
2. Verify that the continuity is as indicated in the table.
   - If not as indicated in the table, replace the brake switch. (See BRAKE PEDAL REMOVAL/INSTALLATION [L.H.D.].) (See BRAKE PEDAL REMOVAL/INSTALLATION [R.H.D.].)

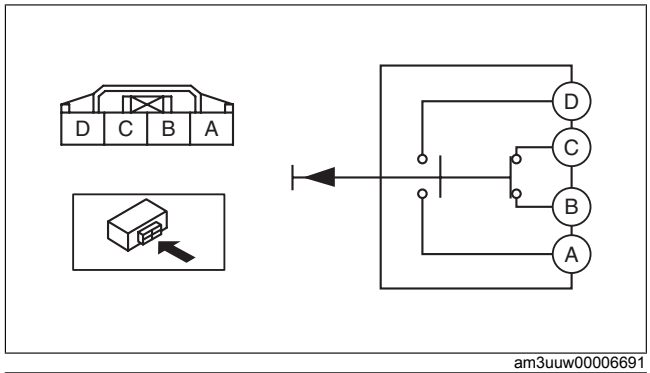

am3uuw00006691

○—○ : Continuity

Condition	Terminal			
	A	B	C	D
When the brake pedal is depressed	○			○
When the brake pedal is not depressed		○	○	

am3zzw00010316