
VACUUM PUMP REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0411008036u2

Warning
- **A hot engine can cause severe burns. Turn off the engine and wait until it is cool before removing the exhaust system.**

1. Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
2. Remove the following parts as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
   - Fresh-air duct
   - Air hose
   - Air cleaner cover
   - Air cleaner element
   - Resonance chamber (SKYACTIV-G 1.5)
   - Air cleaner case
3. Remove the battery and battery tray. (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Set the PCM wiring harness out of the way.
5. Pinch open the clamp using pliers and disconnect the vacuum hose from the vacuum pump. (See VACUUM HOSE REMOVAL/INSTALLATION [L.H.D.].) (See VACUUM HOSE REMOVAL/INSTALLATION [R.H.D.].)
6. Remove in the order shown in the table.
7. Install in the reverse order of removal.

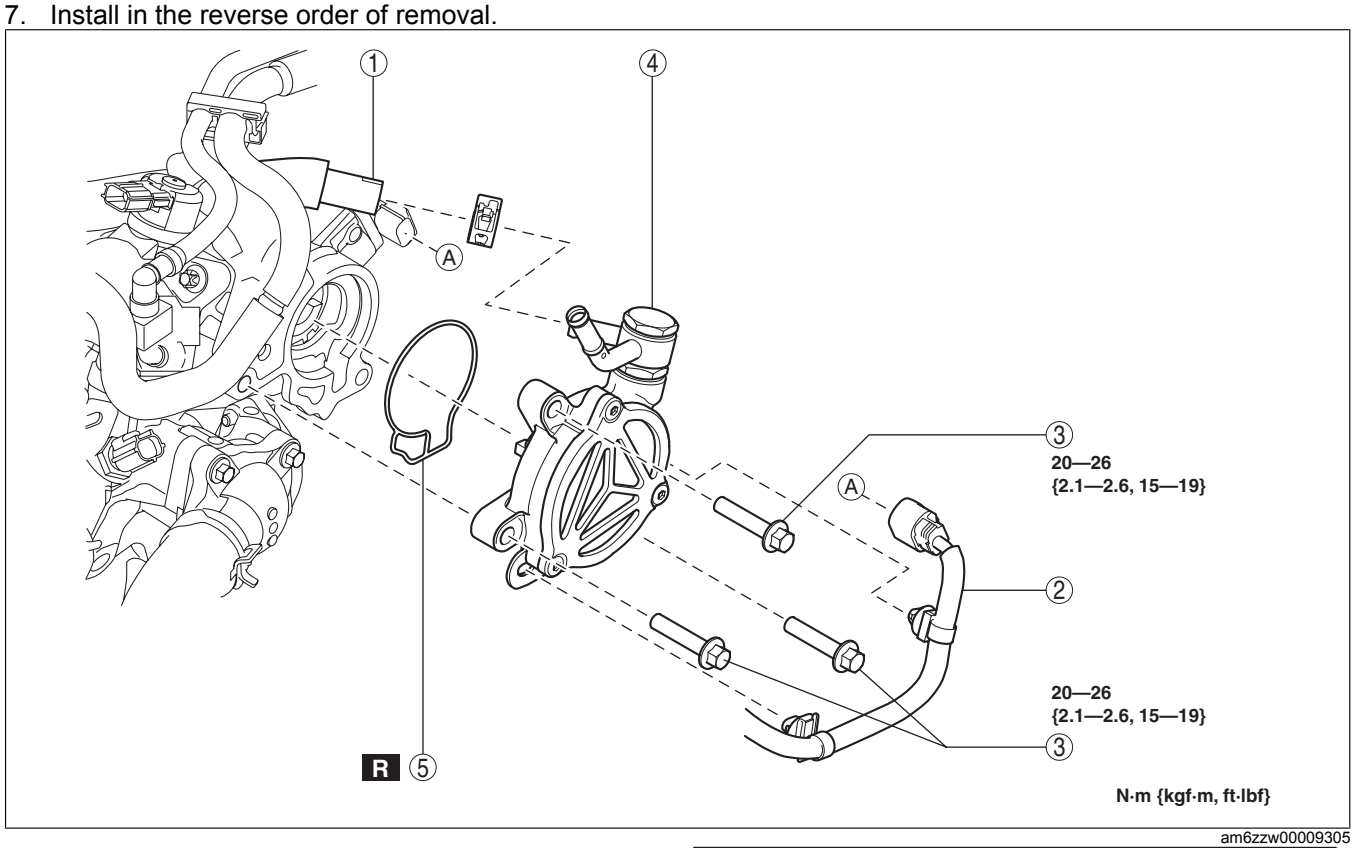

am6zzw00009305

1	Vacuum hose
2	Exhaust CMP sensor connector and wiring harness (SKYACTIV-G 1.5 (with 4-2-1 exhaust system))
3	Bolt
4	Vacuum pump (See Vacuum Pump Removal Note.) (See Vacuum Pump and O-ring Installation Note.)
5	O-ring (See Vacuum Pump and O-ring Installation Note.)

Vacuum Pump Removal Note
1. When removing the vacuum pump, place a rag under the installation surface of the vacuum pump so that engine oil does not get on other parts.
2. Remove the vacuum pump.

Vacuum Pump and O-ring Installation Note

1. Rotate the vacuum pump by hand to drain the remainder of the engine oil in the vacuum pump.
2. Degrease the O-ring installation groove and installation surface.
3. Install the new O-ring to the vacuum pump.
4. Install the vacuum pump.