
WHEEL CYLINDER DISASSEMBLY/ASSEMBLY

id041100811100

1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.

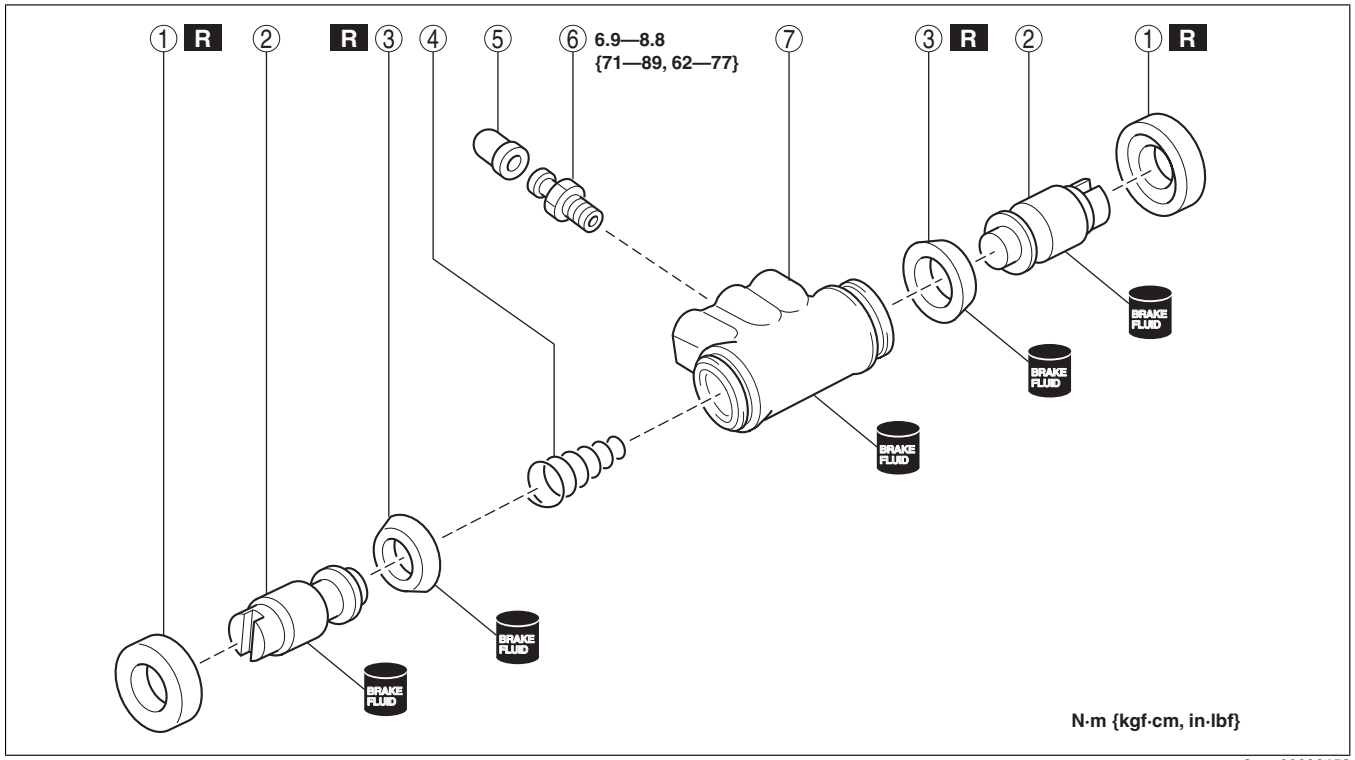

am2zzw00006152

1	Dust boot
2	Wheel cylinder piston
3	Piston cup
4	Wheel cylinder spring

5	Bleeder cap
6	Bleeder screw
7	Wheel cylinder body