
PARKING BRAKE SWITCH INSPECTION

id041200800700

1. Disconnect the parking brake switch connector. (See PARKING BRAKE LEVER REMOVAL/INSTALLATION.)
2. Verify that the continuity is as indicated in the table.
   - If not as indicated in the table, replace the parking brake switch. (See PARKING BRAKE LEVER REMOVAL/INSTALLATION.)

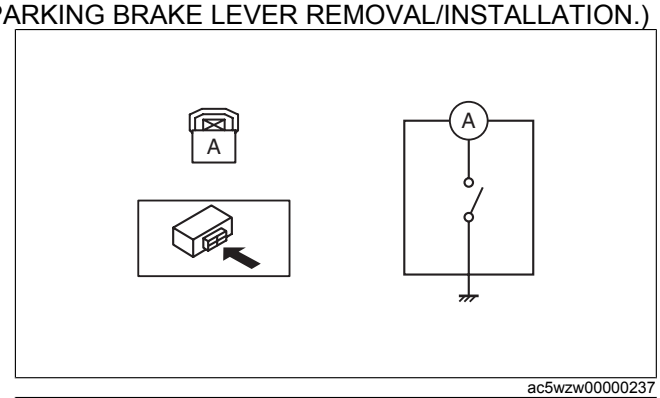

ac5wzw00000237

○—○ : Continuity

Condition	Terminal	
	A	Body ground
Parking brake lever pulled	○—○	
Parking brake lever released		

am5ezw00004333