
PARKING BRAKE LEVER REMOVAL/INSTALLATION

id041200801600

1. Remove the following parts:
   (1) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
   (2) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
   (3) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
   (4) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
   (5) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)
   (6) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
   (7) Console side panel (See CONSOLE SIDE PANEL REMOVAL/INSTALLATION.)
   (8) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
   (9) CD player (with CD player) (See CD PLAYER REMOVAL.) (See CD PLAYER INSTALLATION.)
   (10) DVD/CD player (with DVD/CD player) (See DVD/CD PLAYER REMOVAL.) (See DVD/CD PLAYER INSTALLATION.)
   (11) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
   (12) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
   (13) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
2. Remove in the order indicated in the table.
3. Install in the reverse order of removal.
4. After installation, inspect the parking brake lever stroke. (See PARKING BRAKE LEVER INSPECTION.)

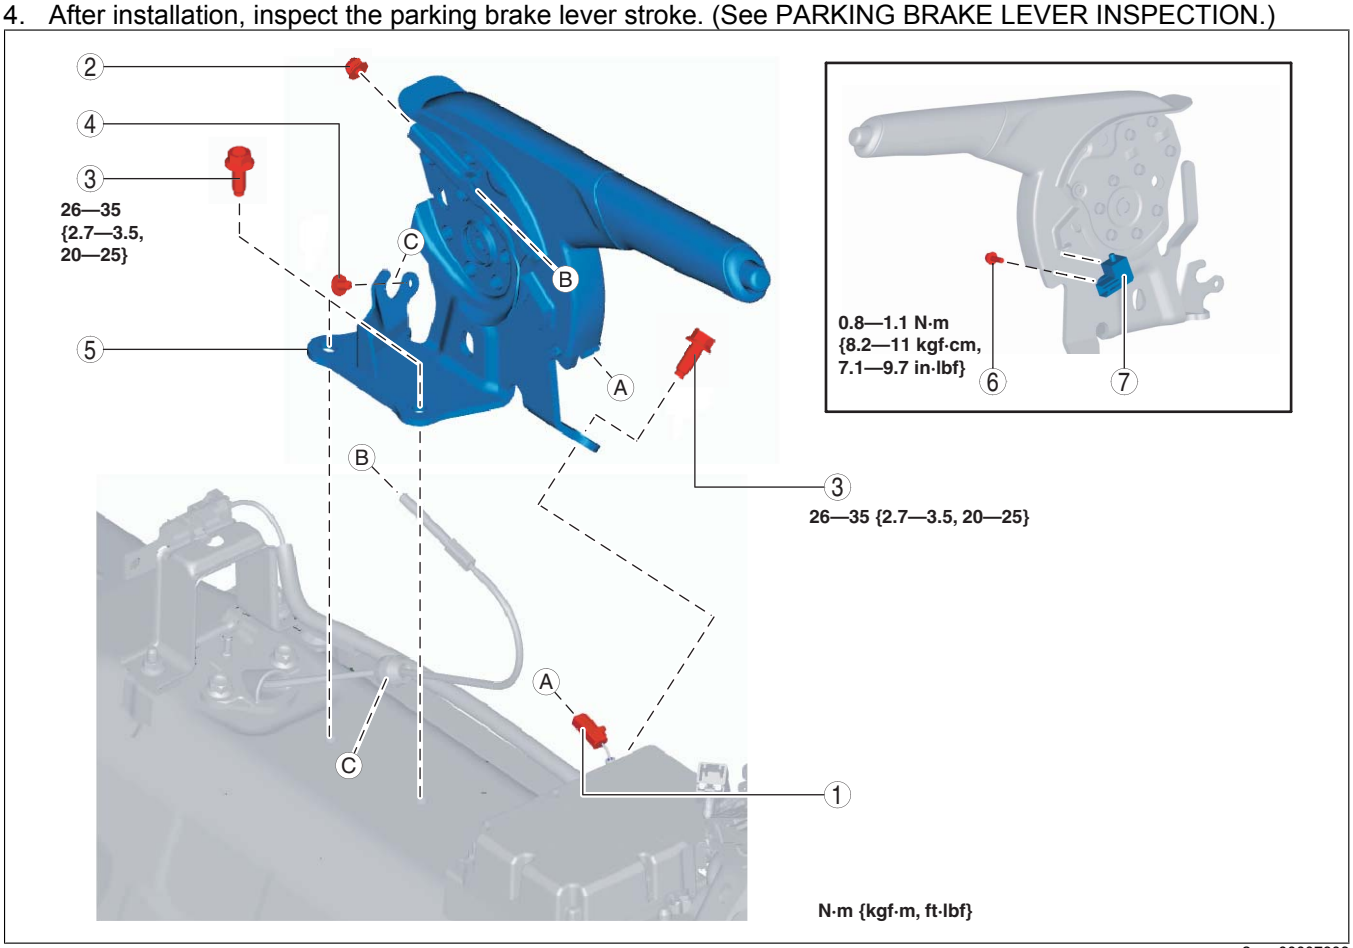


am2zzw00007303

1	Parking brake switch connector
2	Adjusting nut
3	Bolt (See Bolt Installation Note.)
4	Clip

5	Parking brake lever
6	Bolt
7	Parking brake switch

Bolt Installation Note

1. Temporarily tighten bolt C.
2. Completely tighten the bolts in the order of A, B, and C.

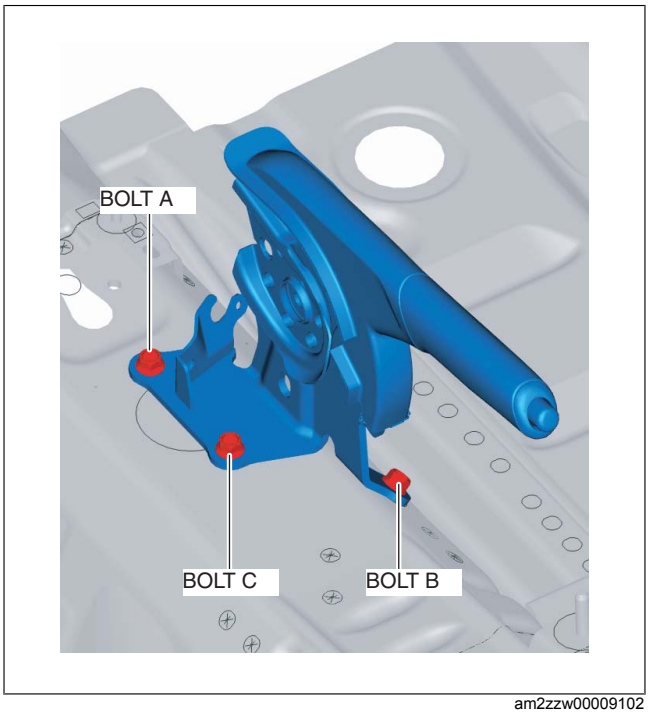

am2zzw00009102