
REAR ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION [REAR BRAKE (DRUM)]

id0413008005f5


5HB

1. Remove the following parts:
   (1) Rear package tray (See REAR PACKAGE TRAY REMOVAL/INSTALLATION.)
   (2) Trunk covering (See TRUNK COVERING REMOVAL/INSTALLATION.)
   (3) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
   (4) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
   (5) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (6) Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
   (7) Rear center seat belt lower anchor installation bolt (See REAR CENTER SEAT BELT REMOVAL/INSTALLATION.)
   (8) Rear seat back (See REAR SEAT BACK REMOVAL/INSTALLATION.)
   (9) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
2. Disconnect the rear ABS wheel-speed sensor connector.

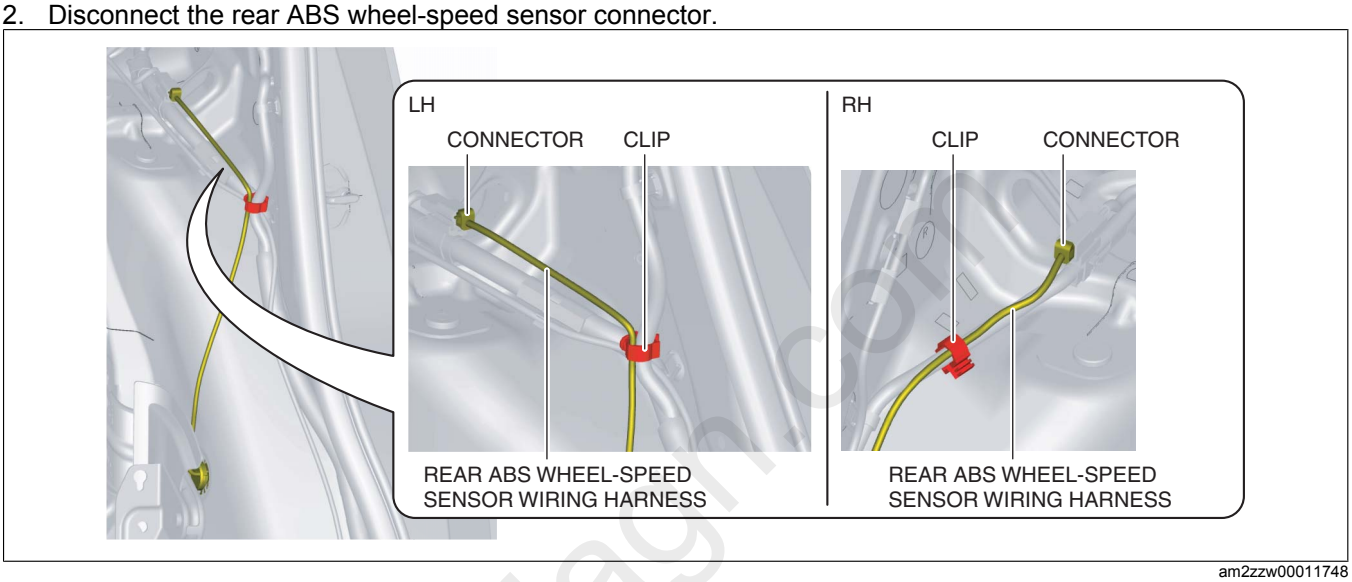


am2zzw00011748

3. Detach the rear ABS wheel-speed sensor wiring harness from the clip.
4. Press the rear ABS wheel-speed sensor tab and press out the sensor toward the outside of the vehicle.
5. Remove in the order indicated in the table.
6. Install in the reverse order of removal.
7. After installation, verify that there is no twisting in the rear ABS wheel-speed sensor.

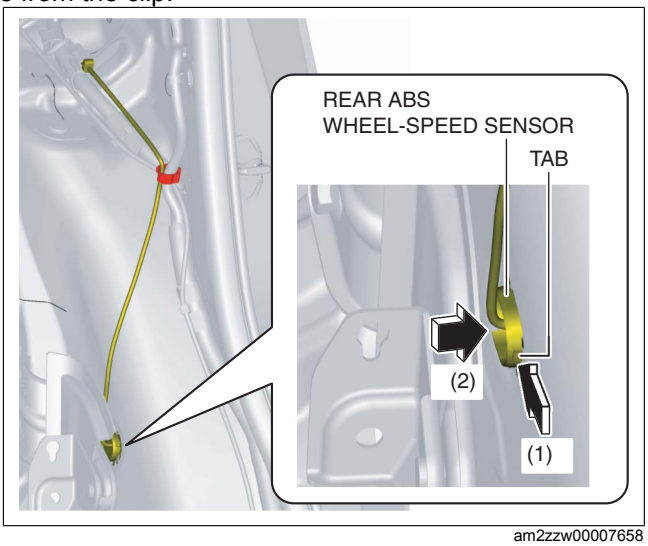

am2zzw00007658

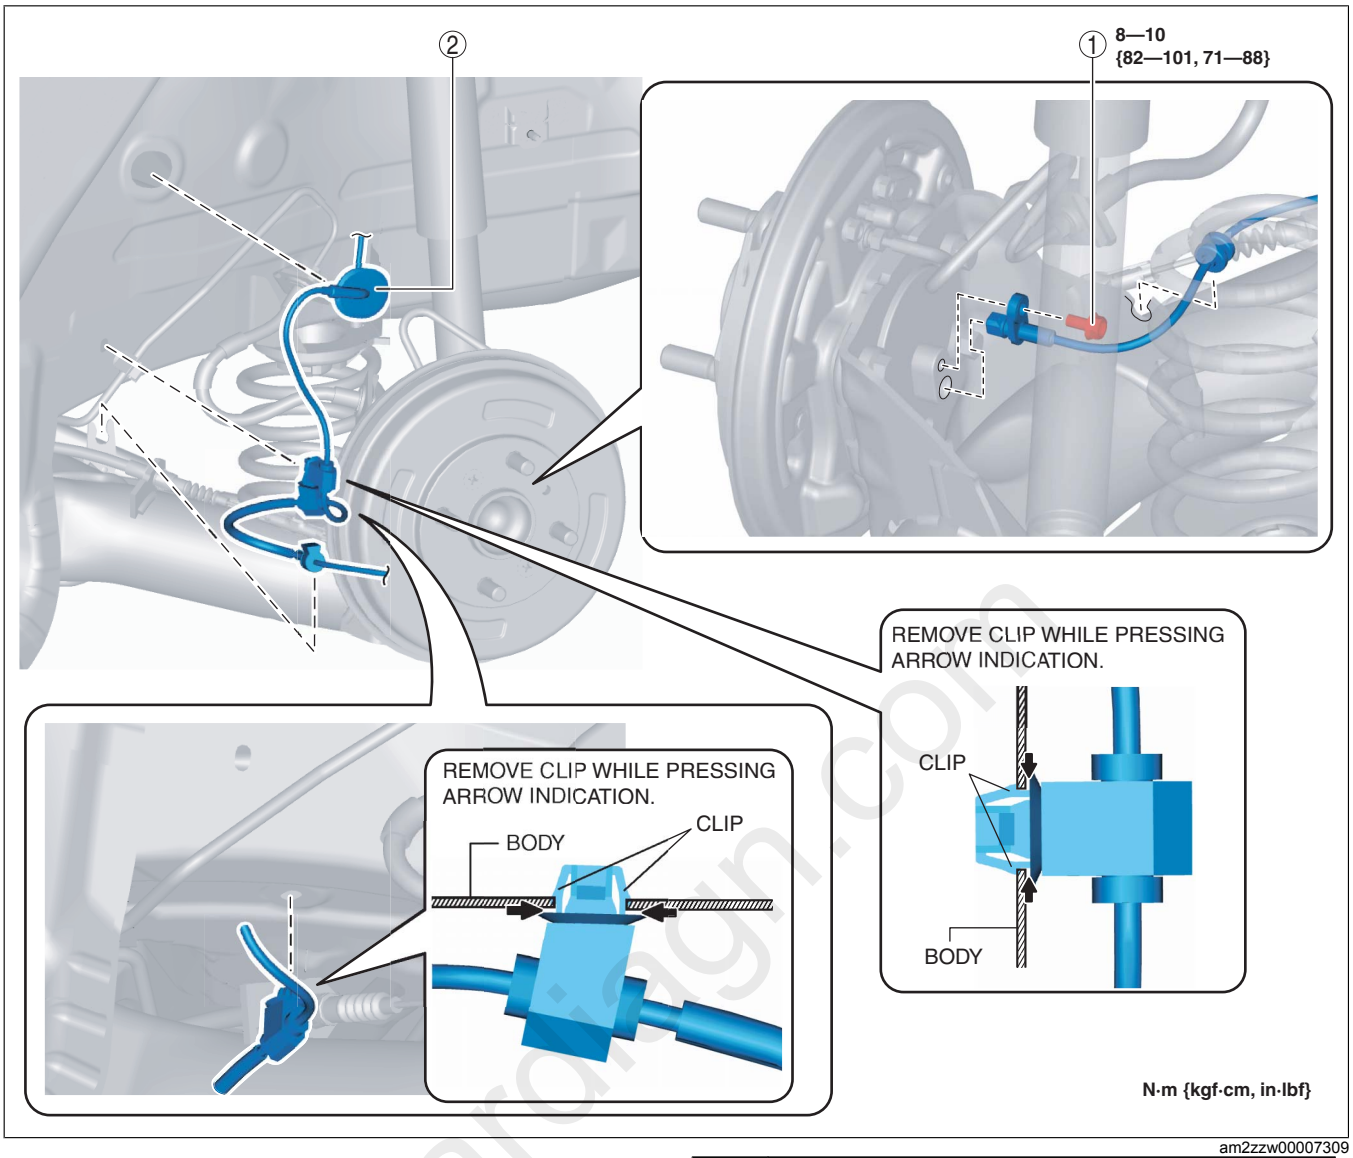


am2zzw00007309

1	Bolt
2	Rear ABS wheel-speed sensor

4SD


1. Remove the following parts:
   (1) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
   (3) Tire house trim (See TIRE HOUSE TRIM REMOVAL/INSTALLATION.)
2. Disconnect the rear ABS wheel-speed sensor connector.

carmanuals.com

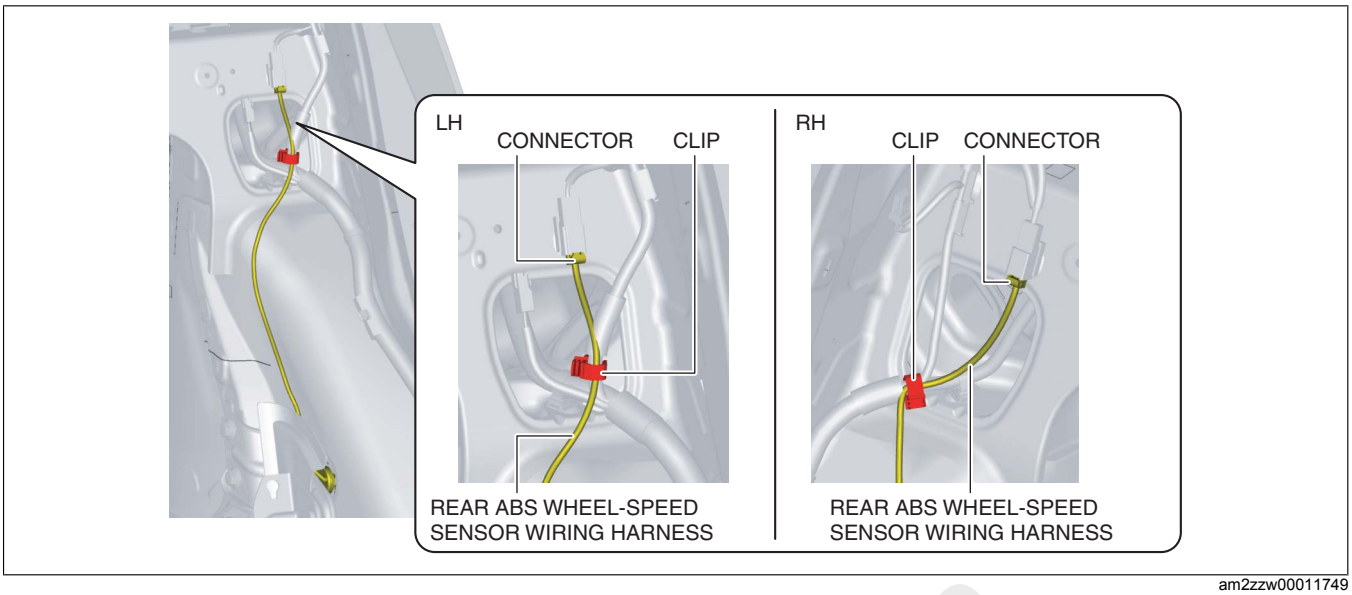


am2zzw00011749

3. Detach the rear ABS wheel-speed sensor wiring harness from the clip.
4. Press the rear ABS wheel-speed sensor tab and press out the sensor toward the outside of the vehicle.
5. Remove in the order indicated in the table.
6. Install in the reverse order of removal.
7. After installation, verify that there is no twisting in the rear ABS wheel-speed sensor.

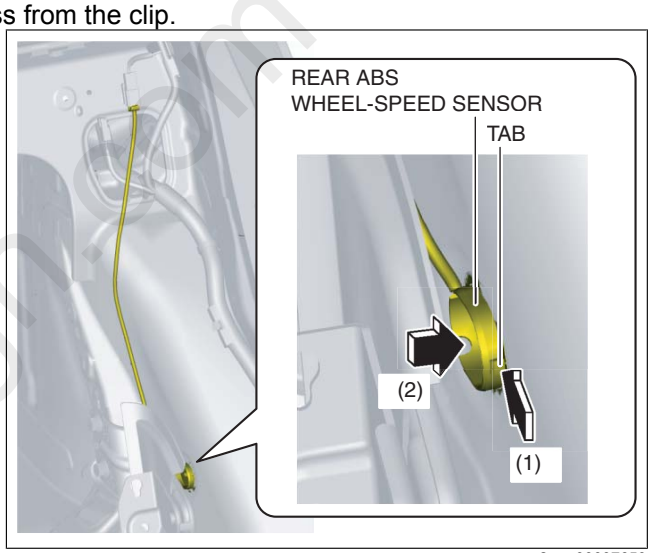

am2zzw00007659

cardiagn.com

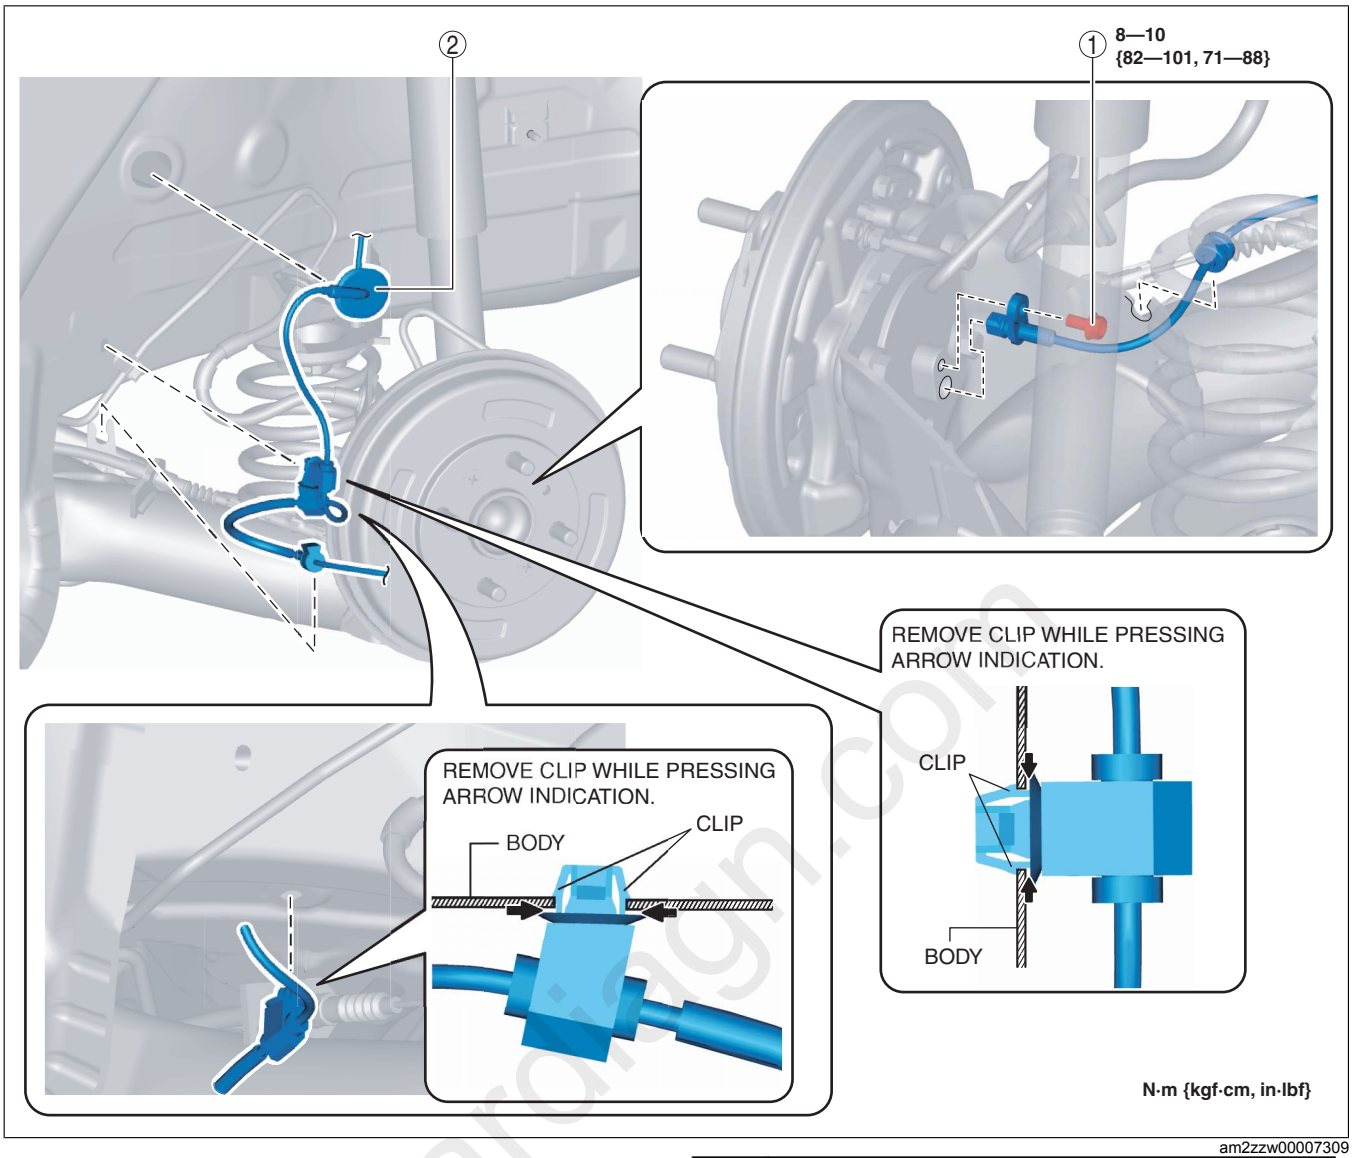

am2zzw00007309

1	Bolt
2	Rear ABS wheel-speed sensor

carmanuals.com