
ABS LOCATION INDEX

id041300801100

Vehicle Front Side (L.H.D.)

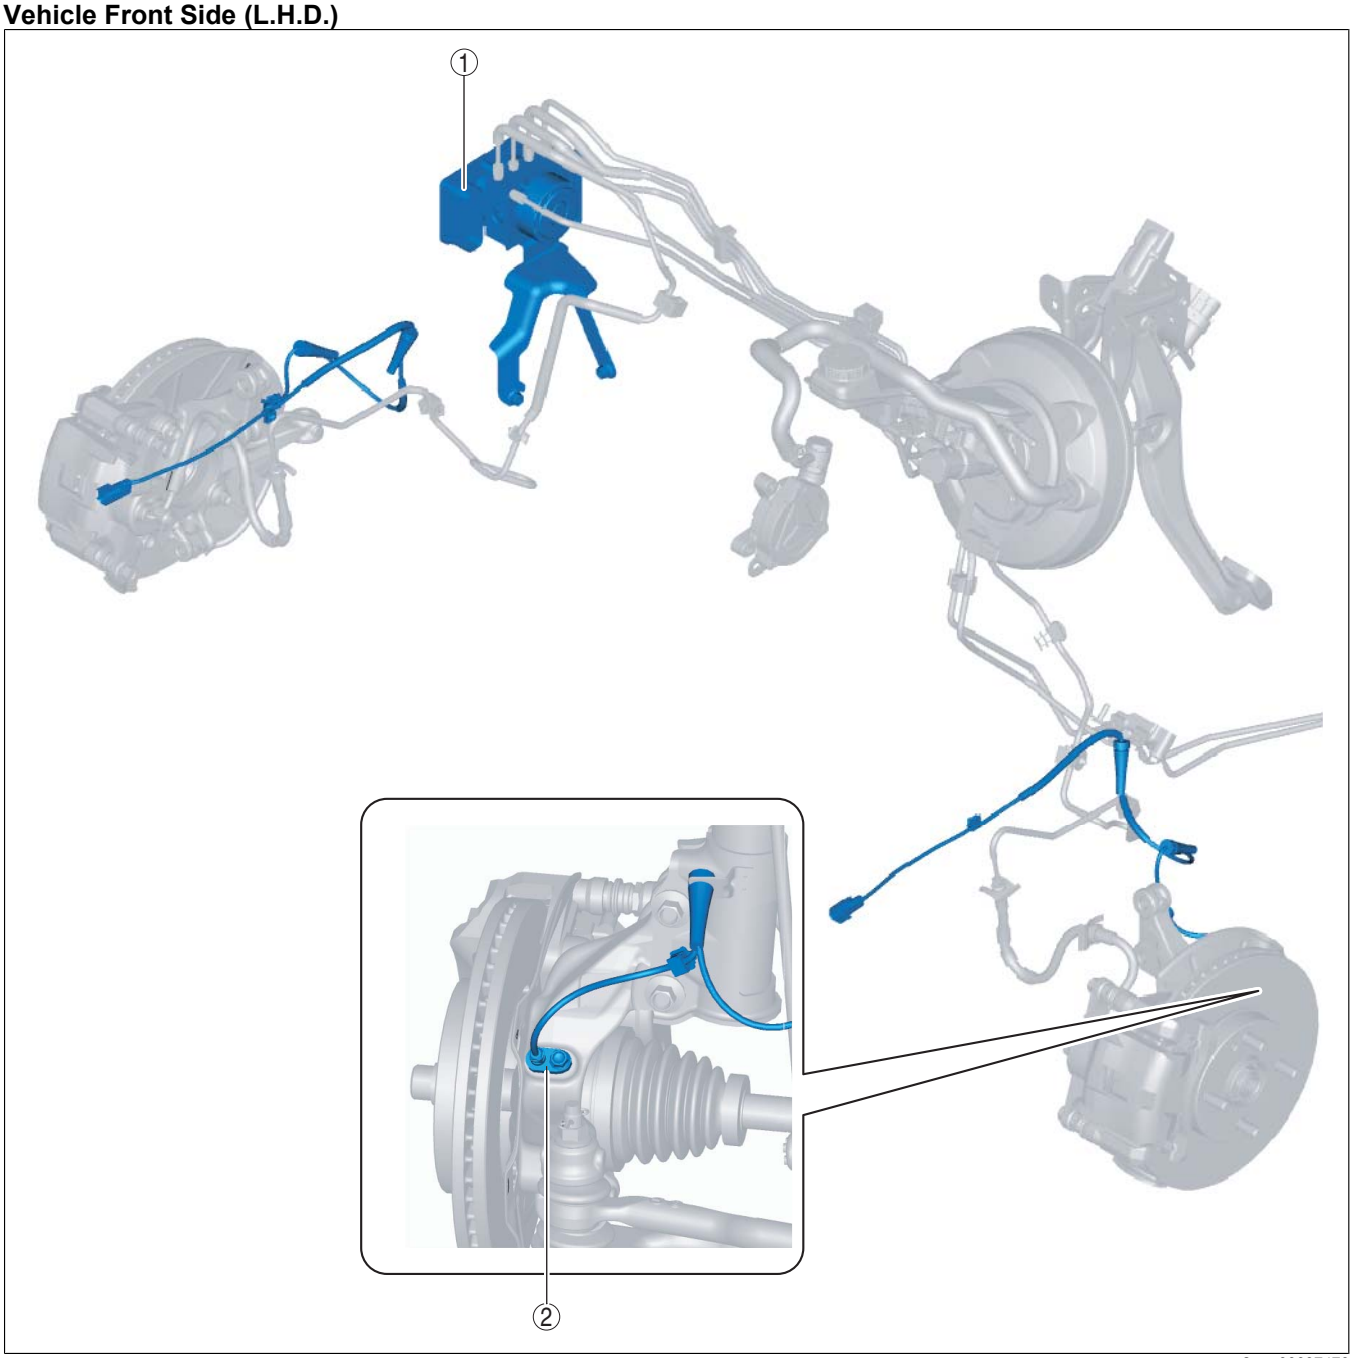


am2zzw00007470

1	ABS HU/CM (See ABS HU/CM REMOVAL/INSTALLATION [L.H.D.].) (See ABS RELATED PARTS SENSOR INITIALIZATION PROCEDURE.) (See ABS HU/CM INSPECTION.)

2	Front ABS wheel-speed sensor (See FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION.) (See FRONT ABS WHEEL-SPEED SENSOR INSPECTION.)

Vehicle Front Side (R.H.D.)

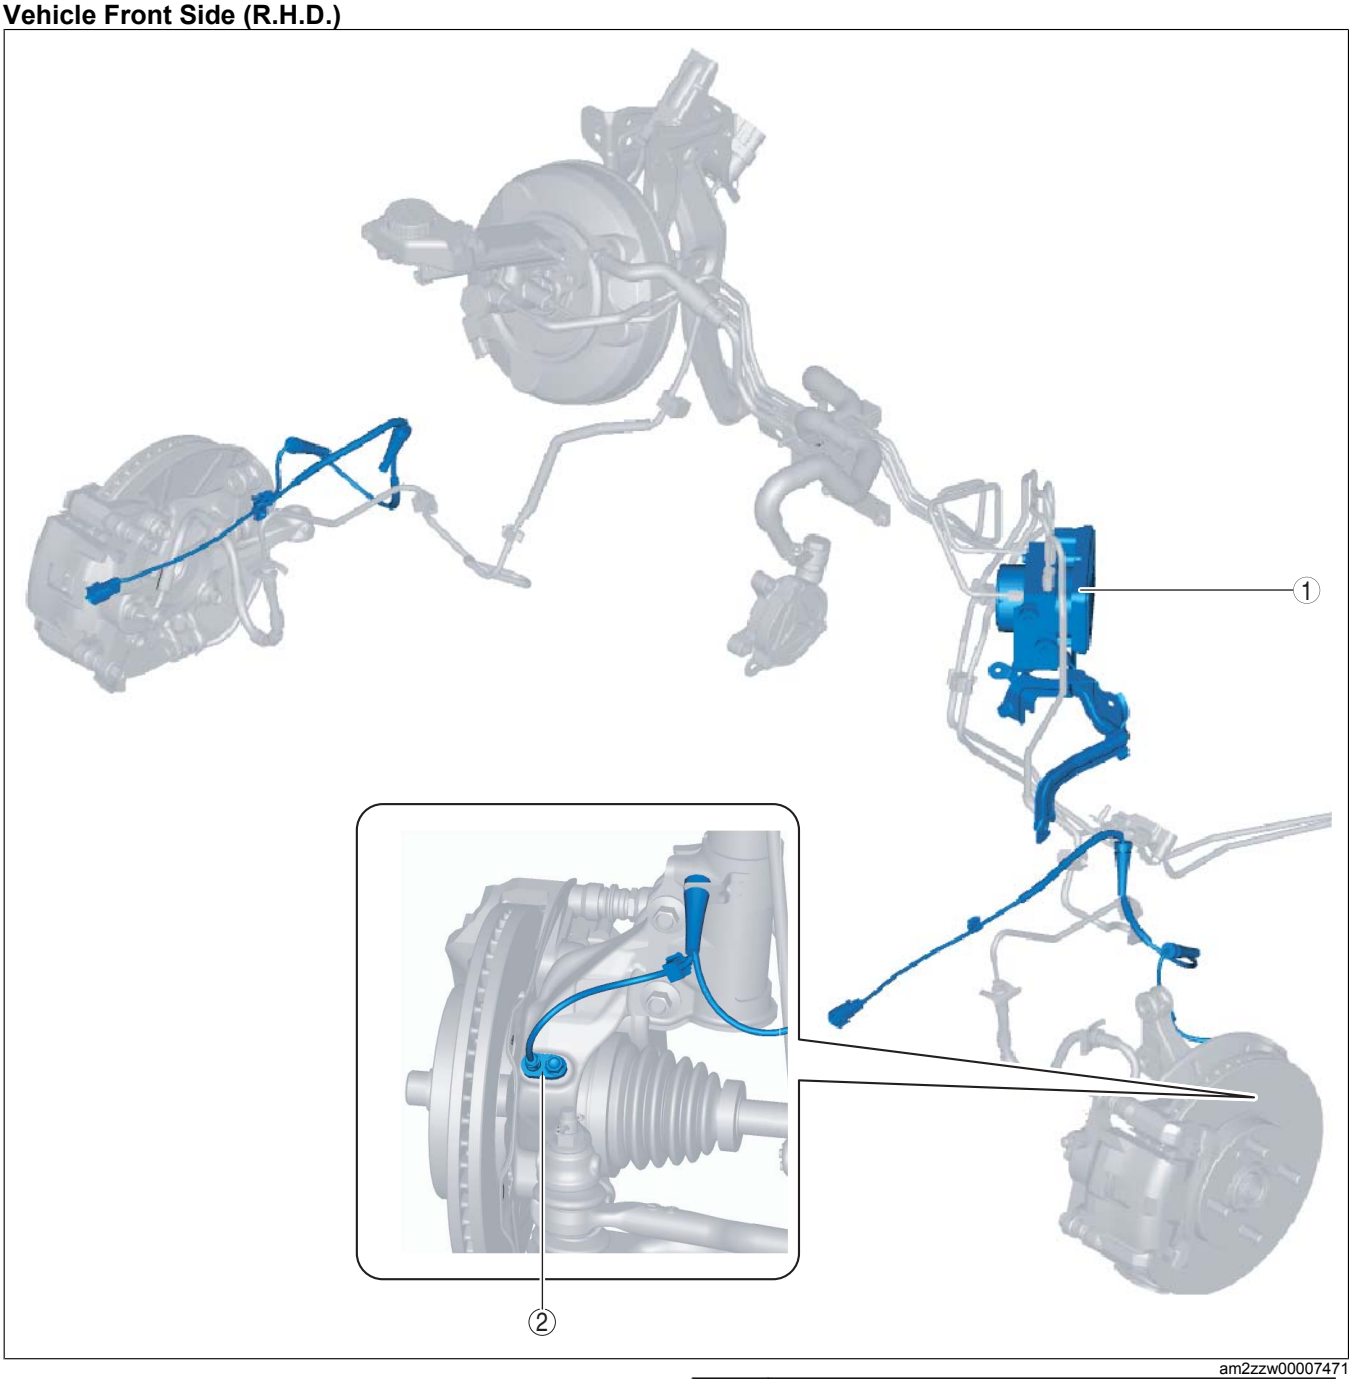


am2zzw00007471

1	ABS HU/CM (See ABS HU/CM REMOVAL/INSTALLATION [R.H.D.].) (See ABS RELATED PARTS SENSOR INITIALIZATION PROCEDURE.) (See ABS HU/CM INSPECTION.)

2	Front ABS wheel-speed sensor (See FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION.) (See FRONT ABS WHEEL-SPEED SENSOR INSPECTION.)

Vehicle Rear Side

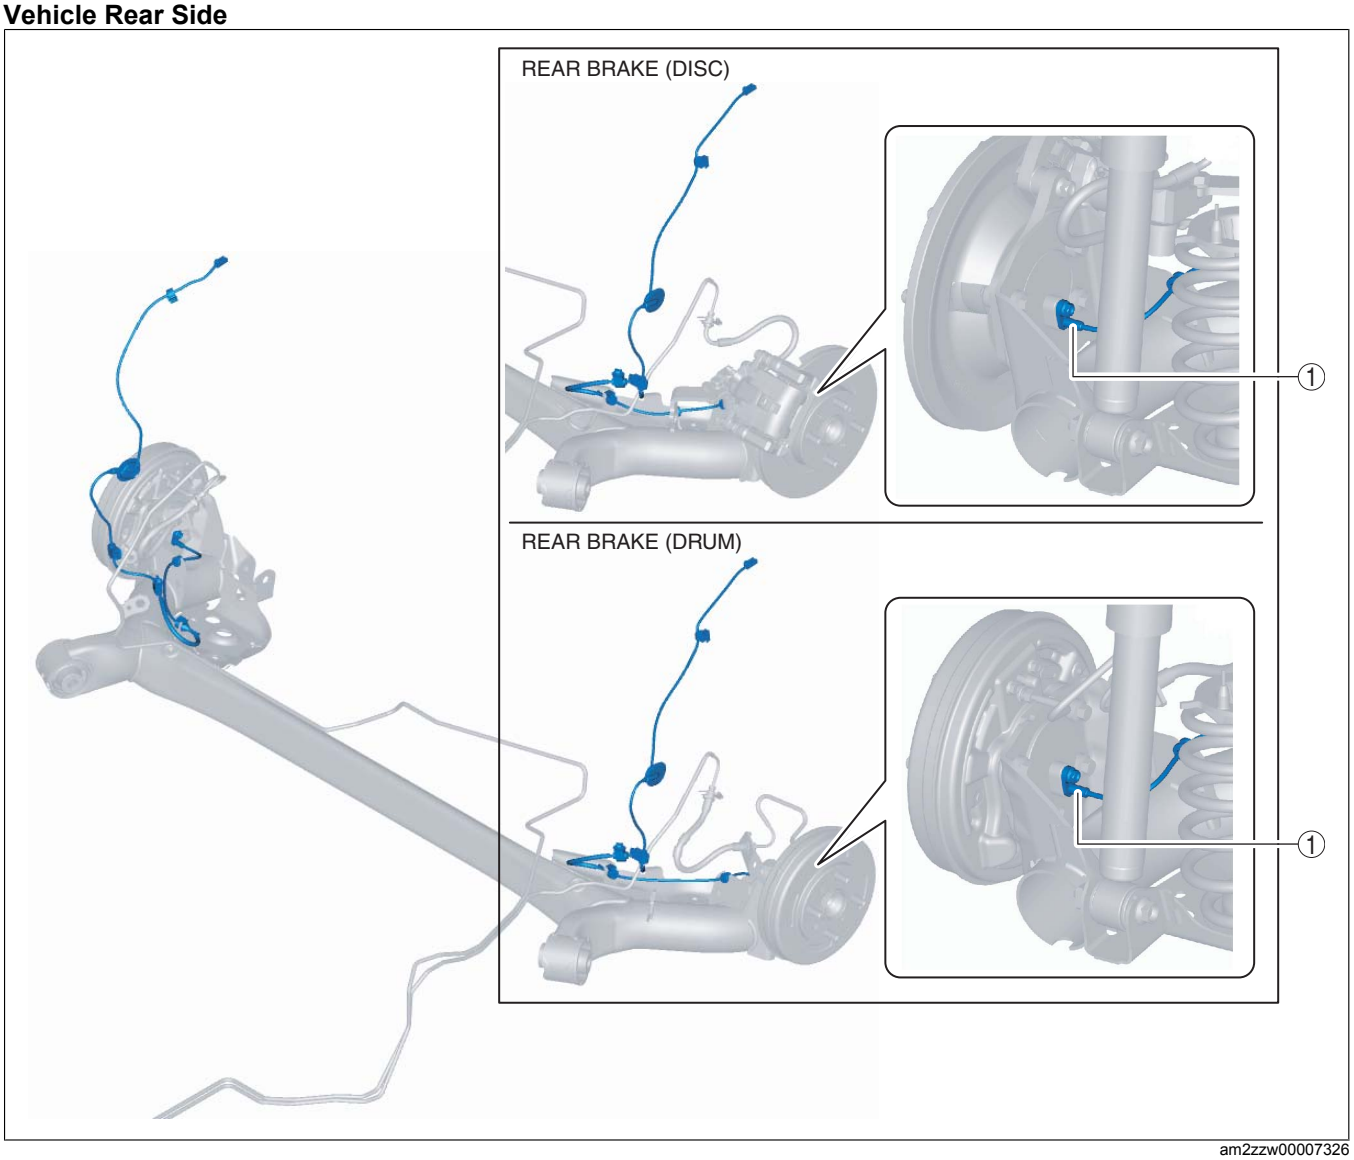

am2zzw00007326

1	Rear ABS wheel-speed sensor (See REAR ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION [REAR BRAKE (DRUM)].) (See REAR ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION [REAR BRAKE (DISC)].) (See REAR ABS WHEEL-SPEED SENSOR INSPECTION.)