ABS HU/CM REMOVAL/INSTALLATION [L.H.D.]

id0413008014d1


Warning

- **If the ABS related parts sensor initialization procedure is not completed, the ABS will not operate properly and it might cause an unexpected accident. Therefore, after replacing the ABS HU/CM, always perform the ABS related parts sensor initialization procedure to insure proper ABS operation.**


Caution

- **The internal parts of the ABS HU/CM could be damaged if dropped. Be careful not to drop the ABS HU/CM. Replace the ABS HU/CM if it is subjected to an impact.**

1. For SKYACTIV-D 1.5, perform the following procedure:
   (1) Remove the windshield wiper arm and blade. (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
   (2) Remove the cowl grille. (See COWL GRILLE REMOVAL/INSTALLATION.)
   (3) Remove the windshield wiper motor and link. (See WINDSHIELD WIPER MOTOR AND LINK REMOVAL/INSTALLATION.)
   (4) Remove the cowl panel. (See COWL PANEL REMOVAL/INSTALLATION.)
2. Remove the insulator.
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.
5. After installation, add brake fluid, bleed the air, and inspect for fluid leakage. (See BRAKE FLUID AIR BLEEDING.)
6. Perform the ABS related parts sensor initialization procedure (only when replacing it with a new one). (See ABS RELATED PARTS SENSOR INITIALIZATION PROCEDURE.)
7. Clear the DTCs from the memory. (See CLEARING DTC [ABS HU/CM].)

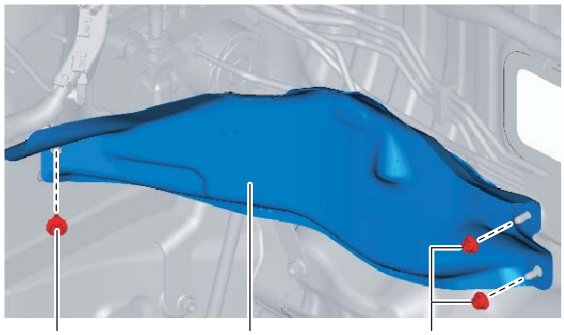


am2zzw00007311

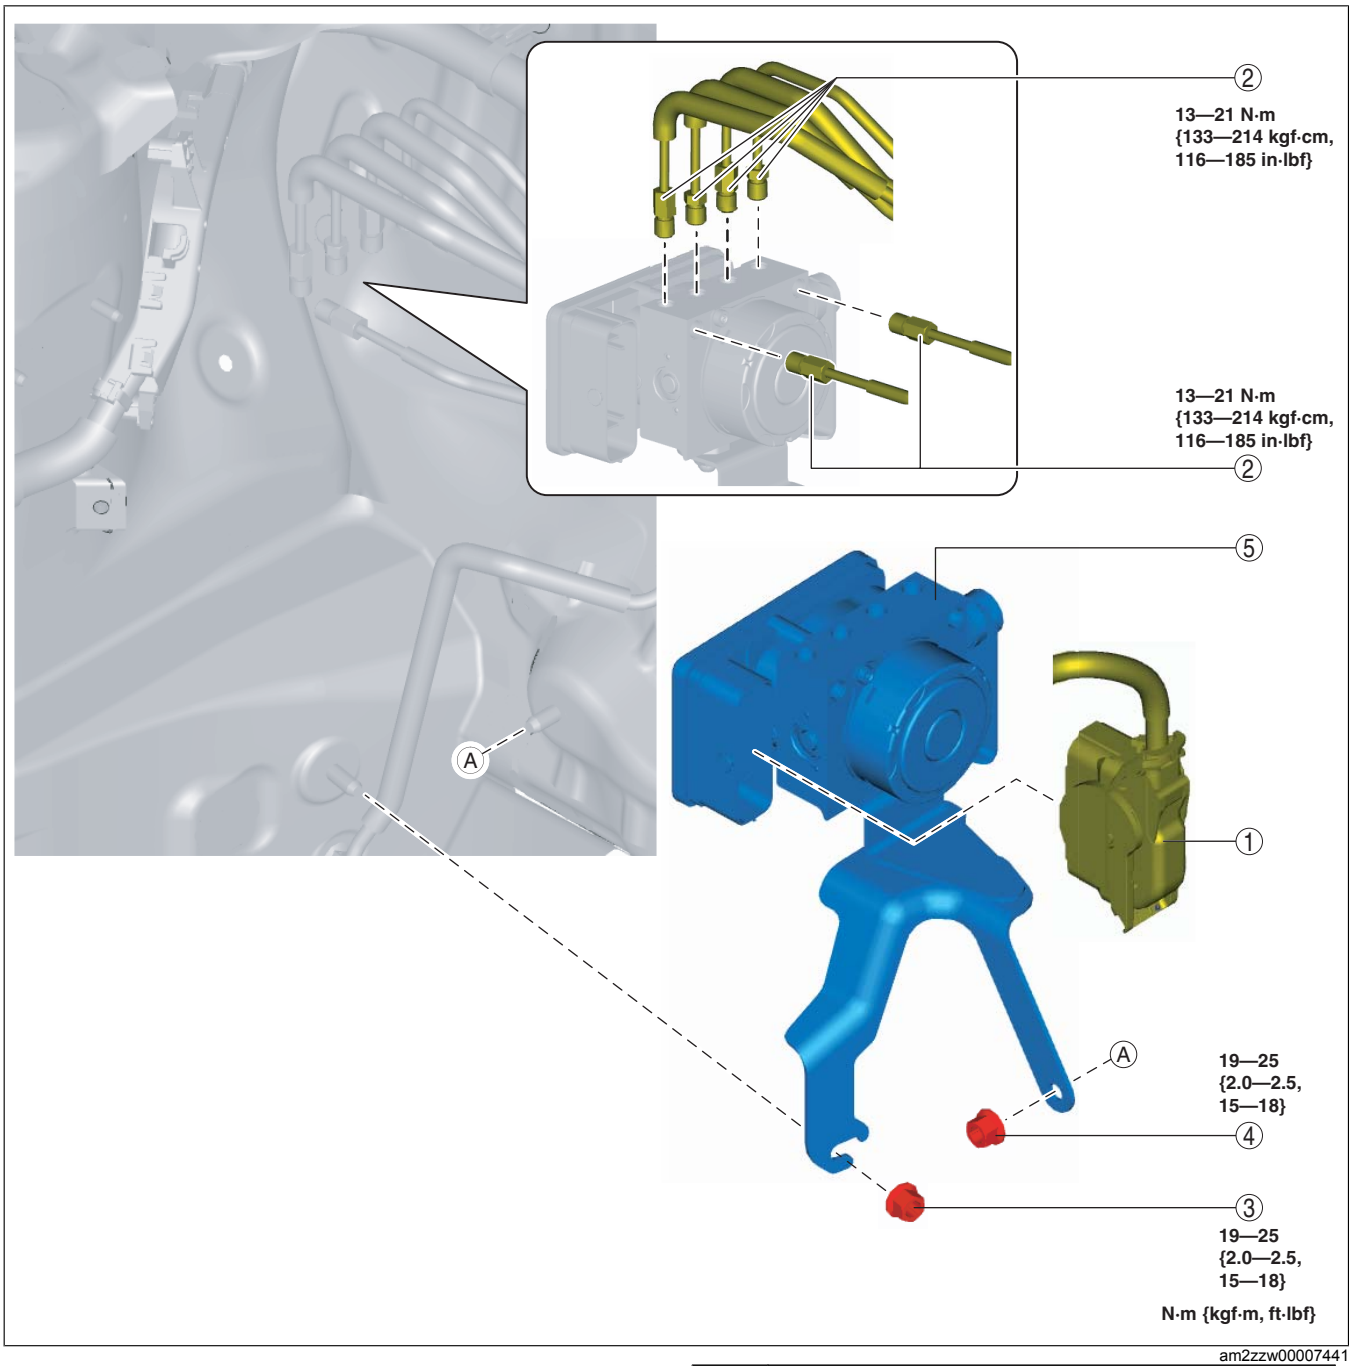

am2zzw00007441

1	ABS HU/CM Connector (See ABS HU/CM Connector Removal Note.) (See ABS HU/CM Connector Installation Note.)
2	Brake pipe (See Brake Pipe Removal Note.) (See Brake Pipe Installation Note.)

3	Nut
4	Nut
5	ABS HU/CM component

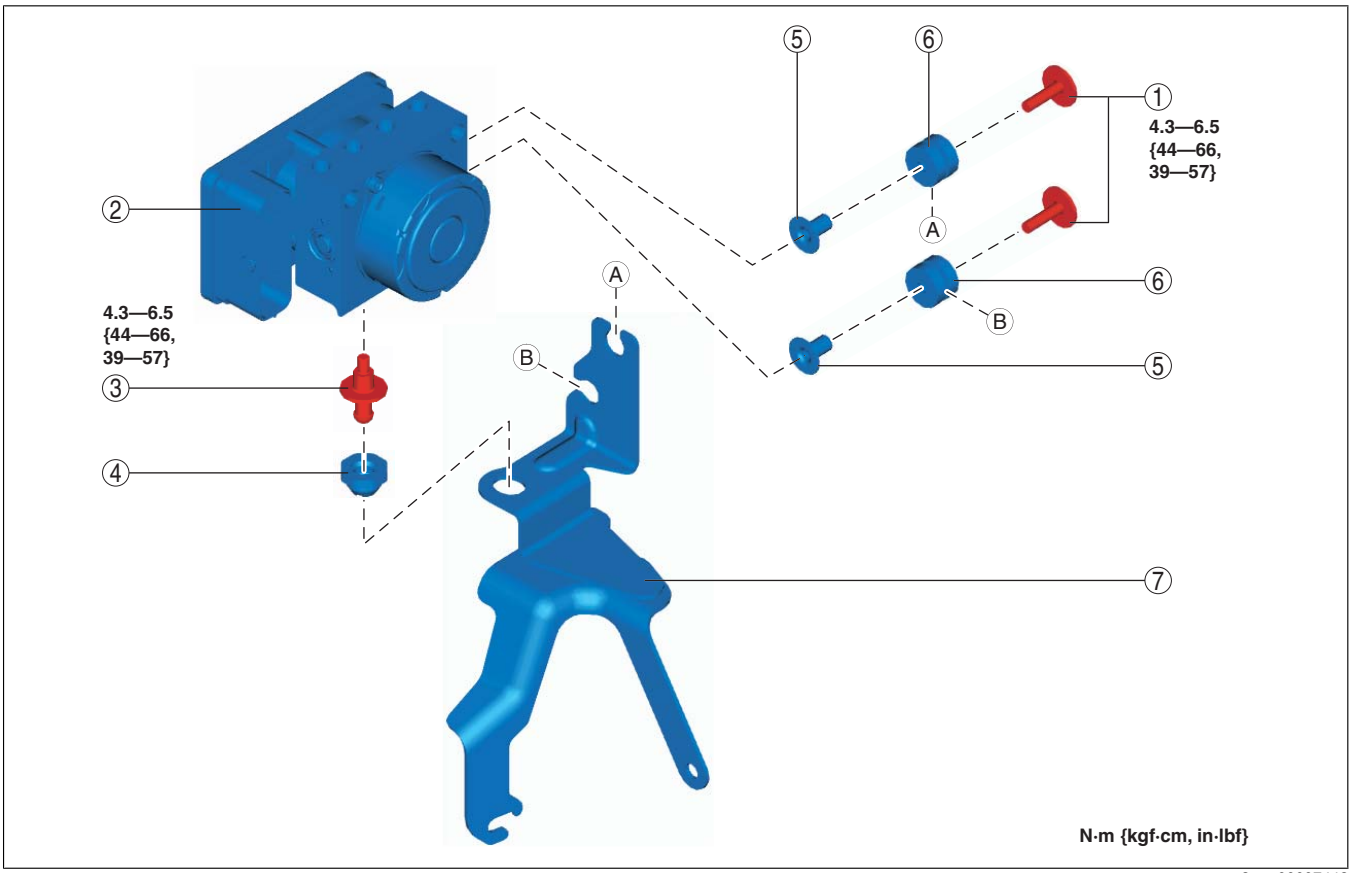

am2zzw00007442

1	Bolt
2	ABS HU/CM
3	Bolt
4	Mount rubber


5	Spacer
6	Mount rubber
7	Bracket

ABS HU/CM Connector Removal Note

Caution

- **If sand or other particles get into the connector, it may be difficult to remove. To prevent damaging the connector, be careful not to use excessive force when disconnecting it.**


1. Pull the lock lever down in the direction of the arrow while pressing the tab of the lock lever.
2. Disconnect the ABS HU/CM connector.

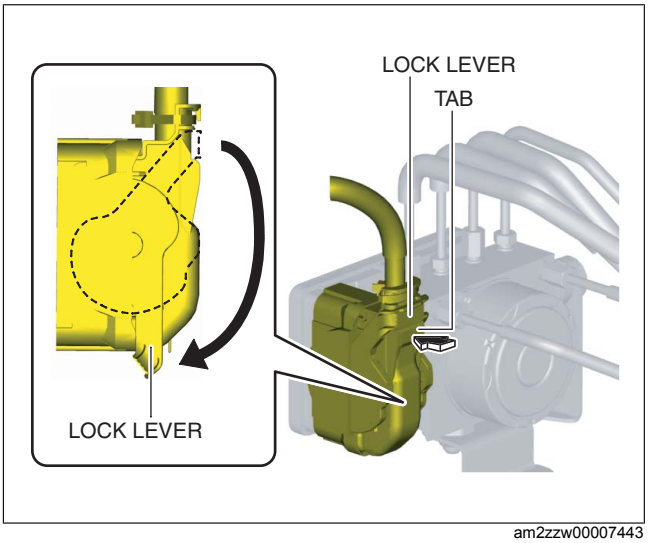

am2zzw00007443

Brake Pipe Removal Note


1. Place an alignment marks on the brake pipe and ABS HU/CM.
2. Apply protective tape to the connector to prevent brake fluid from entering.
3. Disconnect the brake pipes.

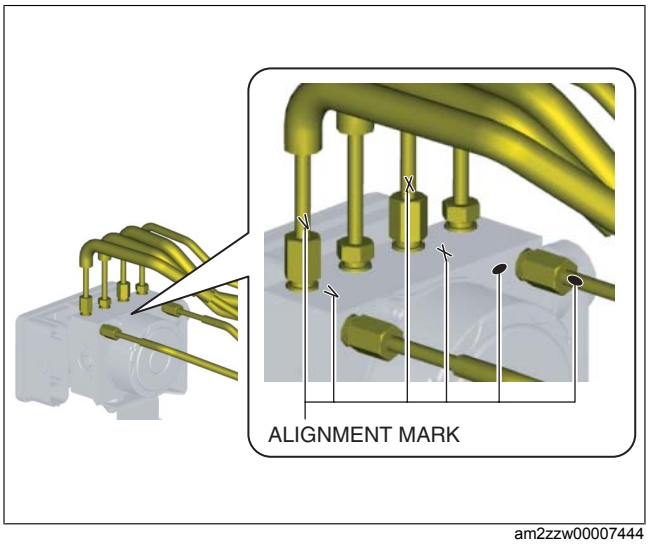

am2zzw00007444

Brake Pipe Installation Note


1. Align the marks made before removal and install the brake pipe to the ABS HU/CM and brake pipe joint referring to the figure.

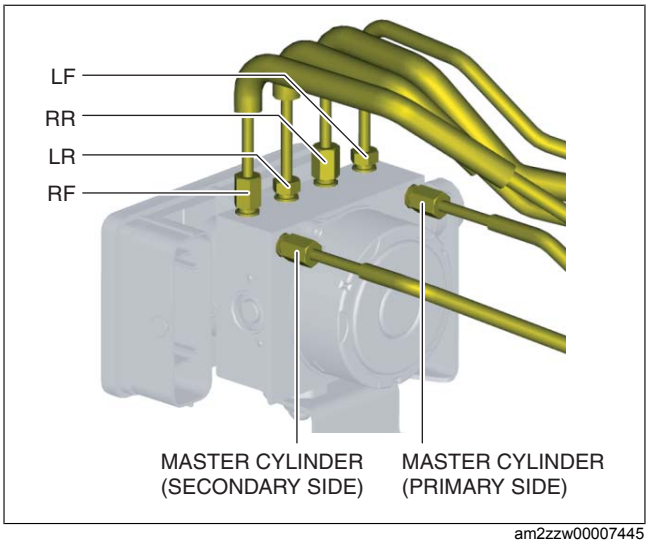

am2zzw00007445

ABS HU/CM Connector Installation Note

1. Connect the connector and pull the lock lever up in the direction of the arrow.
2. After connecting the connector, verify that the connector cover is completely pushed in.

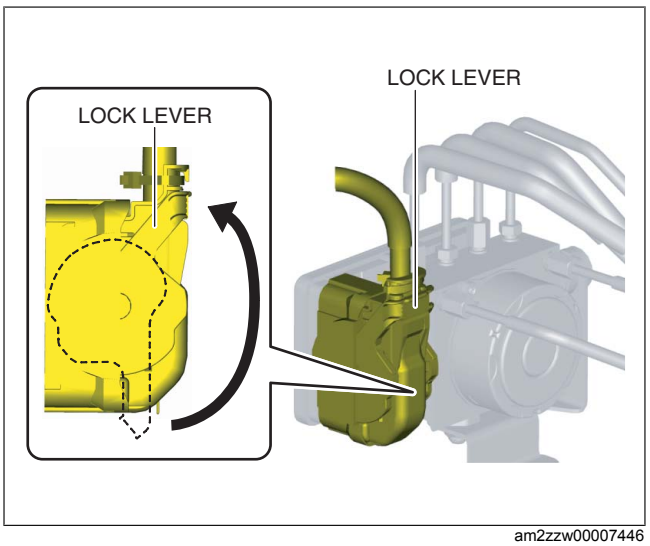

am2zzw00007446