
ABS RELATED PARTS SENSOR INITIALIZATION PROCEDURE

id041300803500

Warning
- **If the initialization procedure is not completed, the ABS will not operate properly and it might cause an unexpected accident. Therefore, after replacing the ABS HU/CM or SAS control module, always perform the initialization procedure to insure proper ABS operation.**


When using M-MDS
1. Inspect the wheel alignment and the tire pressure. (See FRONT WHEEL ALIGNMENT.) (See REAR WHEEL ALIGNMENT.) (See WHEEL AND TIRE SPECIFICATION.)
   - If there is any malfunction, adjust the applicable part.
2. Position the vehicle on level ground.
3. Switch the ignition off.
4. Connect the M-MDS to DLC-2.
5. After the vehicle is identified, select the following items from the initial screen of the M-MDS.
   1. Select “Chassis”.
   2. Select “ABS/DSC”.
   3. Select “Sensor Initialization”.
6. Then, select an item from the screen menu.
   - “Lateral Acceleration Sensor”
   - “Yaw Rate Sensor”
   - “Longitudinal Acceleration Sensor”
7. Perform the procedure according to the directions on the screen.
8. Drive the vehicle.
9. After **5 min or more** of driving, verify that the ABS system is normal.

When not using M-MDS
1. Inspect the wheel alignment and the tire pressure. (See FRONT WHEEL ALIGNMENT.) (See REAR WHEEL ALIGNMENT.) (See WHEEL AND TIRE SPECIFICATION.)
   - If there is any malfunction, adjust the applicable part.
2. Position the vehicle on level ground.
3. Switch the ignition ON (engine off) and wait for **30 s or more**.
4. With your left foot depressing the brake pedal, perform the following procedure **within 30 s**.
   (1) Operate the parking brake. (Brake system warning light illuminated)
   (2) Depress the accelerator pedal fully 2 times.
   (3) Release the parking brake. (Brake system warning light turns off)
   (4) Perform the same procedure one more time.

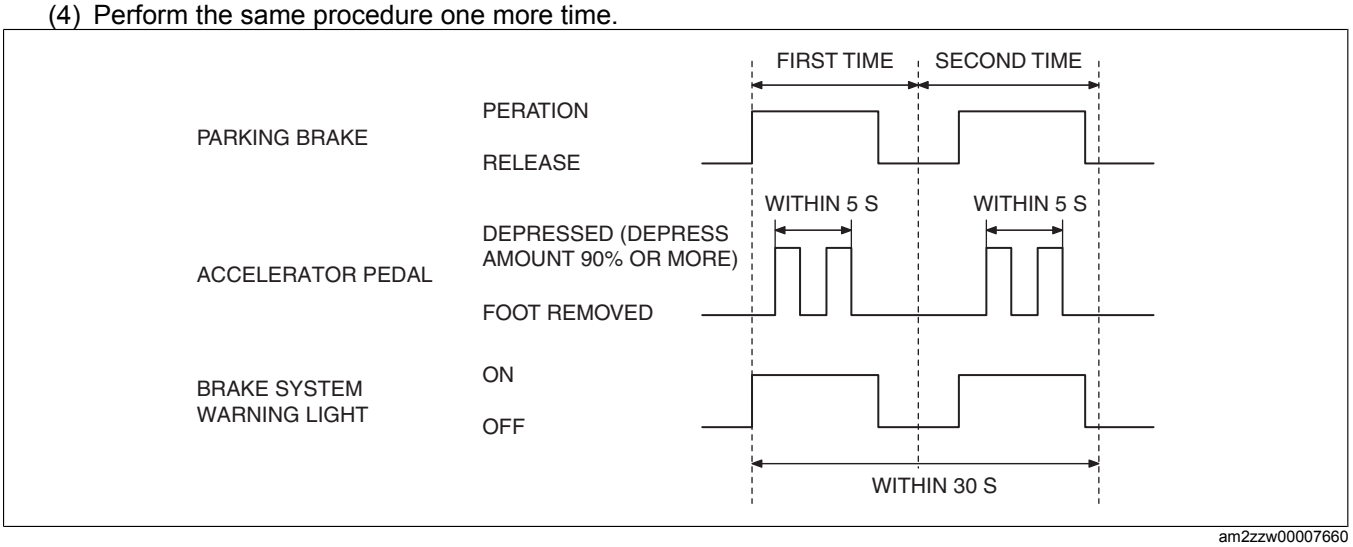

am2zzw00007660

5. Release your foot from the brake pedal.
6. **After 2 s**, verify that the following warning lights turns off after **approx. 3 s**.
   - BRAKE SYSTEM WARNING LIGHT
   - ABS WARNING LIGHT

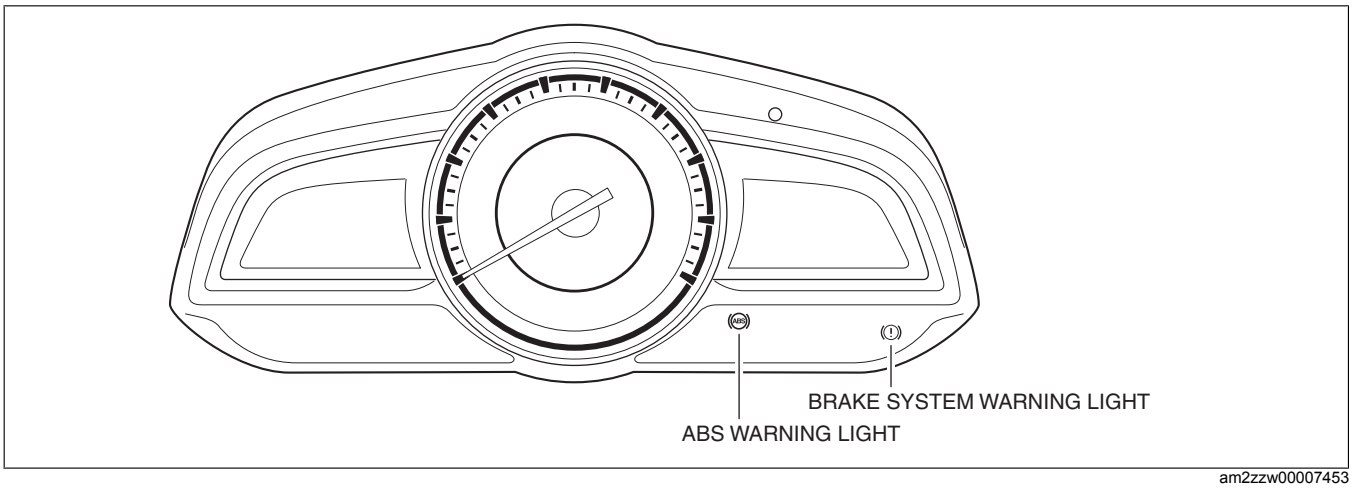

am2zzw00007453

Note
- If each warning light is not illuminated/does not turn off, switch the ignition off and repeat the procedure from the beginning.

7. Switch the ignition off.
8. Drive the vehicle.
9. After **5 min or more** of driving, verify that the ABS system is normal.