
TCS/DSC INDICATOR LIGHT

id041500108900

Purpose/Function

- The TCS/DSC indicator light, built into the instrument cluster, informs the driver of the following vehicle conditions.
  - — TCS is operating. (Drive wheel is slipping.)
  - — DSC is operating. (Vehicle side-slip condition.)
  - — DSC system malfunction.

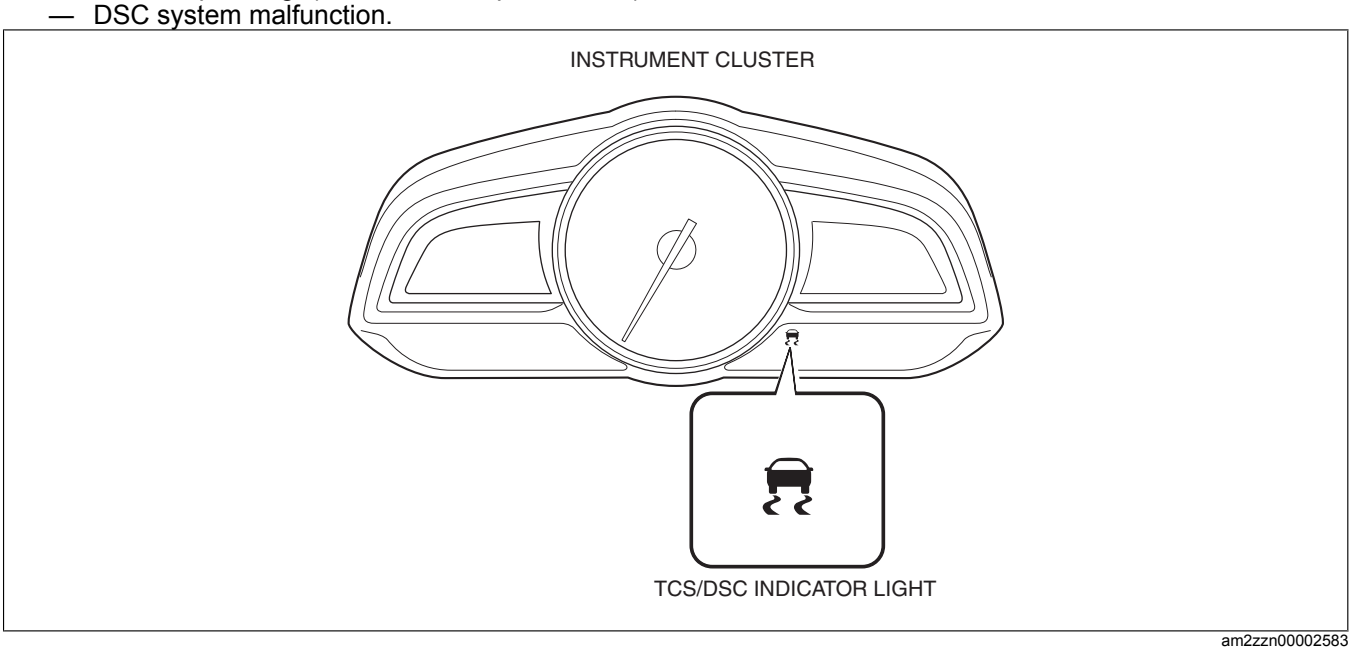

am2zzn00002583

Operation

- When the DSC system and CAN lines are normal, the TCS/DSC indicator light illuminates for approx. 3.0 s when the ignition is switched ON to check the light function. When the system is malfunctioning, the TCS/DSC indicator light remains illuminated.
- When the TCS or DSC are non-operational, operational and malfunctioning, the TCS/DSC indicator light operates according to the following table.

TCS/DSC indicator light operation

Item	TCS/DSC indicator light
TCS and DSC not operating	Not illuminated
TCS operating	Flashes (0.5 s intervals)
DSC operating	
DSC system malfunction	Illuminated

- For vehicles with center display, a warning message in the center display is displayed when the TCS/DSC indicator light is turned on. For the message content and verification method, refer to the CENTER DISPLAY. (See CENTER DISPLAY [WITH CENTER DISPLAY].)

Fail-safe

- Function not equipped.