REAR ABS WHEEL-SPEED SENSOR INSPECTION

id041500800200

Sensor Output Value Inspection

Caution
- **Resistance inspection using other testers may cause damage to the rear ABS wheel-speed sensor internal circuit. Be sure to use the M-MDS to inspect the rear ABS wheel-speed sensor.**


1. Switch the ignition off.
2. Connect the M-MDS to the DLC-2.
3. Select the following PIDs using the M-MDS:
   - WSPD_SEN_LR (LR wheel-speed sensor)
   - WSPD_SEN_RR (RR wheel-speed sensor)
4. Start the engine and drive the vehicle.
5. Verify that the display of the M-MDS shows the same value as the speedometer.
   - If there is any malfunction, replace the rear ABS wheel-speed sensor. (See REAR ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION [REAR BRAKE (DISC)].) (See REAR ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION [REAR BRAKE (DRUM)].)

Installation Visual Inspection

1. Inspect for the following:
   - If there is any malfunction, repair or replace the part.
   (1) Excessive play of the rear ABS wheel-speed sensor
   (2) Deformation of the rear ABS wheel-speed sensor
   (3) Deformation or damage of the ABS sensor rotor
   (4) Adhering foreign matter

Clearance Inspection

1. Remove the rear ABS wheel-speed sensor.
2. Measure the distance between the rear ABS wheel-speed sensor installation surface and the ABS sensor rotor. This is dimension A.
3. Calculate the clearance between the rear ABS wheel-speed sensor and the ABS sensor rotor using the following formula:
   Clearance (mm {in}) = A-14 {0.55}
4. Verify that the clearance between the rear ABS wheel-speed sensor and ABS sensor rotor is as indicated below.
   - If not within the specification, replace the rear ABS wheel-speed sensor. (See REAR ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION [REAR BRAKE (DISC)].) (See REAR ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION [REAR BRAKE (DRUM)].)

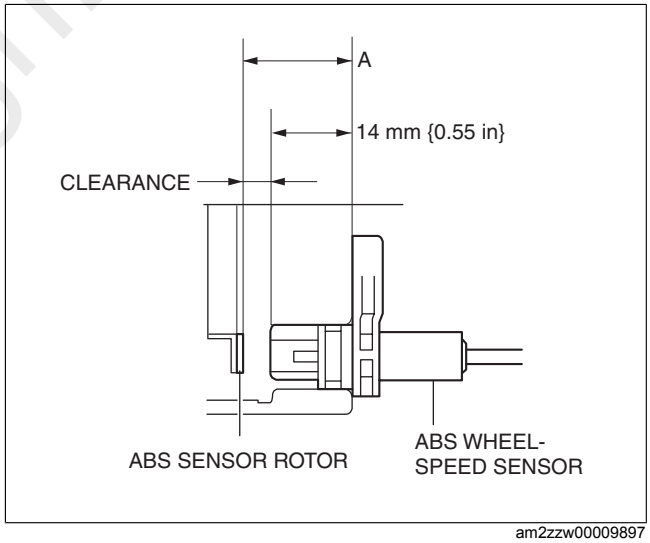

am2zzw00009897

Clearance
1.183—1.957 mm {0.04658—0.07704 in}

mydiagn.com