
FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION

id041500800300

1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.
3. After installation, verify that there is no twisting in the front ABS wheel-speed sensor.

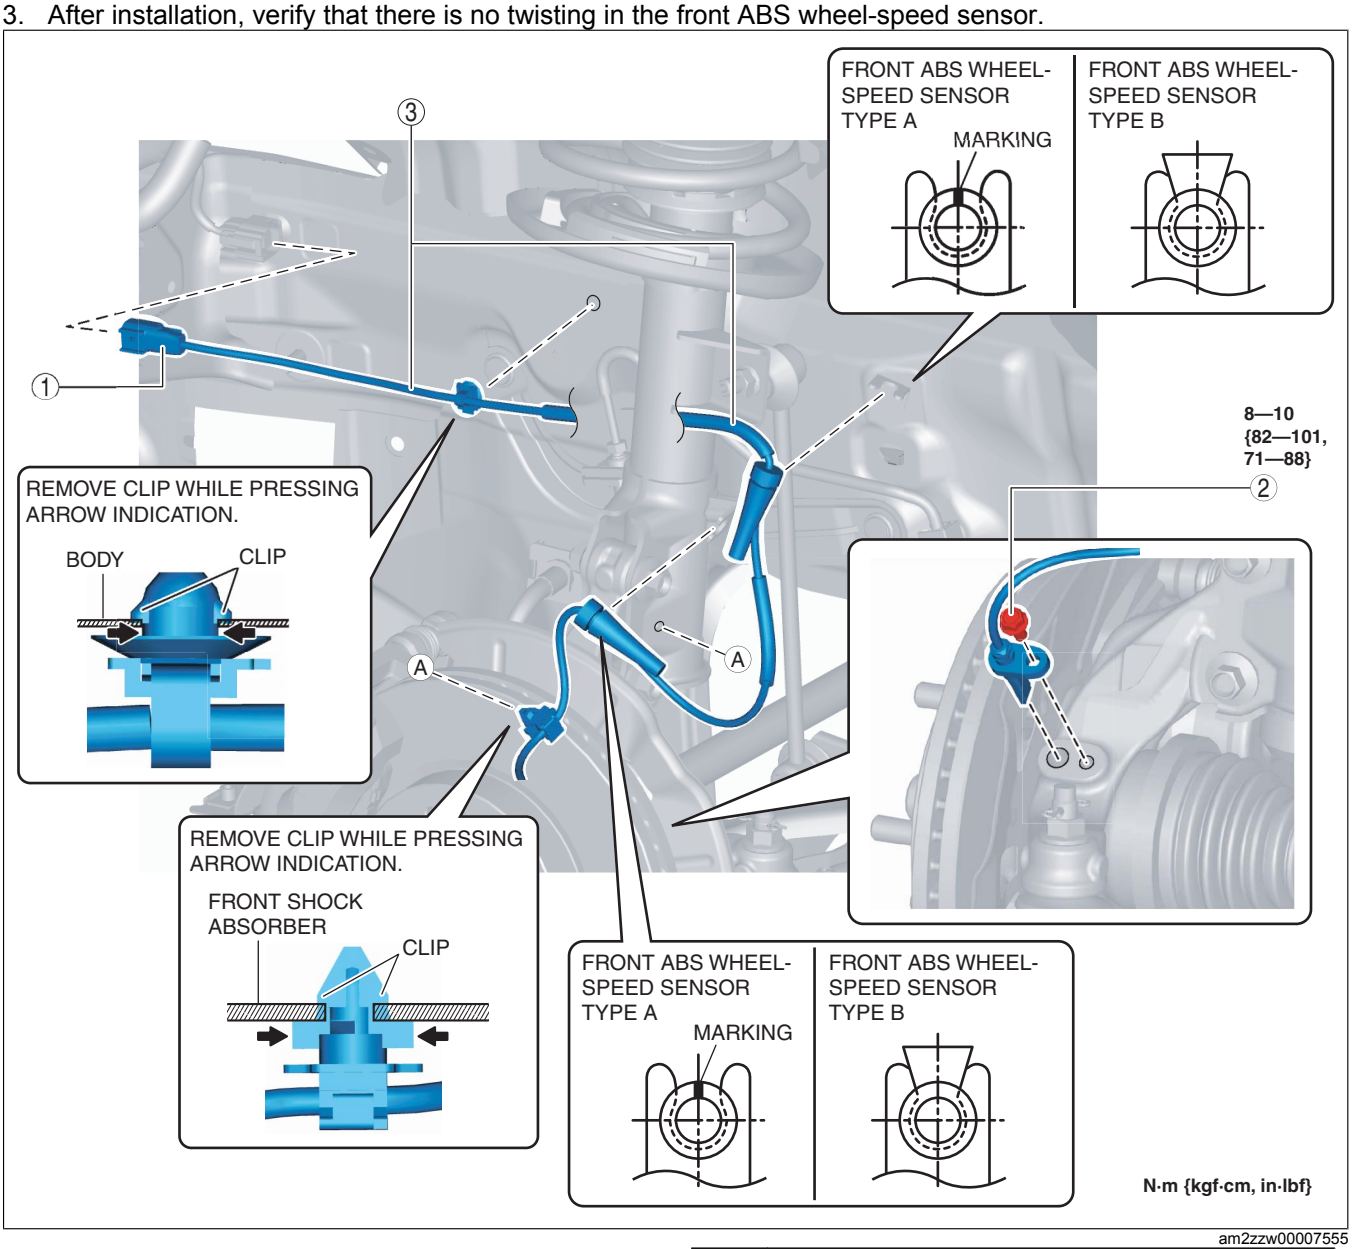

am2zzw00007555

1	Connector (See Connector Disconnection Note.)
2	Bolt
3	Front ABS wheel-speed sensor

Connector Disconnection Note

1. Peel back the mudguard and disconnect the connector. (See MUDGUARD REMOVAL/INSTALLATION.)