FRONT ABS WHEEL-SPEED SENSOR INSPECTION

id041500800400

Sensor Output Value Inspection

Caution
- **Resistance inspection using other testers may cause damage to the front ABS wheel-speed sensor internal circuit. Be sure to use the M-MDS to inspect the front ABS wheel-speed sensor.**

1. Switch the ignition off.
2. Connect the M-MDS to the DLC-2.
3. Select the following PIDs using the M-MDS:
   - WSPD_SEN_LF (LF wheel-speed sensor)
   - WSPD_SEN_RF (RF wheel-speed sensor)
4. Start the engine and drive the vehicle.
5. Verify that the display of the M-MDS shows the same value as the speedometer.
   - If there is any malfunction, replace the front ABS wheel-speed sensor. (See FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION.)

Installation Visual Inspection


1. Inspect for the following:
   - If there is any malfunction, repair or replace the part.
   (1) Excessive play of the front ABS wheel-speed sensor
   (2) Deformation of the front ABS wheel-speed sensor
   (3) Deformation or damage of the ABS sensor rotor
   (4) Adhering foreign matter

Clearance Inspection

Preparation prior to inspection

1. Remove the front ABS wheel-speed sensor. (See FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION.)
2. Remove the wheel hub and steering knuckle as a single unit. (See WHEEL HUB, STEERING KNUCKLE REMOVAL/INSTALLATION.)
3. Install the front ABS wheel-speed sensor to the removed wheel hub, steering knuckle component, and tighten to the specified torque.

   Tightening torque
   8—10 N·m {82—101 kgf·cm, 71—88 in·lbf}

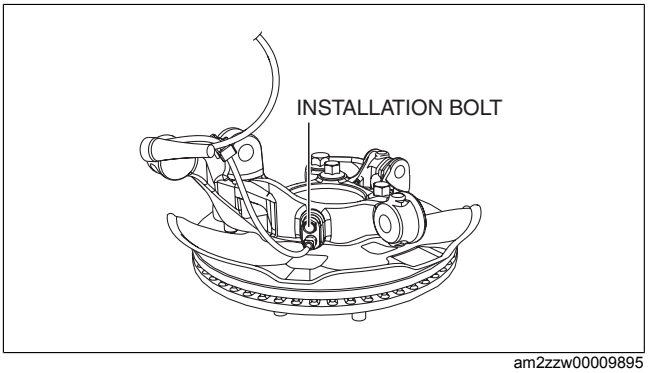


am2zzw00009895

Clearance Inspection

1. Measure the gap between the front ABS wheel-speed sensor and ABS sensor rotor using a feeler gauge.
   - If not within the specification, replace the front ABS wheel-speed sensor. (See FRONT ABS WHEEL-SPEED SENSOR REMOVAL/ INSTALLATION.)

   Clearance
   1.815—2.835 mm {0.0715—0.1116 in}

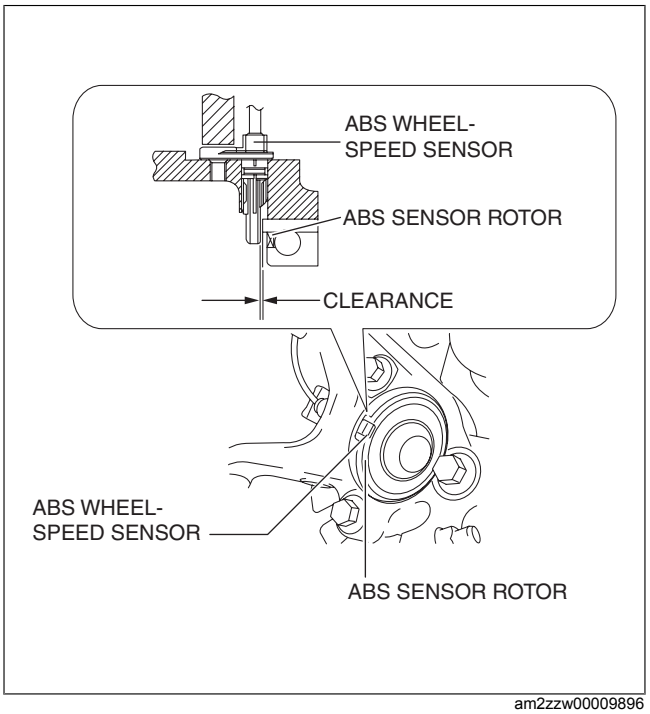

am2zzw00009896

Servicing after inspection

1. Remove the front ABS wheel-speed sensor from the wheel hub, steering knuckle component.
2. Install the wheel hub, steering knuckle component. (See WHEEL HUB, STEERING KNUCKLE REMOVAL/ INSTALLATION.)
3. Install the front ABS wheel-speed sensor. (See FRONT ABS WHEEL-SPEED SENSOR REMOVAL/ INSTALLATION.)
4. Inspect the front wheel alignment. (See FRONT WHEEL ALIGNMENT.)