DSC HU/CM REMOVAL/INSTALLATION [R.H.D.]

id0415008010b5

Warning

- **If the DSC HU/CM configuration is not completed, it could result in an unexpected accident due to the DSC being inoperative. If the DSC HU/CM is replaced, always use the automatic configuration function so that the DSC operation conditions are correct.**
- **If the DSC related parts sensor initialization procedure is not completed, the DSC will not operate properly and it might cause an unexpected accident. Therefore, after replacing the DSC HU/CM, always perform the DSC related parts sensor initialization procedure to insure proper DSC operation.**


Caution

- **The internal parts of the DSC HU/CM could be damaged if dropped. Be careful not to drop the DSC HU/CM. Replace the DSC HU/CM if it is subjected to an impact.**

Note

- The DSC HU/CM prior to replacement stores the vehicle specification information.
- A new DSC HU/CM does not store any vehicle specification information.
- When the ignition is switched ON (engine off or on) after the DSC HU/CM is replaced, the DSC HU/CM reads the vehicle specification information sent via CAN communication from the instrument cluster and stores it.

1. For SKYACTIV-G 1.3 and SKYACTIV-G 1.5, the following parts are removed as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
   - Fresh-air duct
   - Air hose
   - Air cleaner cover
   - Air cleaner element
   - Air cleaner case
2. Remove the battery and battery tray. (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. For the SKYACTIV-D 1.5 (i-ELOOP) vehicle, perform the following procedure.
   (1) Remove the DC-DC converter (i-ELOOP) installation bolt. (See DC-DC CONVERTER (i-ELOOP) REMOVAL/INSTALLATION [WITH i-ELOOP (SKYACTIV-D 1.5)].)
   (2) Disconnect the DC-DC converter (i-ELOOP) connector. (See DC-DC CONVERTER (i-ELOOP) REMOVAL/INSTALLATION [WITH i-ELOOP (SKYACTIV-D 1.5)].)
   (3) Set the DC-DC converter (i-ELOOP) out of the way.
4. Remove in the order indicated in the table.
5. Install in the reverse order of removal.
6. After installation, add brake fluid, bleed the air, and inspect for fluid leakage. (See BRAKE FLUID AIR BLEEDING.)
7. If the DSC HU/CM is replaced, perform the auto configuration and the initialization of the sensors for DSC-related parts.
   (1) Switch the ignition ON (engine off or on) and wait for **10 s or more**.
   (2) Switch the ignition off and wait for **3 s or more**.
   (3) Switch the ignition ON (engine off or on) and wait for **3 s or more** for the DSC HU/CM auto configuration to complete.
   (4) Clear the DTC. (See CLEARING DTC [DSC HU/CM].)
   (5) Switch the ignition off and wait for **3 s or more**.
   (6) Switch the ignition ON (engine off or on) and wait for **10 s or more**.
   (7) Using the M-MDS, verify that DTCs U2101:00/U2300:52/U2300:54/U2300:55/U2300:56/U2300:64 are not displayed.
      - If DTCs U2101:00/U2300:52/U2300:54/U2300:55/U2300:56/U2300:64 are displayed, go to the DTC troubleshooting procedure. (See DTC U2101:00/U2300:52/U2300:54/U2300:55/U2300:56/U2300:64 [DSC HU/CM].)
   (8) Perform the sensor initialization for the DSC-related parts. (See DSC RELATED PARTS SENSOR INITIALIZATION PROCEDURE.)
   (9) Clear the DTC. (See CLEARING DTC [DSC HU/CM].)
   (10) Switch the ignition off and wait for **3 s or more**.
   (11) Switch the ignition ON (engine off or on) and wait for **10 s or more**.
   (12) Using the M-MDS, verify that DTCs C0044:54/C0061:54/C0062:54/C0063:54 are not displayed.
      - If DTCs C0044:54/C0061:54/C0062:54/C0063:54 are displayed, go to the DTC troubleshooting procedure. (See DTC C0044:28/C0044:47/C0044:49/C0044:51/C0044:54/C0044:64/C0044:8F [DSC HU/CM].) (See DTC C0061:54/C0062:54/C0063:54 [DSC HU/CM].)

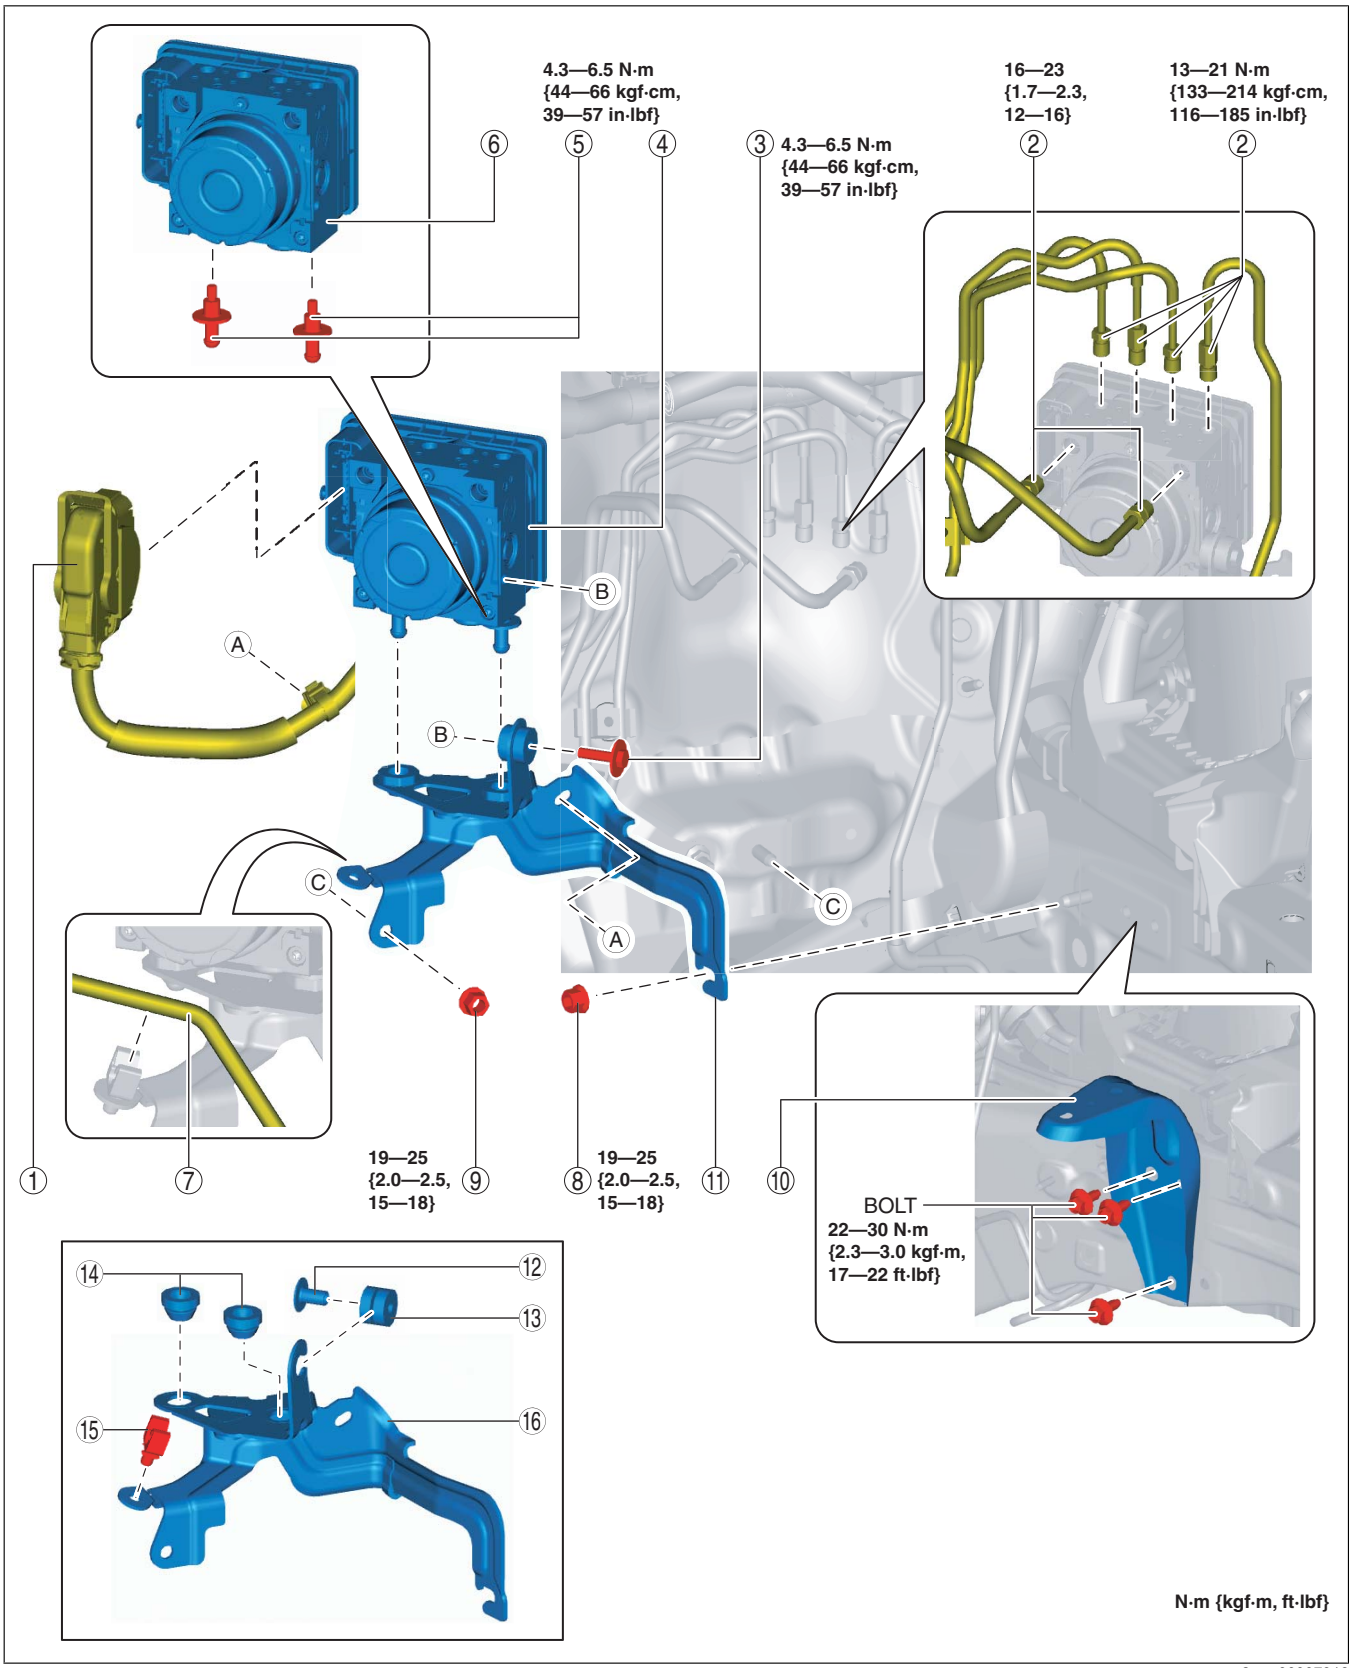

am2zzw00007318

1	DSC HU/CM Connector (See DSC HU/CM Connector Removal Note.) (See DSC HU/CM Connector Installation Note.)
2	Brake pipe (See Brake Pipe Removal Note.) (See Brake Pipe Installation Note.)
3	Bolt

4	DSC HU/CM component
5	Bolt
6	DSC HU/CM
7	Clutch pipe (MTX)
8	Nut
9	Nut
10	Battery tray bracket
11	Bracket component

12	Spacer
13	Mount rubber
14	Mount rubber


15	Clip (MTX)
16	Bracket

DSC HU/CM Connector Removal Note

Caution

- **If sand or other particles get into the connector, it may be difficult to remove. To prevent damaging the connector, be careful not to use excessive force when disconnecting it.**


1. Pull the lock lever up in the direction of the arrow while pressing the tab of the lock lever.
2. Disconnect the DSC HU/CM connector.

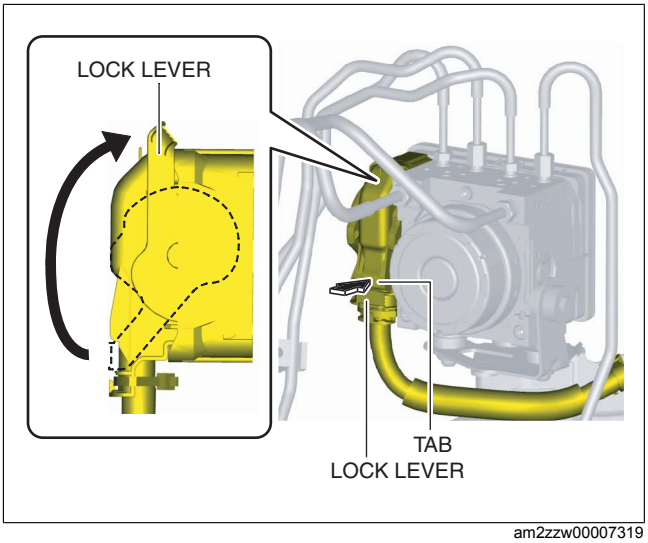

am2zzw00007319

Brake Pipe Removal Note


1. Place an alignment marks on the brake pipe and DSC HU/CM.
2. Apply protective tape to the connector to prevent brake fluid from entering.
3. Disconnect the brake pipes.

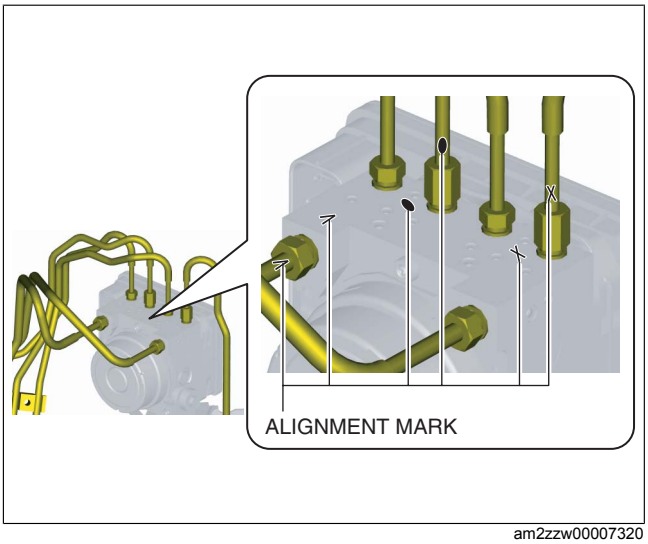

am2zzw00007320

Brake Pipe Installation Note


1. Align the marks made before removal and install the brake pipe to the DSC HU/CM and brake pipe joint referring to the figure.

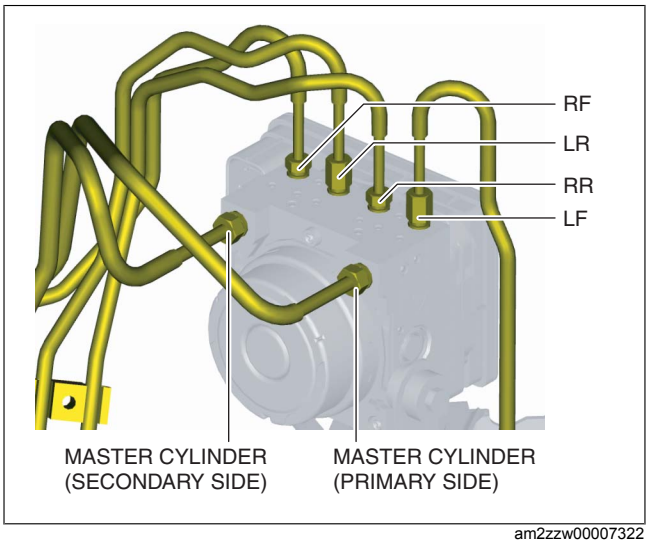

am2zzw00007322

DSC HU/CM Connector Installation Note

1. Connect the connector and pull the lock lever down in the direction of the arrow.
2. After connecting the connector, verify that the connector cover is completely pushed in.

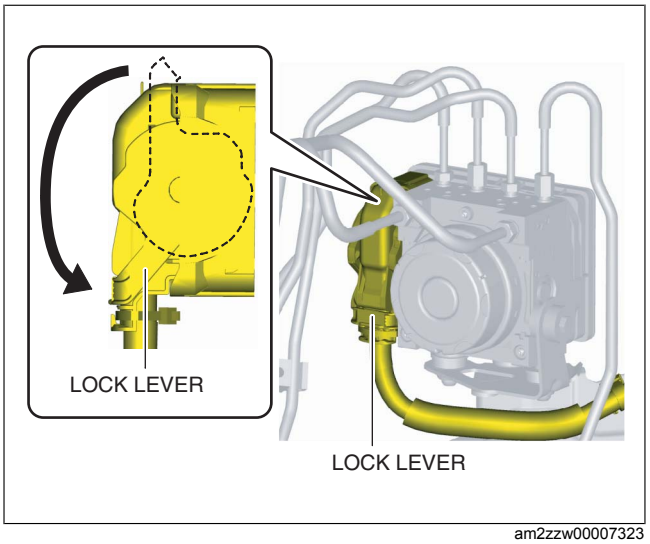

am2zzw00007323