
DSC HU/CM INSPECTION

id041500801100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Disconnect the DSC HU/CM connector. (See DSC HU/CM REMOVAL/INSTALLATION [L.H.D.].) (See DSC HU/CM REMOVAL/INSTALLATION [R.H.D.].)
3. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
4. Attach the tester lead to the DSC HU/CM wiring harness-side connector and inspect voltage, continuity, or resistance according to the Terminal Voltage Table (Reference) on the table.

Terminal Voltage Table (Reference)

DSC HU/CM WIRING HARNESS-SIDE CONNECTOR

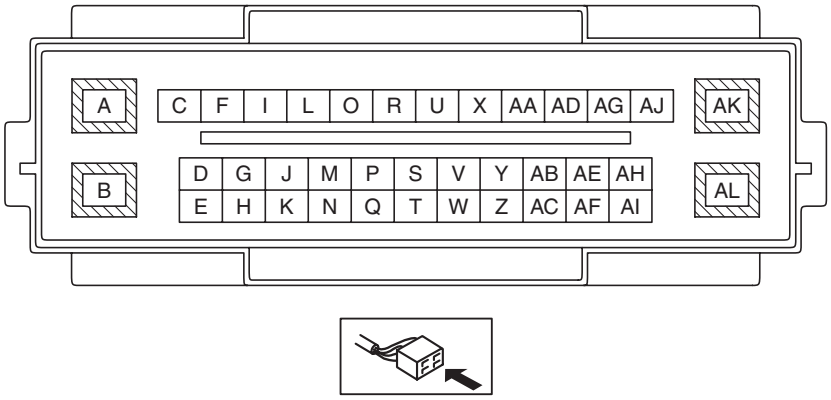

ac5wzw00000003

Terminal	Signal name	Connected to	Measured item	Measured terminal (measurement condition)	Specification	Inspection item(s)
A	Power supply (solenoid operation)	Battery	Voltage	Under any condition	B+	• Wiring harness (DSC HU/CM terminal A—battery)
B	Power supply (pump motor operation)	Battery	Voltage	Under any condition	B+	• Wiring harness (DSC HU/CM terminal B—battery)
C	RF ABS wheel-speed sensor (-)	RF ABS wheel-speed sensor	Continuity	DSC HU/CM terminal C—RF ABS wheel-speed sensor terminal B	Continuity detected	• Wiring harness (DSC HU/CM terminal C—RF ABS wheel-speed sensor terminal B)
D	—	—	—	—	—	—
E	—	—	—	—	—	—
F	RF ABS wheel-speed sensor (+)	RF ABS wheel-speed sensor	Continuity	DSC HU/CM terminal F—RF ABS wheel-speed sensor terminal A	Continuity detected	• Wiring harness (DSC HU/CM terminal F—RF ABS wheel-speed sensor terminal A)
G	—	—	—	—	—	—
H	—	—	—	—	—	—
I	—	—	—	—	—	—
J	—	—	—	—	—	—
K	—	—	—	—	—	—
L	LR ABS wheel-speed sensor (+)	LR ABS wheel-speed sensor	Continuity	DSC HU/CM terminal L—LR ABS wheel-speed sensor terminal A	Continuity detected	• Wiring harness (DSC HU/CM terminal L—LR ABS wheel-speed sensor terminal A)
M	—	—	—	—	—	—
N	—	—	—	—	—	—
O	LR ABS wheel-speed sensor (-)	LR ABS wheel-speed sensor	Continuity	DSC HU/CM terminal O—LR ABS wheel-speed sensor terminal B	Continuity detected	• Wiring harness (DSC HU/CM terminal O—LR ABS wheel-speed sensor terminal B)
P	—	—	—	—	—	—

Terminal	Signal name	Connected to	Measured item	Measured terminal (measurement condition)	Specification	Inspection item(s)
Q	Power supply (system)	IG1 relay	Voltage	Ignition ON (engine off)	B+	• Wiring harness (DSC HU/CM terminal Q—IG1 relay)
				Ignition off	1.0 V or less	
R	—	—	—	—	—	—
S	—	—	—	—	—	—
T	—	—	—	—	—	—
U	—	—	—	—	—	—
V	—	—	—	—	—	—
W	—	—	—	—	—	—
X	RR ABS wheel-speed sensor (-)	RR ABS wheel-speed sensor	Continuity	DSC HU/CM terminal X—RR ABS wheel-speed sensor terminal B	Continuity detected	• Wiring harness (DSC HU/CM terminal X—RR ABS wheel-speed sensor terminal B)
Y	—	—	—	—	—	—
Z	—	—	—	—	—	—
AA	RR ABS wheel-speed sensor (+)	RR ABS wheel-speed sensor	Continuity	DSC HU/CM terminal AA—RR ABS wheel-speed sensor terminal A	Continuity detected	• Wiring harness (DSC HU/CM terminal AA—RR ABS wheel-speed sensor terminal A)
AB	—	—	—	—	—	—
AC	CAN_L	CAN related module	Because this terminal is for communication, determination using terminal voltage inspection is not possible. Perform the inspection using the DTC inspection.			
AD	—	—	—	—	—	—
AE	—	—	—	—	—	—
AF	CAN_H	CAN related module	Because this terminal is for communication, determination using terminal voltage inspection is not possible. Perform the inspection using the DTC inspection.			
AG	LF ABS wheel-speed sensor (+)	LF ABS wheel-speed sensor	Continuity	DSC HU/CM terminal AG—LF ABS wheel-speed sensor terminal A	Continuity detected	• Wiring harness (AG—LF ABS wheel-speed sensor terminal A)
AH	—	—	—	—	—	—
AI*1	Brake light	Brake light relay	Voltage	Brake pedal depressed	B+	• Wiring harness (DSC HU/CM terminal AI—Brake light relay)
				Brake pedal released	1.0 V or less	
AJ	LF ABS wheel-speed sensor (-)	LF ABS wheel-speed sensor	Continuity	DSC HU/CM terminal AJ—LF ABS wheel-speed sensor terminal B	Continuity detected	• Wiring harness (DSC HU/CM terminal AJ—LF ABS wheel-speed sensor terminal B)
AK	—	—	—	—	—	—
AL	Ground	Ground point	Continuity	DSC HU/CM terminal AL—ground point	Continuity detected	• Wiring harness (DSC HU/CM terminal AL—ground point)

*1 : With Smart City Brake Support (SCBS)