
BRAKE FLUID PRESSURE SENSOR INSPECTION


id041500801500

1. Switch the ignition off.
2. Disconnect the brake pipe from the LF brake hose.

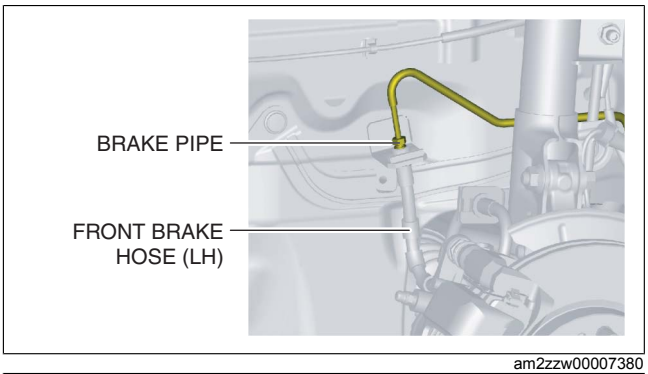

am2zzw00007380

3. Install the **SSTs** to the brake pipe as shown in the figure.
4. Bleed the brake line and the **SSTs** of air. Bleed the air form the **SSTs** using bleeder screw A.
5. Connect the M-MDS to the DLC-2.
6. Select the “BRK_F_P_R” PID.
7. Start the engine.
8. Depress the brake pedal, and confirm that the fluid pressure value of the **SST** (gauge) and the value shown on the M-MDS are equal.
   - If the fluid pressures are different, replace the DSC HU/CM. (See DSC HU/CM REMOVAL/INSTALLATION [L.H.D.].) (See DSC HU/CM REMOVAL/INSTALLATION [R.H.D.].)
9. After the inspection, remove the **SSTs**, install the brake hose and brake pipe to the original positions. (See BRAKE HOSE (FRONT) REMOVAL/INSTALLATION.)
10. Bleed the air from the brake line. (See BRAKE FLUID AIR BLEEDING.)

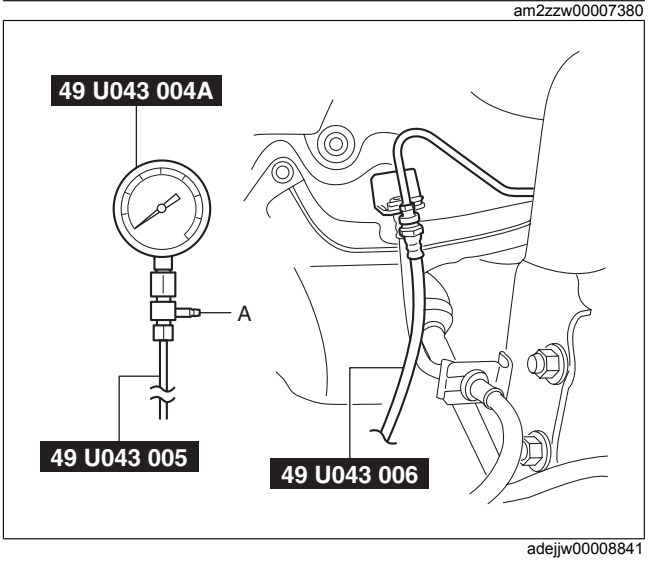

adejjw00008841