DSC RELATED PARTS SENSOR INITIALIZATION PROCEDURE

id041500870200

Warning

- **If the initialization procedure is not completed, the DSC will not operate properly and it might cause an unexpected accident. Therefore, after replacing the DSC HU/CM or SAS control module, always perform the initialization procedure to insure proper DSC operation.**

When using M-MDS

Note

- Perform initialization on the sensors shown in the following table.

Replacement part	Initialization items			
	Brake fluid pressure sensor	Lateral Acceleration Sensor	Yaw Rate Sensor	Longitudinal Acceleration Sensor
DSC HU/CM	Implement	Implement	Implement	Implement
SAS control module	—	Implement	Implement	Implement


1. Inspect the wheel alignment and the tire pressure. (See FRONT WHEEL ALIGNMENT.) (See REAR WHEEL ALIGNMENT.) (See WHEEL AND TIRE SPECIFICATION.)
   - If there is any malfunction, adjust the applicable part.
2. Position the vehicle on level ground.
3. Connect the M-MDS to DLC-2.
4. After the vehicle is identified, select the following items from the initial screen of the M-MDS.
   1. Select “Chassis”.
   2. Select “ABS/DSC”.
   3. Select “Sensor Initialization”.
5. Then, select an item from the screen menu.
   - “Brake fluid pressure sensor”
   - “Lateral Acceleration Sensor”
   - “Yaw Rate Sensor”
   - “Longitudinal Acceleration Sensor”
6. Perform the procedure according to the directions on the screen.
7. Drive the vehicle.
8. After **5 min or more** of driving, verify that the DSC system is normal.

When not using M-MDS

Note

- Depending on the nature of the servicing performed prior to implementing the initialization, a warning light may be illuminated.


1. Inspect the wheel alignment and the tire pressure. (See FRONT WHEEL ALIGNMENT.) (See REAR WHEEL ALIGNMENT.) (See WHEEL AND TIRE SPECIFICATION.)
   - If there is any malfunction, adjust the applicable part.
2. Position the vehicle on level ground.
3. Switch the ignition ON (engine off) and wait for **30 s or more**.
4. With your left foot depressing the brake pedal, perform the following procedure **within 30 s**.
   (1) Operate the parking brake. (Brake system warning light illuminated)
   (2) Depress the accelerator pedal fully 2 times.
   (3) Release the parking brake. (Brake system warning light turns off)
   (4) Perform the same procedure one more time.

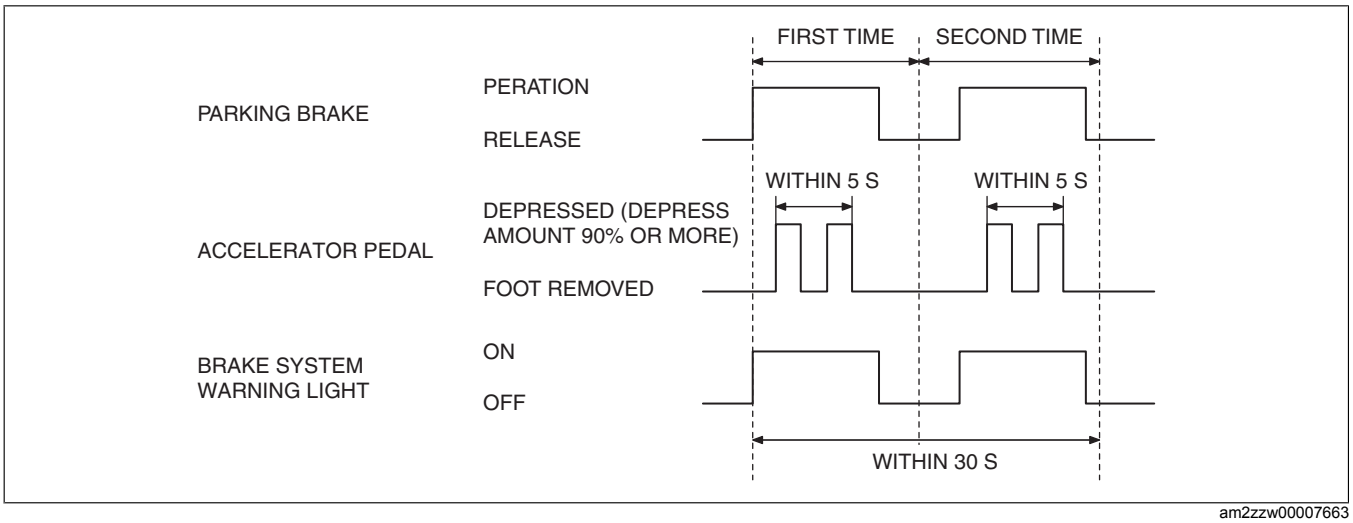

am2zzw00007663

5. Release your foot from the brake pedal.
6. **After 2 s**, verify that the following warning lights/indicator lights turns off after **approx. 3 s**.
   - BRAKE SYSTEM WARNING LIGHT
   - ABS WARNING LIGHT
   - TCS/DSC INDICATOR LIGHT
   - DSC OFF INDICATOR LIGHT

Note
- Depending on the nature of the work performed prior to implementing the initialization, a warning light may be illuminated.

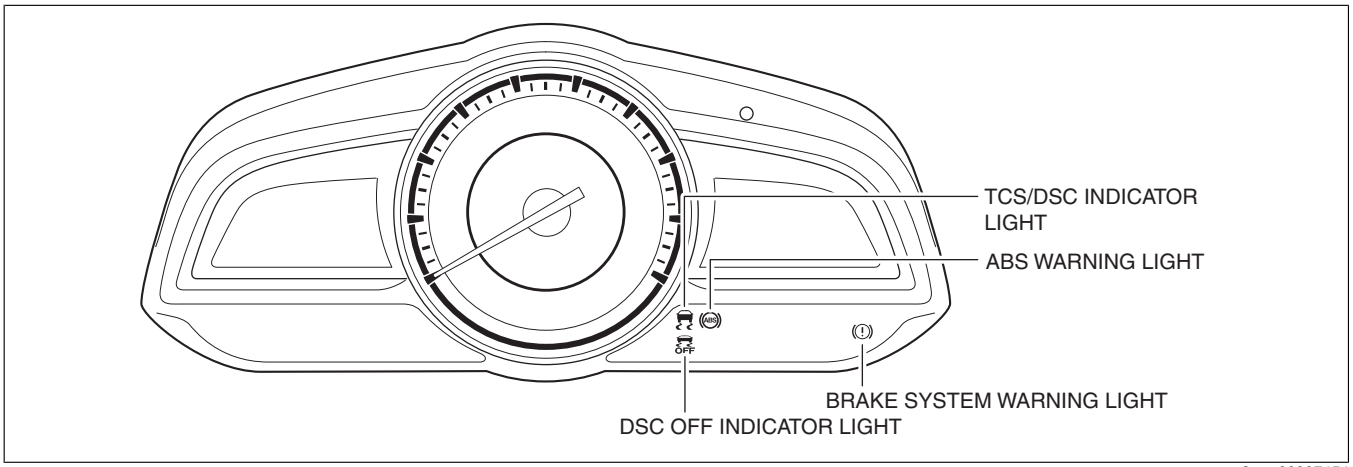

am2zzw00007454

Note
- If each warning light/indicator light is not illuminated/does not turn off, switch the ignition off and repeat the procedure from the beginning.

7. Switch the ignition off.
8. Drive the vehicle.
9. After **5 min or more** of driving, verify that the DSC system is normal.