
CLUTCH LOCATION INDEX [F65M-R]

id0510q1156300

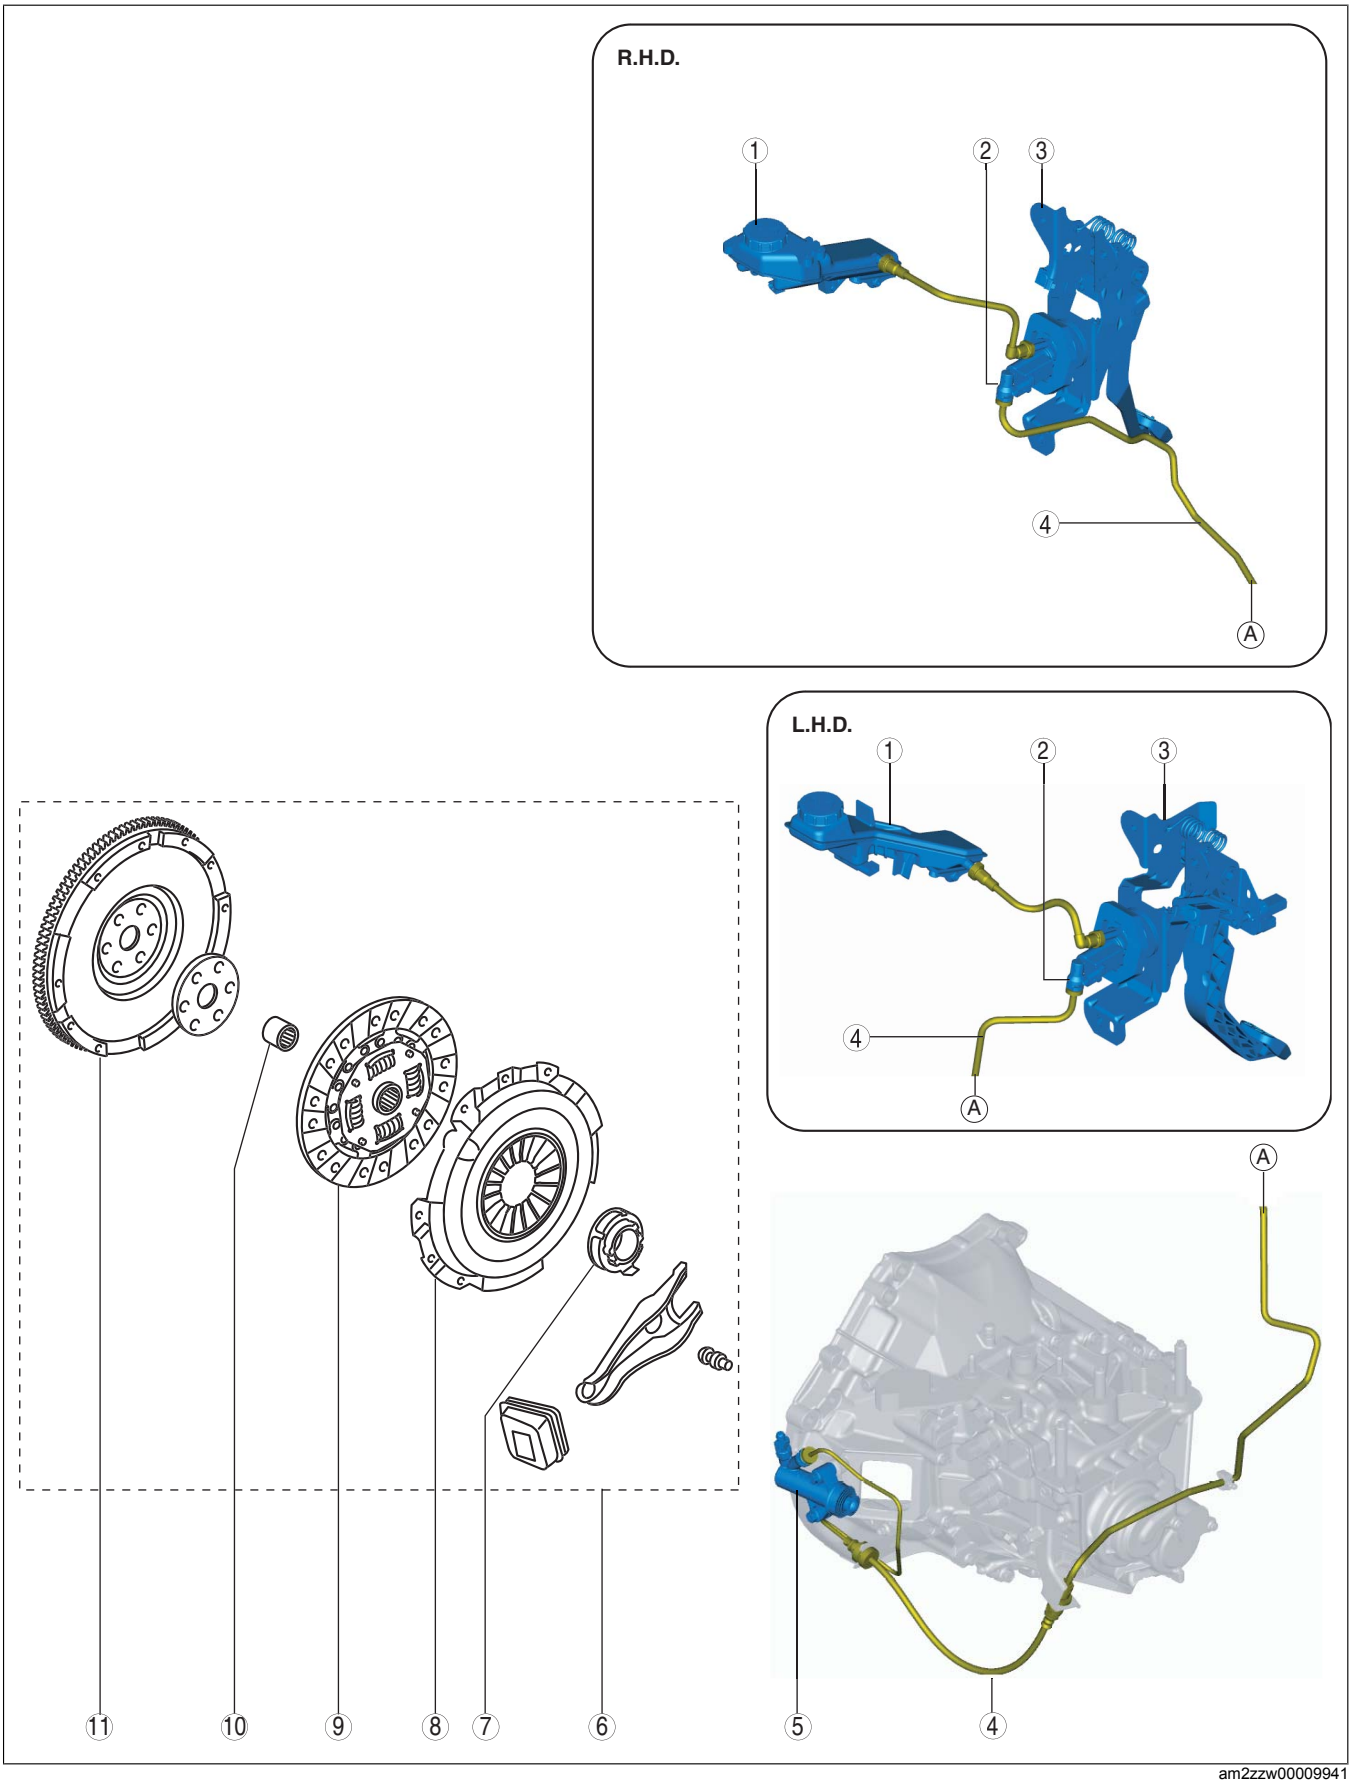

am2zzw00009941

1	Reserve tank (See CLUTCH FLUID INSPECTION [F65M-R].) (See CLUTCH FLUID REPLACEMENT/AIR BLEEDING [F65M-R].)

2	Clutch master cylinder (See CLUTCH MASTER CYLINDER REMOVAL/ INSTALLATION [F65M-R].) (See CLUTCH STROKE SENSOR REMOVAL/ INSTALLATION [F65M-R].)
3	Clutch pedal (See CLUTCH PEDAL INSPECTION [F65M-R].) (See CLUTCH PEDAL REMOVAL/INSTALLATION [F65M-R].) (See CLUTCH PEDAL POSITION SWITCH REMOVAL/INSTALLATION [F65M-R].) (See STARTER INTERLOCK SWITCH REMOVAL/ INSTALLATION [F65M-R].)
4	Clutch pipe and hose (See CLUTCH FLUID LEAKAGE INSPECTION [F65M-R].) (See CLUTCH PIPE AND HOSE REMOVAL/ INSTALLATION [F65M-R].)
5	Clutch release cylinder (See CLUTCH RELEASE CYLINDER REMOVAL/ INSTALLATION [F65M-R].)
6	Clutch unit (See CLUTCH UNIT REMOVAL/INSTALLATION [F65M-R].)
7	Clutch release collar (See CLUTCH UNIT REMOVAL/INSTALLATION [F65M-R].) (See CLUTCH RELEASE COLLAR INSPECTION [F65M-R].)
8	Clutch cover (See CLUTCH UNIT REMOVAL/INSTALLATION [F65M-R].) (See CLUTCH COVER INSPECTION [F65M-R].)
9	Clutch disc (See CLUTCH UNIT REMOVAL/INSTALLATION [F65M-R].) (See CLUTCH DISC INSPECTION [F65M-R].)
10	Pilot bearing (See CLUTCH UNIT REMOVAL/INSTALLATION [F65M-R].) (See PILOT BEARING INSPECTION [F65M-R].)
11	Flywheel (See CLUTCH UNIT REMOVAL/INSTALLATION [F65M-R].) (See FLYWHEEL INSPECTION [F65M-R].)