CLUTCH PEDAL REMOVAL/INSTALLATION [F65M-R]


id0510q1156700

Caution

- **Secure the steering wheel using tape or a cable to prevent the steering shaft from rotating after disconnecting the steering shaft. If the steering wheel rotates after the steering shaft and the steering gear and linkage are disconnected, the internal parts of the clock spring could be damaged.**
- **Do not allow clutch fluid to get on a painted surface. Clutch fluid contains properties which can dissolve the paint. If clutch fluid gets on a painted surface, rinse with water immediately, then wipe the area dry.**


Removal

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the air cleaner, air hose and fresh air duct as a single unit. (L.H.D.) (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Remove the battery tray and PCM component. (L.H.D.) (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Remove the insulator. (R.H.D.)
5. Disconnect the clutch stroke sensor connector. (with i-stop)

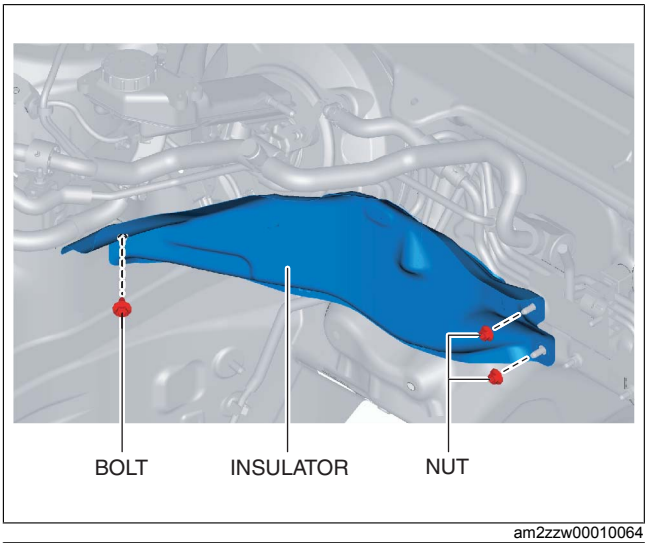

am2zzw00010064


6. Disconnect the wiring harness from the clutch pedal, and set the wiring harness aside. (L.H.D.)
7. Remove the clutch pedal position switch. (See CLUTCH PEDAL POSITION SWITCH REMOVAL/INSTALLATION [F65M-R].)
8. Remove the starter interlock switch. (See STARTER INTERLOCK SWITCH REMOVAL/INSTALLATION [F65M-R].)
9. Remove the joint cover. (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
10. Disconnect the intermediate shaft from the steering gear and linkage. (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
11. Disconnect the clutch pipe No.1 from clutch master cylinder, and plug it to avoid clutch fluid leakage. (See CLUTCH PIPE AND HOSE REMOVAL/INSTALLATION [F65M-R].)

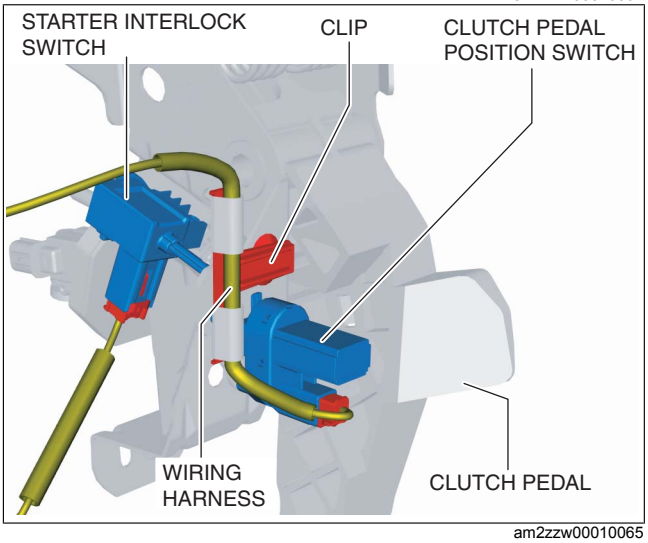

am2zzw00010065


12. Disconnect the clutch reserve hose from clutch master cylinder, and plug it to avoid clutch fluid leakage. (See CLUTCH PIPE AND HOSE REMOVAL/INSTALLATION [F65M-R].)
13. Remove in the order indicated in the table.

L.H.D.

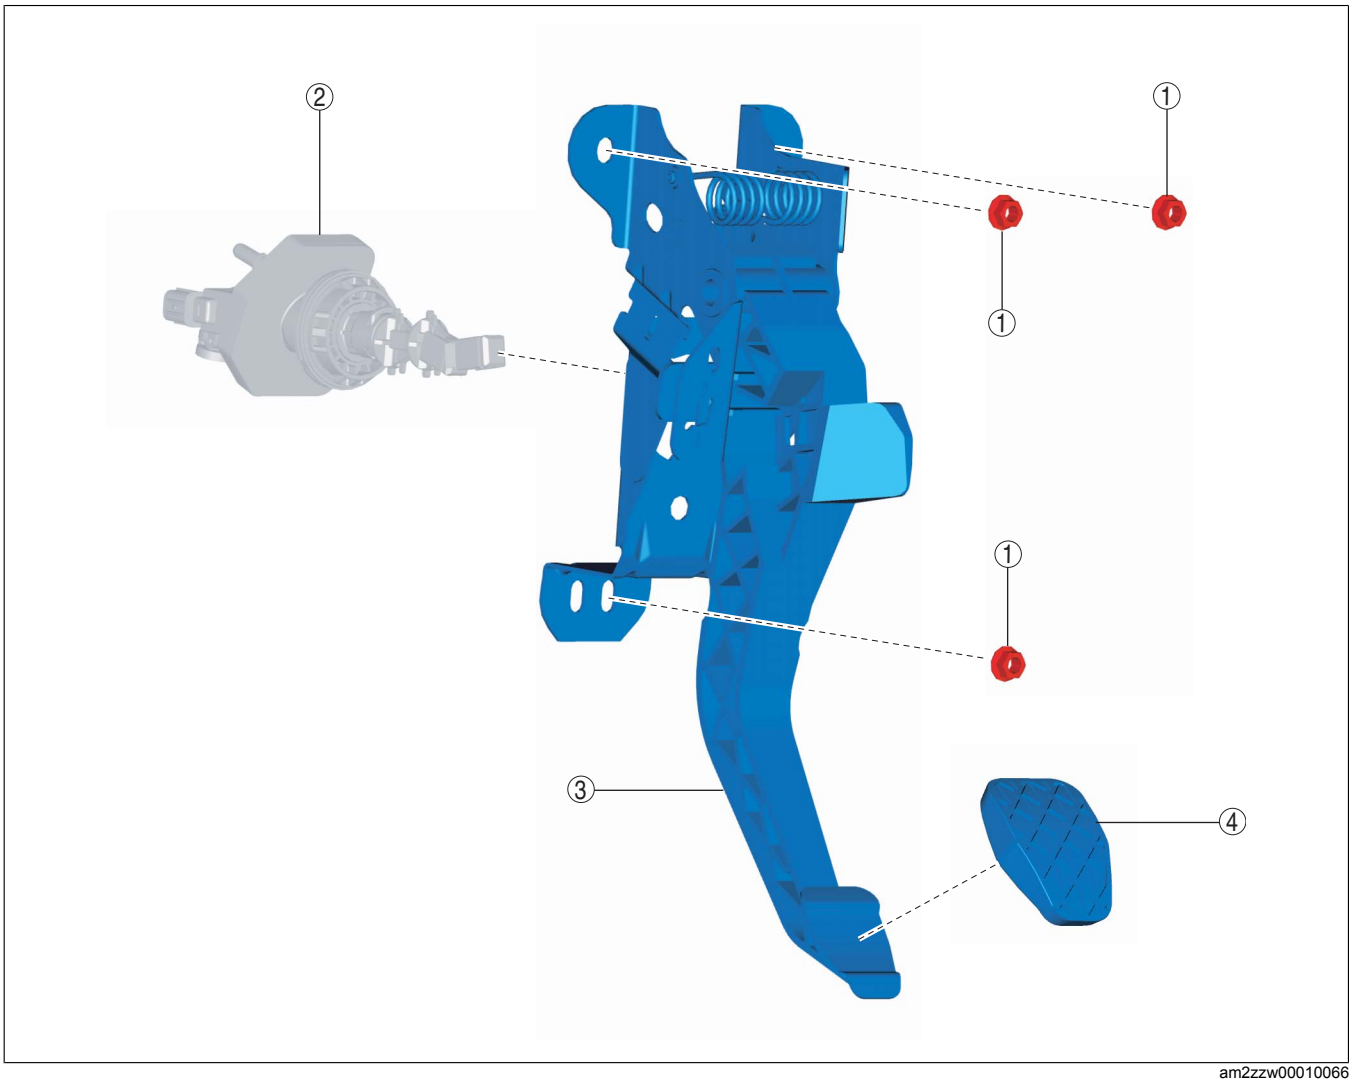

am2zzw00010066

R.H.D.

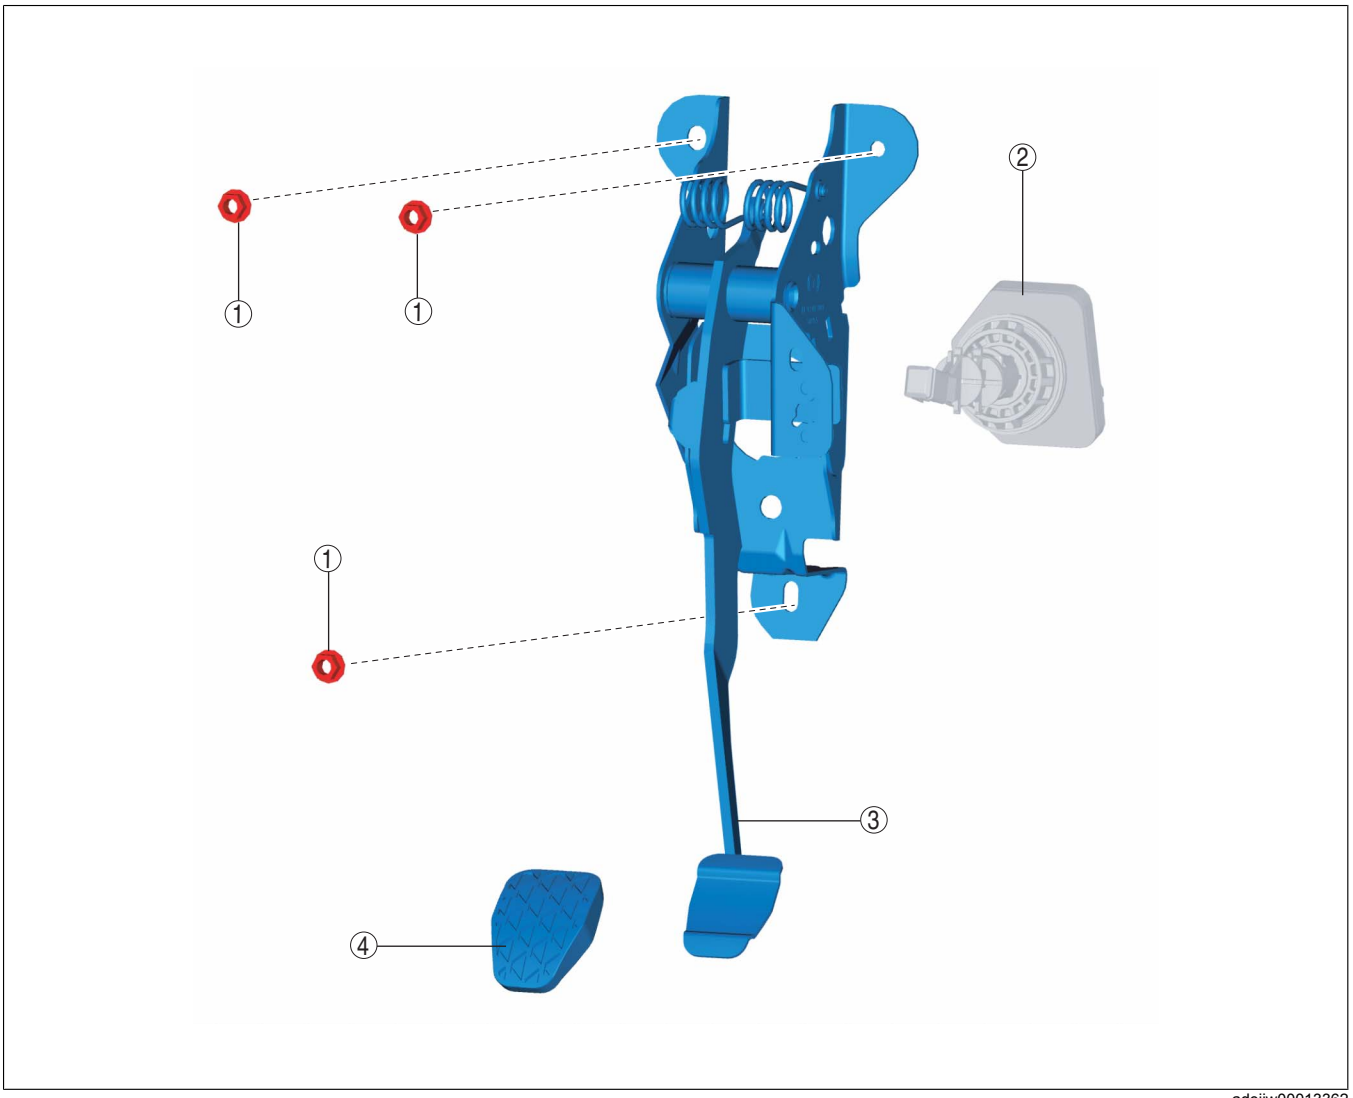


adejjw00013362

1	Nut
2	Clutch master cylinder (See CLUTCH MASTER CYLINDER REMOVAL/ INSTALLATION [F65M-R].)
3	Clutch pedal
4	Pedal pad

Installation


1. Install in the order indicated in the table.

L.H.D.

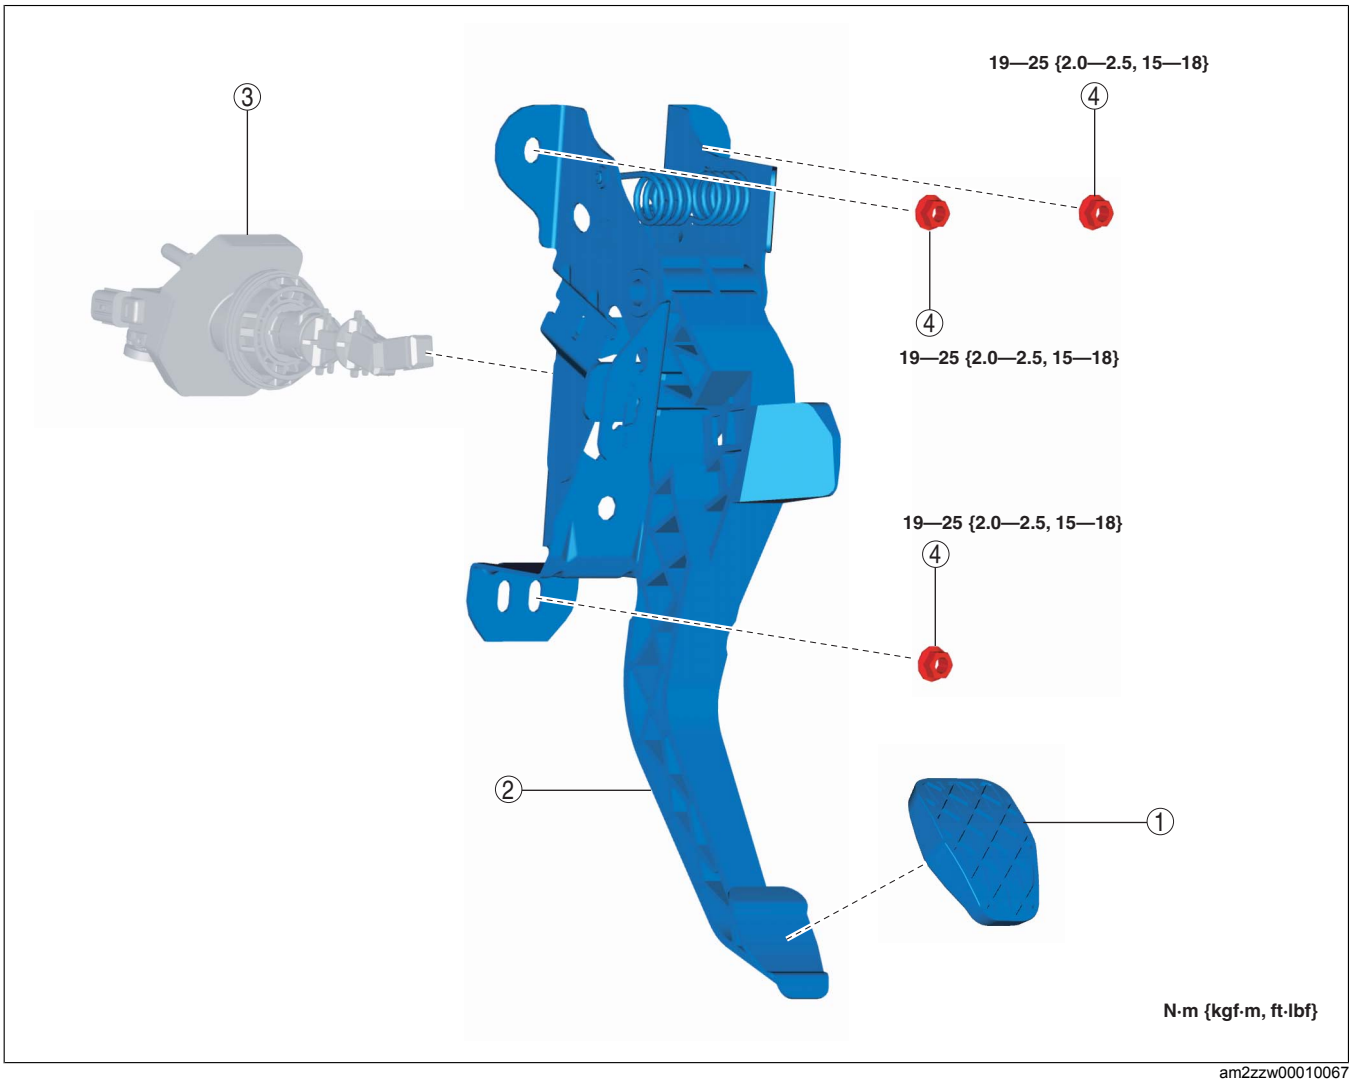

am2zzw00010067

R.H.D.

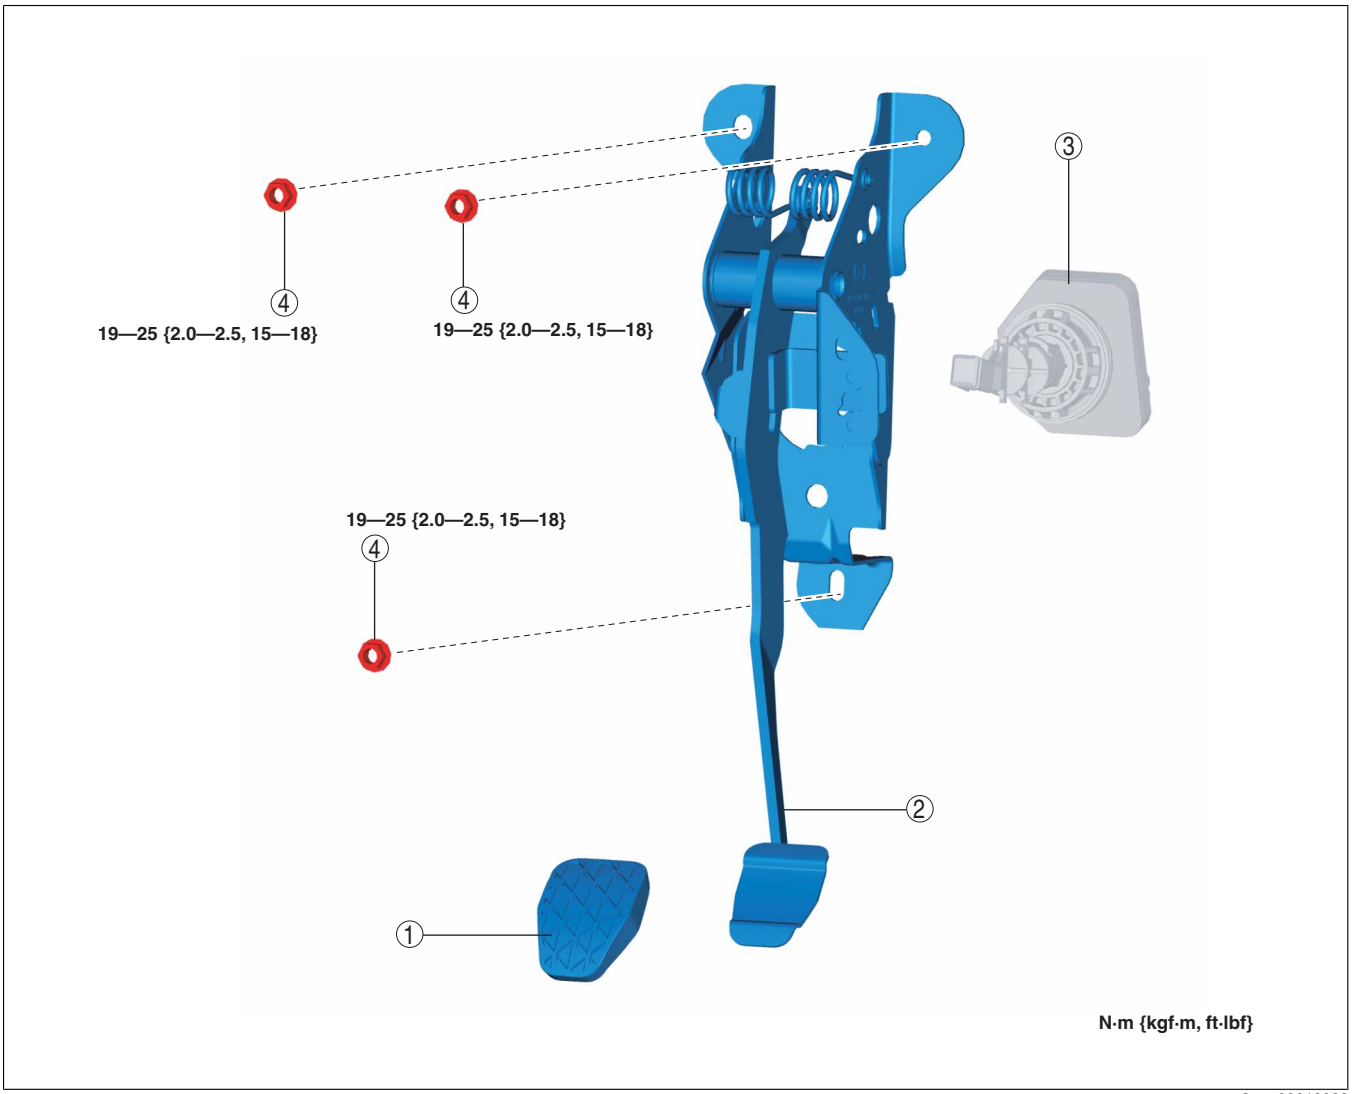


am2zzw00010068

1	Pedal pad
2	Clutch pedal
3	Clutch master cylinder (See CLUTCH MASTER CYLINDER REMOVAL/ INSTALLATION [F65M-R].)
4	Nut


2. Connect the clutch reserve hose to clutch master cylinder. (See CLUTCH PIPE AND HOSE REMOVAL/ INSTALLATION [F65M-R].)
3. Connect the clutch pipe No.1 to clutch master cylinder. (See CLUTCH PIPE AND HOSE REMOVAL/ INSTALLATION [F65M-R].)
4. Install the intermediate shaft from the steering gear and linkage. (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
5. Install the joint cover. (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
6. Bleed the air from the clutch system. (See CLUTCH FLUID REPLACEMENT/AIR BLEEDING [F65M-R].)
7. Inspect the clutch pedal height, and verify that the clutch pedal is installed correctly. (See CLUTCH PEDAL INSPECTION [F65M-R].)
8. Install a new starter interlock switch. (See STARTER INTERLOCK SWITCH REMOVAL/INSTALLATION [F65M-R].)
9. Install a new clutch pedal position switch. (See CLUTCH PEDAL POSITION SWITCH REMOVAL/ INSTALLATION [F65M-R].)
10. Connect the clutch stroke sensor connector. (with i-stop)

11. Connect the wiring harness to the clutch pedal. (L.H.D.)

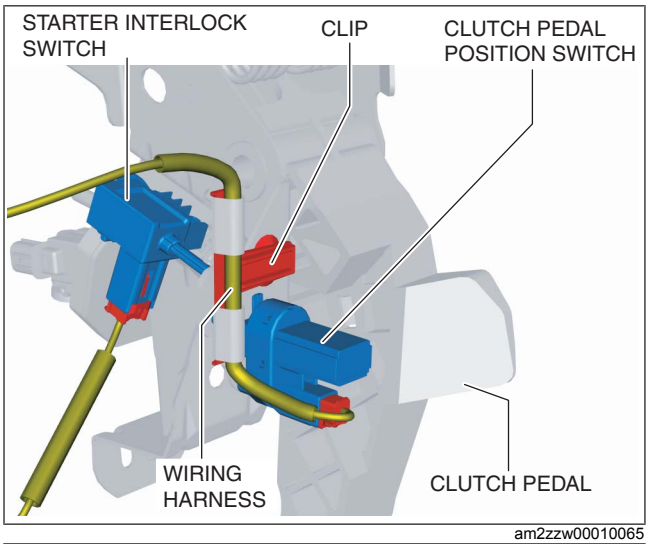

am2zzw00010065

12. Install the insulator. (R.H.D.)
13. Install the air cleaner, air hose and fresh air duct as a single unit. (L.H.D.) (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
14. Install the battery tray and PCM component. (L.H.D.) (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
15. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
16. Fully depress the clutch pedal, and verify that the engine starts.

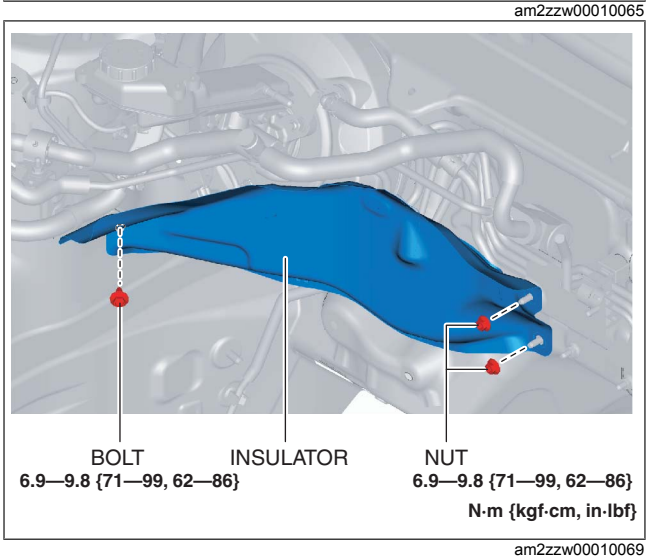

am2zzw00010069