
CLUTCH RELEASE CYLINDER REMOVAL/INSTALLATION [F65M-R]

id0510q1157100

Caution


- **Do not allow clutch fluid to get on a painted surface. Clutch fluid contains properties which can dissolve the paint. If clutch fluid gets on a painted surface, rinse with water immediately, then wipe the area dry.**

1. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
2. Disconnect the clutch pipe No.2 from clutch release cylinder, and plug it to avoid clutch fluid leakage. (See CLUTCH PIPE AND HOSE REMOVAL/INSTALLATION [F65M-R].)
3. Remove the clutch release cylinder.

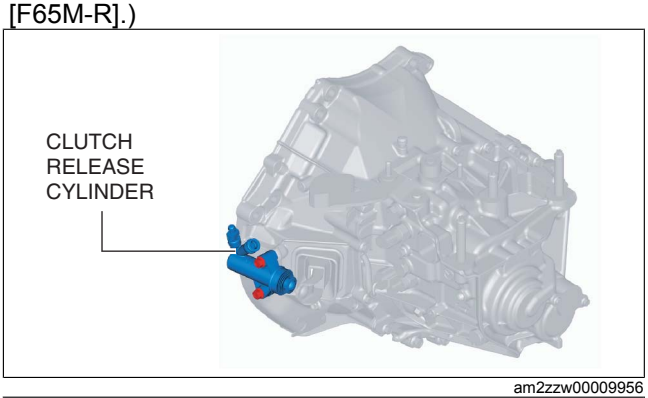

am2zzw00009956

4. Install the clutch release cylinder.
5. Connect the clutch pipe No.2 to clutch release cylinder. (See CLUTCH PIPE AND HOSE REMOVAL/INSTALLATION [F65M-R].)
6. Bleed the air from the clutch system. (See CLUTCH FLUID REPLACEMENT/AIR BLEEDING [F65M-R].)
7. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)

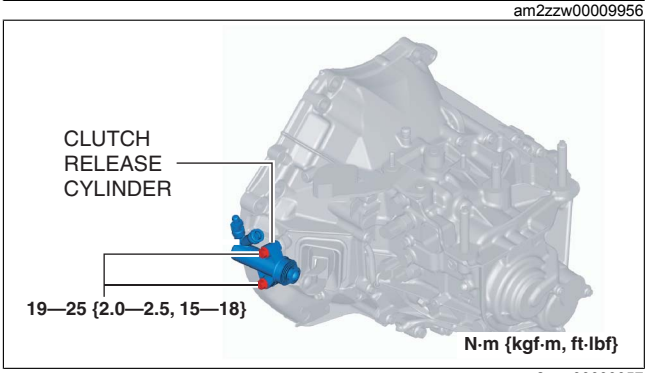

am2zzw00009957