
CLUTCH LOCATION INDEX [F66M-R]


id0510q2156300

SKYACTIV-G 1.5

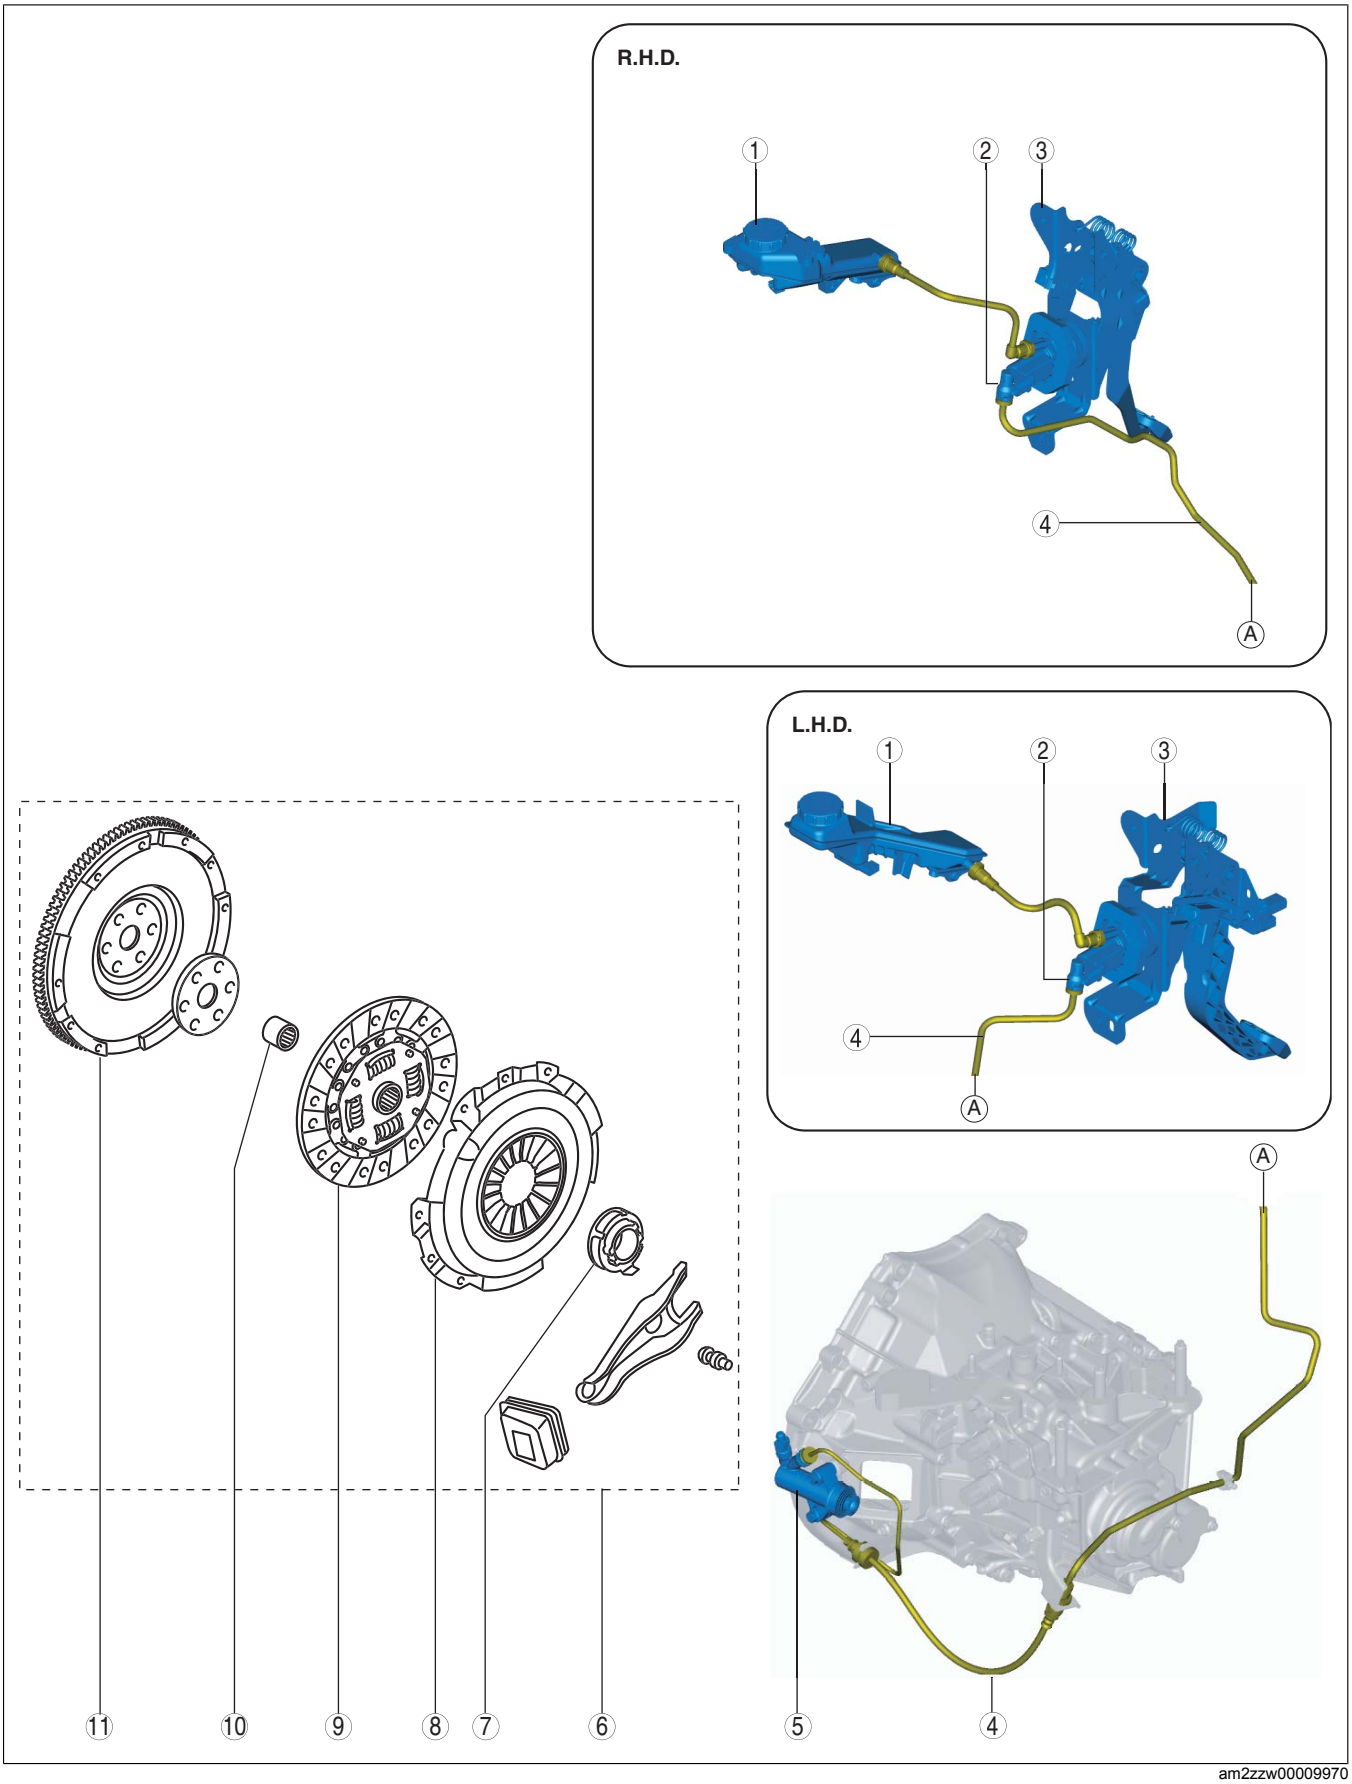

am2zzw00009970

SKYACTIV-D 1.5

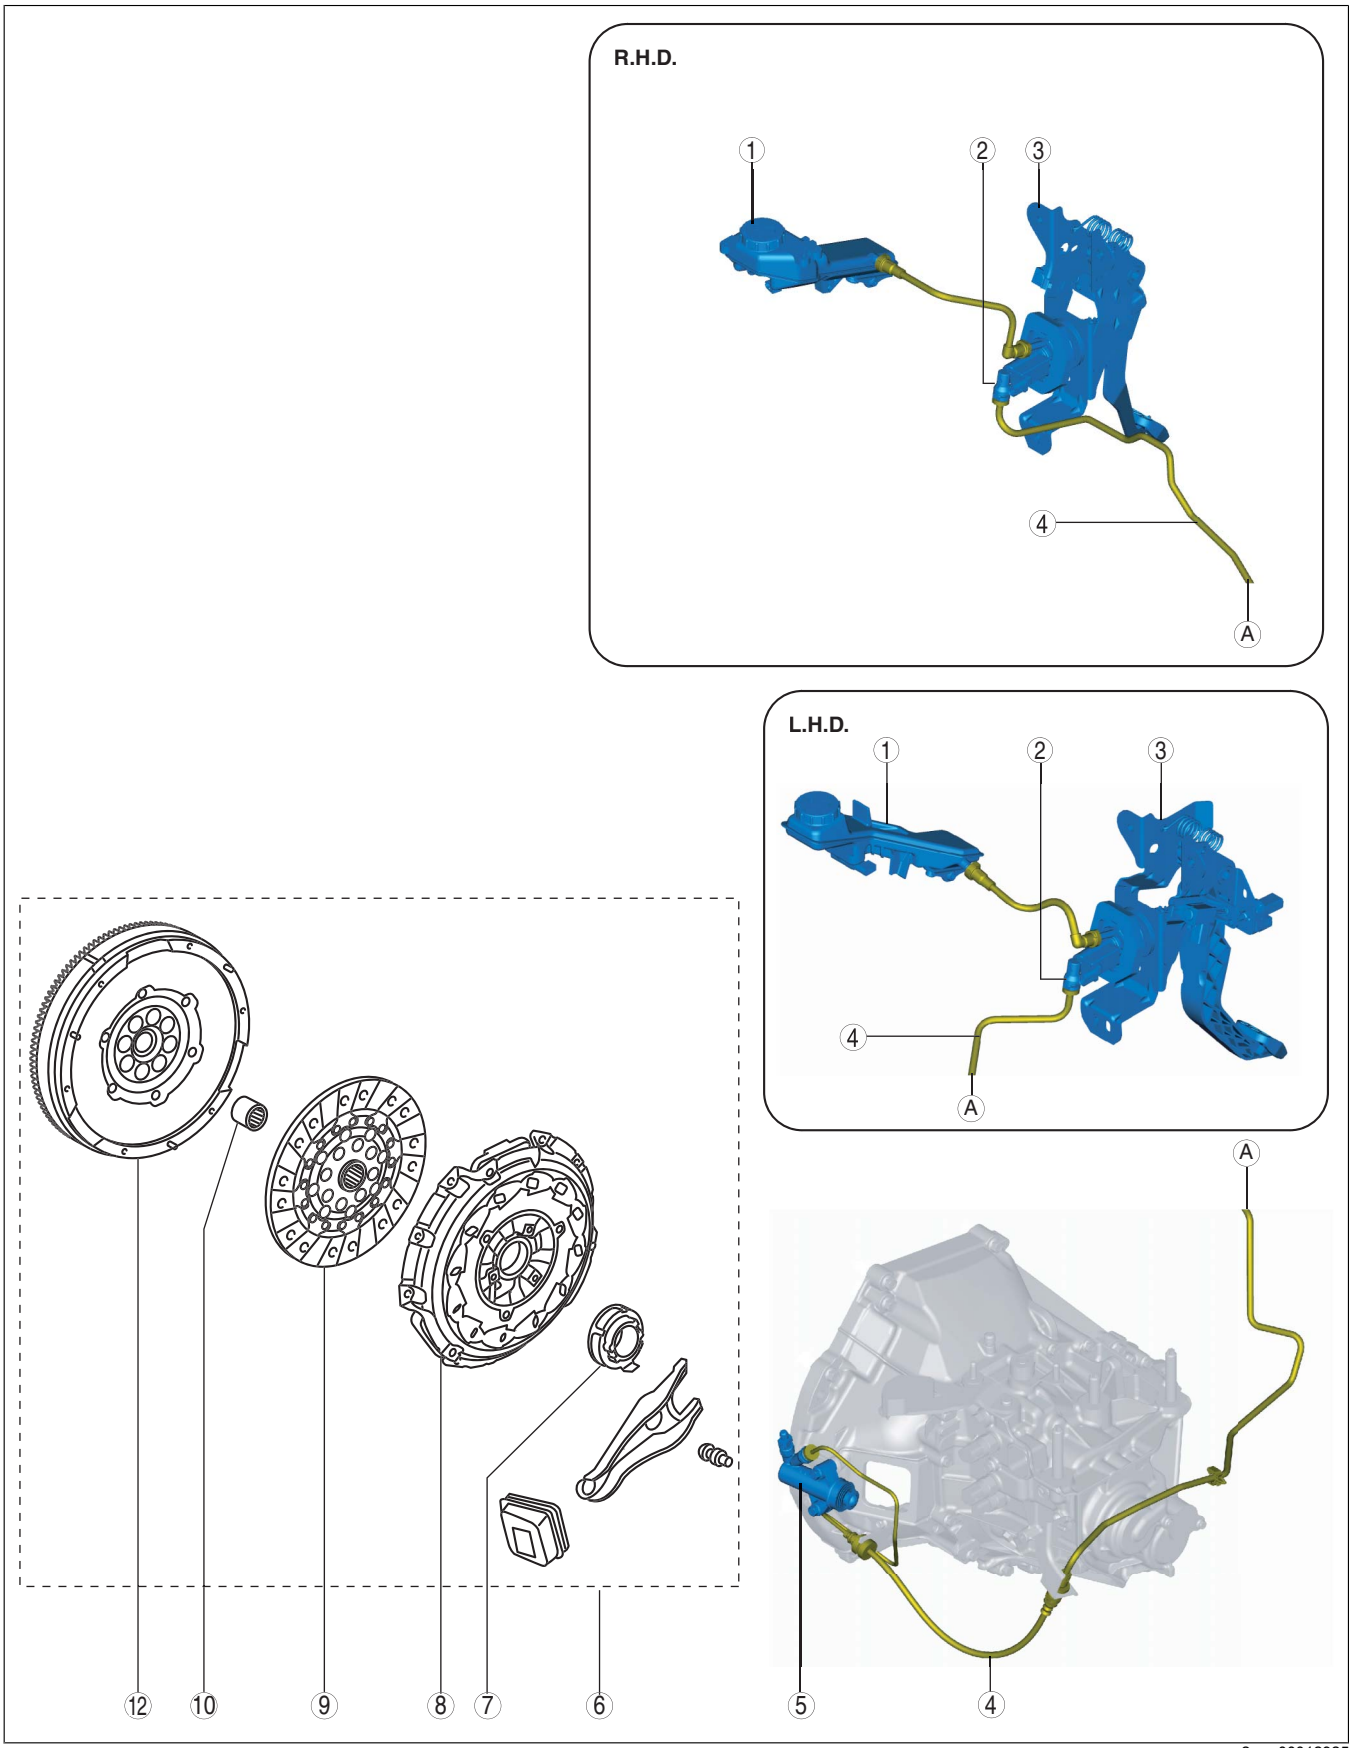

am2zzw00012925

1	Reserve tank (See CLUTCH FLUID INSPECTION [F66M-R].) (See CLUTCH FLUID REPLACEMENT/AIR BLEEDING [F66M-R].)

2	Clutch master cylinder (See CLUTCH MASTER CYLINDER REMOVAL/ INSTALLATION [F66M-R].) (See CLUTCH STROKE SENSOR REMOVAL/ INSTALLATION [F66M-R].)
3	Clutch pedal (See CLUTCH PEDAL INSPECTION [F66M-R].) (See CLUTCH PEDAL REMOVAL/INSTALLATION [F66M-R].) (See CLUTCH PEDAL POSITION SWITCH REMOVAL/INSTALLATION [F66M-R].) (See STARTER INTERLOCK SWITCH REMOVAL/ INSTALLATION [F66M-R].)
4	Clutch pipe and hose (See CLUTCH FLUID LEAKAGE INSPECTION [F66M-R].) (See CLUTCH PIPE AND HOSE REMOVAL/ INSTALLATION [F66M-R].)
5	Clutch release cylinder (See CLUTCH RELEASE CYLINDER REMOVAL/ INSTALLATION [F66M-R].)
6	Clutch unit (See CLUTCH UNIT REMOVAL/INSTALLATION [F66M-R].)
7	Clutch release collar (See CLUTCH UNIT REMOVAL/INSTALLATION [F66M-R].) (See CLUTCH RELEASE COLLAR INSPECTION [F66M-R].)
8	Clutch cover (See CLUTCH UNIT REMOVAL/INSTALLATION [F66M-R].) (See CLUTCH COVER INSPECTION [F66M-R].)
9	Clutch disc (See CLUTCH UNIT REMOVAL/INSTALLATION [F66M-R].) (See CLUTCH DISC INSPECTION [F66M-R].)
10	Pilot bearing (See CLUTCH UNIT REMOVAL/INSTALLATION [F66M-R].) (See PILOT BEARING INSPECTION [F66M-R].)
11	Flywheel (with SKYACTIV-G 1.5) (See CLUTCH UNIT REMOVAL/INSTALLATION [F66M-R].) (See FLYWHEEL INSPECTION [F66M-R].)
12	Dual-mass flywheel (with SKYACTIV-D 1.5) (See CLUTCH UNIT REMOVAL/INSTALLATION [F66M-R].) (See DUAL-MASS FLYWHEEL INSPECTION [F66M-R].)