CLUTCH RELEASE CYLINDER REMOVAL/INSTALLATION [F66M-R]


id0510q2157100

Caution

- **Do not allow clutch fluid to get on a painted surface. Clutch fluid contains properties which can dissolve the paint. If clutch fluid gets on a painted surface, rinse with water immediately, then wipe the area dry.**


SKYACTIV-G 1.5

1. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
2. Disconnect the clutch pipe No.2 from clutch release cylinder, and plug it to avoid clutch fluid leakage. (See CLUTCH PIPE AND HOSE REMOVAL/INSTALLATION [F66M-R].)
3. Remove the clutch release cylinder.

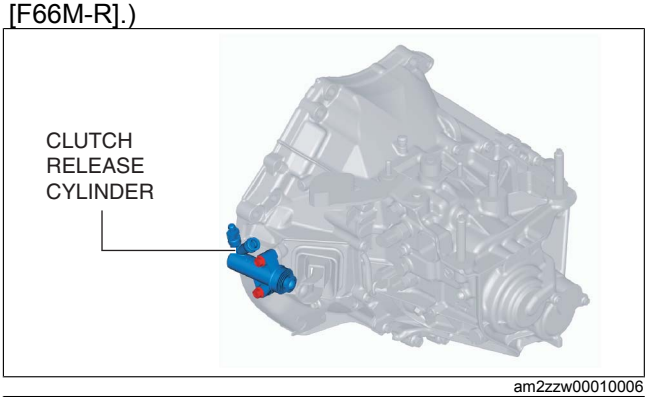

am2zzw00010006

4. Install the clutch release cylinder.
5. Connect the clutch pipe No.2 to clutch release cylinder. (See CLUTCH PIPE AND HOSE REMOVAL/INSTALLATION [F66M-R].)
6. Bleed the air from the clutch system. (See CLUTCH FLUID REPLACEMENT/AIR BLEEDING [F66M-R].)
7. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)

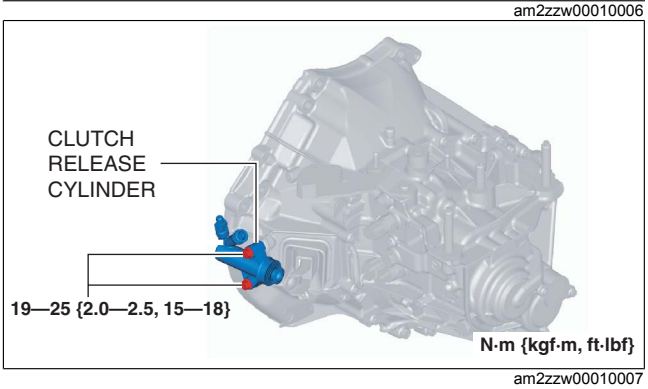


am2zzw00010007

SKYACTIV-D 1.5

1. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
2. Disconnect the clutch pipe No.2 from clutch release cylinder, and plug it to avoid clutch fluid leakage. (See CLUTCH PIPE AND HOSE REMOVAL/INSTALLATION [F66M-R].)
3. Remove in the order indicated in the table.


1	Bolt (lower side)
2	Bolt (upper side)
3	Clutch release cylinder

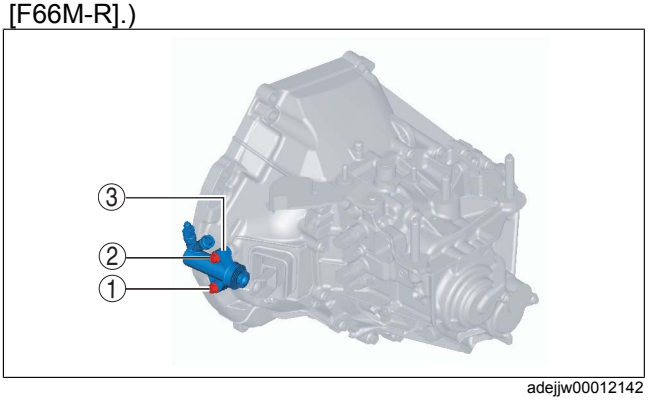

adejjw00012142

4. Install in the order indicated in the table.

1	Clutch release cylinder
2	Bolt (upper side)
3	Bolt (lower side)

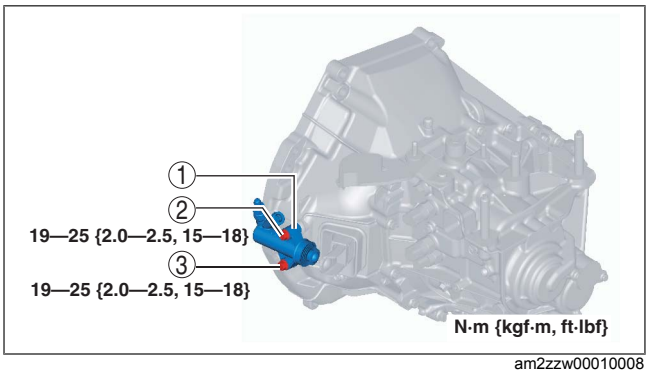

am2zzw00010008

5. Connect the clutch pipe No.2 to clutch release cylinder. (See CLUTCH PIPE AND HOSE REMOVAL/INSTALLATION [F66M-R].)
6. Bleed the air from the clutch system. (See CLUTCH FLUID REPLACEMENT/AIR BLEEDING [F66M-R].)
7. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)