
CLUTCH RELEASE COLLAR INSPECTION [F66M-R]

id0510q2157300

Caution
- **Do not clean the clutch release collar with cleaning fluids or a steam cleaner because it is filled with grease.**

Operation Inspection

1. Turn the collar while applying force in the axial direction, and inspect for sticking, excessive resistance, and an abnormal noise.
   - If there is any malfunction, replace the clutch release collar.

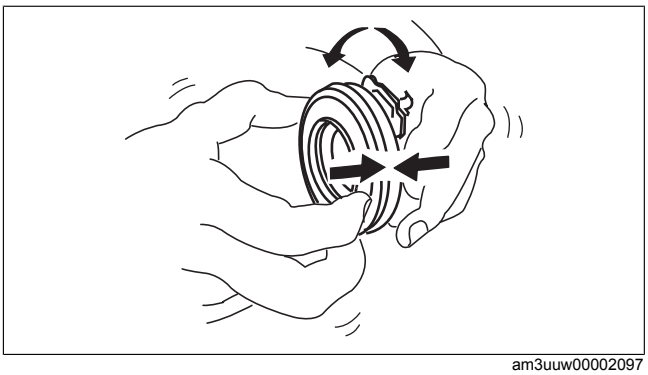

am3uuw00002097