
PILOT BEARING INSPECTION [F66M-R]

id0510q2157600

Note
- Inspect the pilot bearing with it installed to the crankshaft and flywheel.

1. Remove the clutch cover. (See CLUTCH UNIT REMOVAL/INSTALLATION [F66M-R].)
2. Inspect the pilot bearing for damage or wear, and the rotation condition.
   - If there is any malfunction, replace the pilot bearing. (See CLUTCH UNIT REMOVAL/ INSTALLATION [F66M-R].)

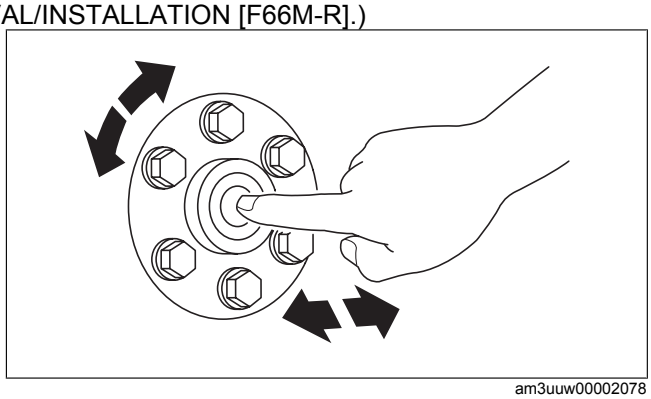

am3uuw00002078