
FLYWHEEL INSPECTION [F66M-R]

id0510q2157700


1. Remove the flywheel. (See CLUTCH UNIT REMOVAL/INSTALLATION [F66M-R].)
2. Perform the following procedure to inspect the flywheel.
   (1) Inspect the surface that contacts the clutch disc for scratches, nicks, and discoloration.
      • Correct slight scratches and discoloration using sandpaper.
   (2) Inspect the ring gear teeth for damage and wear.
      • If there is any malfunction, replace the flywheel.

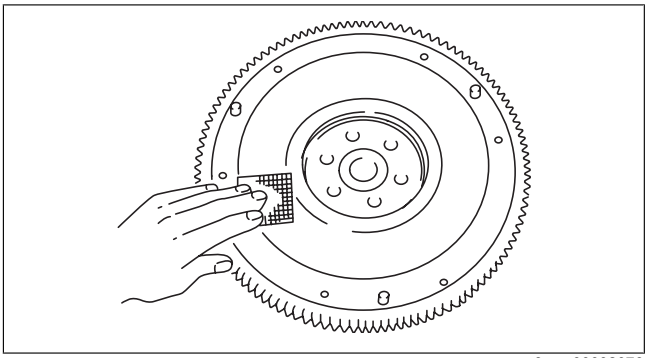

am3uuw00002076

   (3) Inspect the runout of the surface that contacts the clutch disc.
      1) Install the flywheel. (See CLUTCH UNIT REMOVAL/INSTALLATION [F66M-R].)
      2) Measure the runout of the surface that contacts the clutch disc using a dial gauge.

Flywheel maximum runout
0.1 mm {0.004 in}

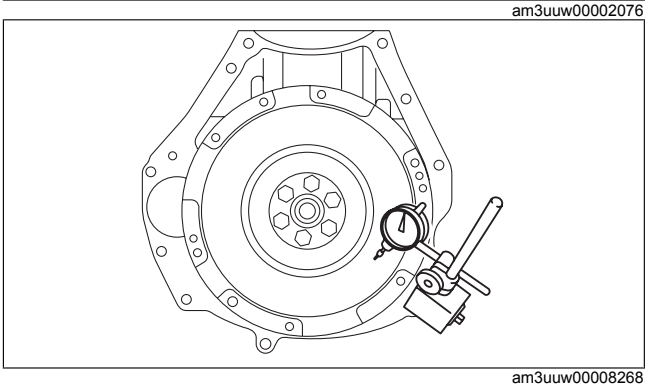

am3uuw00008268

      • If it exceeds the maximum, replace the flywheel. (See CLUTCH UNIT REMOVAL/INSTALLATION [F66M-R].)