
CLUTCH PEDAL POSITION SWITCH REMOVAL/INSTALLATION [F66M-R]


id0510q2160000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Disconnect the clutch pedal position switch connector.
3. Rotate the clutch pedal position switch 45° counterclockwise.

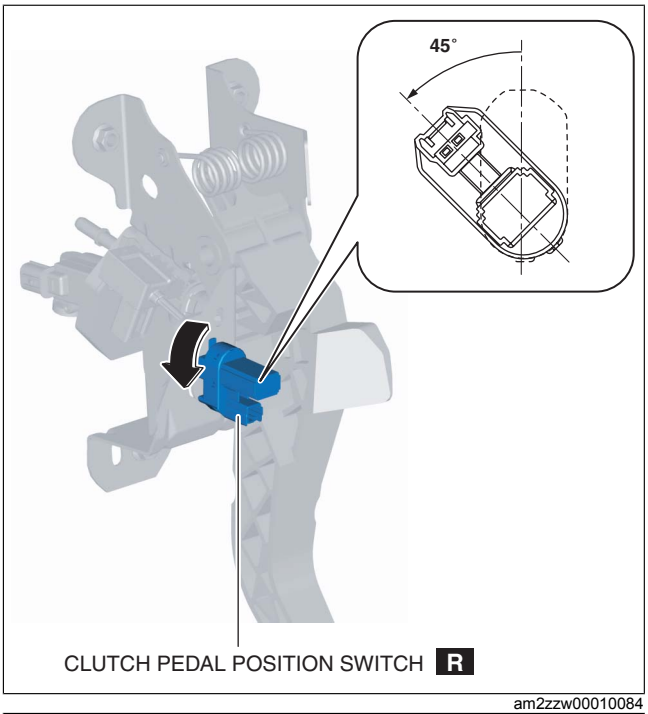


am2zzw00010084

4. Remove the clutch pedal position switch.
5. Insert a new clutch pedal position switch into the clutch pedal hole until the switch stops.

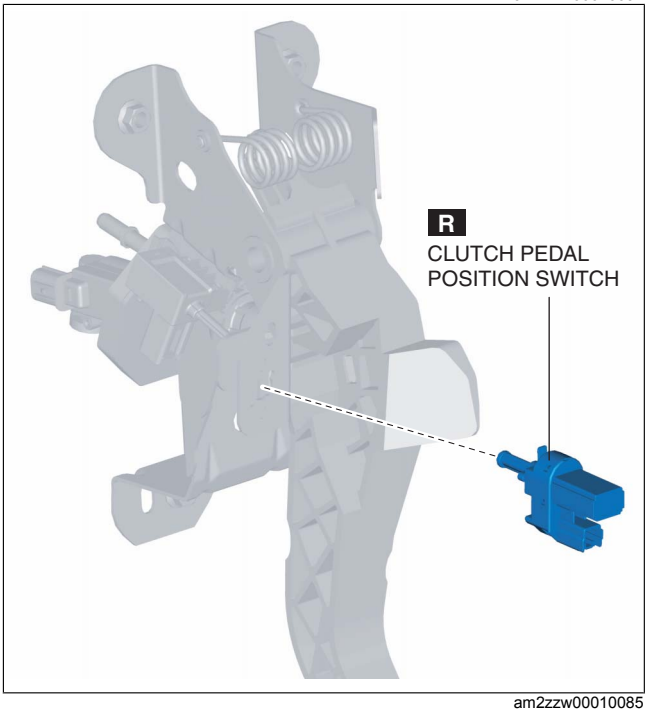

am2zzw00010085

6. Rotate the clutch pedal position switch 45° clockwise.
7. Verify that the clutch pedal position switch is locked securely.
8. Connect the clutch pedal position switch connector.
9. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)

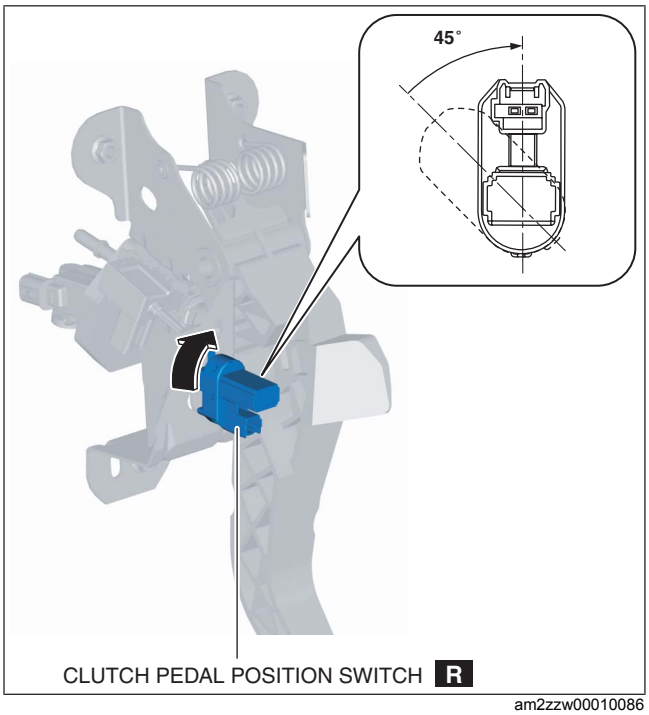

am2zzw00010086