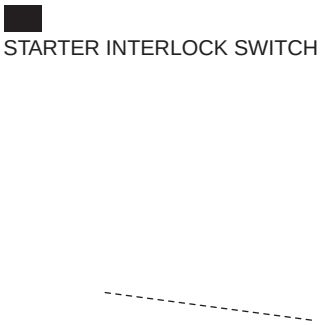
(3) Remove the starter interlock switch from the clutch pedal.


STARTER INTERLOCK SWITCH