
MANUAL TRANSAXLE LOCATION INDEX [F65M-R]

id0515n1159400

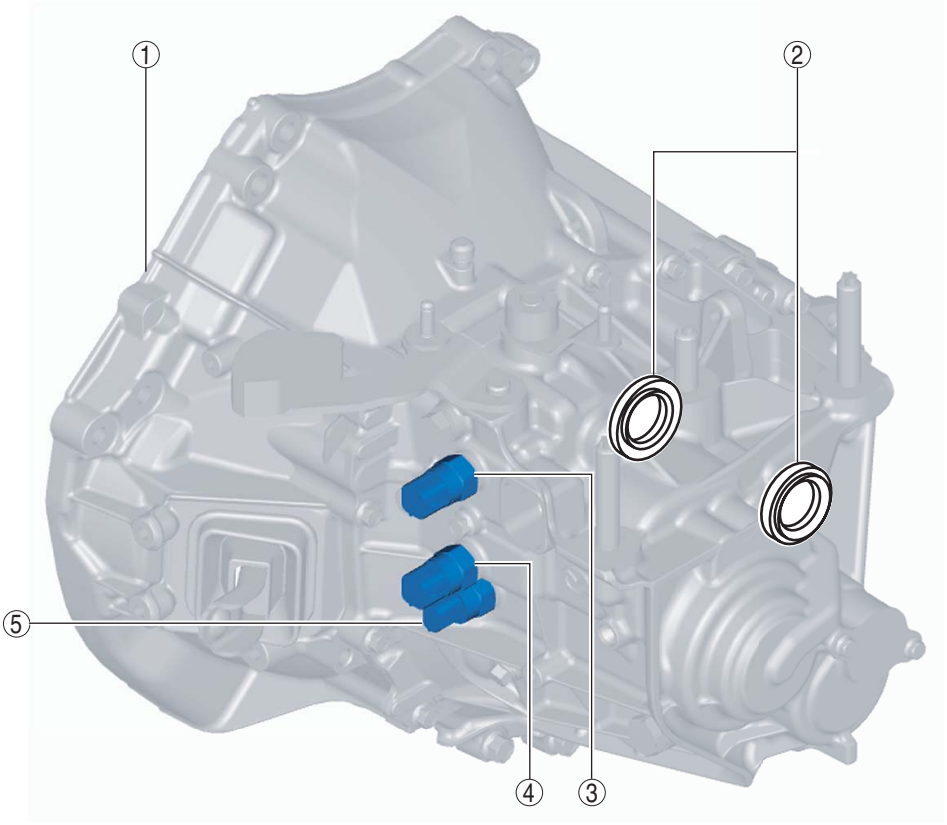

adejjw00010443

1	Manual transaxle (See MANUAL TRANSAXLE OIL INSPECTION [F65M-R].) (See MANUAL TRANSAXLE OIL REPLACEMENT [F65M-R].) (See MANUAL TRANSAXLE REMOVAL/ INSTALLATION [F65M-R].) (See INSPECTION AFTER MANUAL TRANSAXLE OVERHAUL [F65M-R].)
2	Oil seal (differential.) (See OIL SEAL (DIFFERENTIAL) REPLACEMENT [F65M-R].)

3	Neutral switch No.1 (See NEUTRAL SWITCH REMOVAL/ INSTALLATION [F65M-R].)
4	Neutral switch No.2 (with i-stop) (See NEUTRAL SWITCH REMOVAL/ INSTALLATION [F65M-R].)
5	Back-up light switch (See BACK-UP LIGHT SWITCH REMOVAL/ INSTALLATION [F65M-R].)