
MANUAL TRANSAXLE OIL REPLACEMENT [F65M-R]

id0515n1159700

1. Park the vehicle on level ground.
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Remove the drain plug and gasket, and drain the manual transaxle oil.
4. Install a new gasket and the drain plug.

   Tightening torque
   39—59 N·m {4.0—6.0 kgf·m, 29—43 ft·lbf}

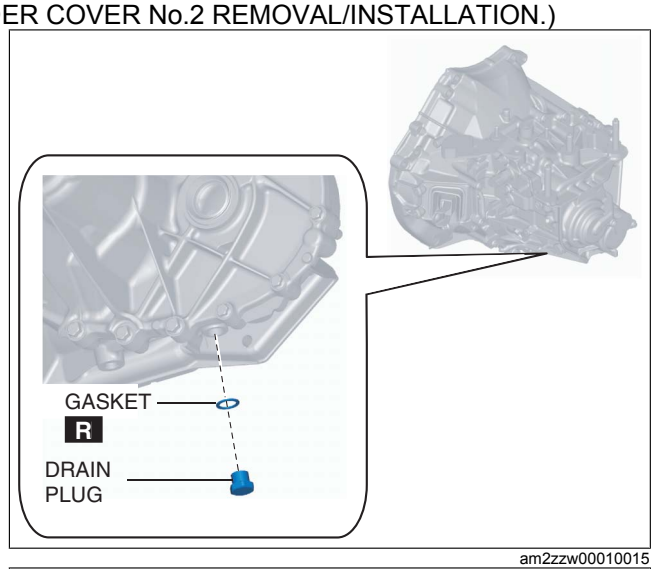

am2zzw00010015


5. Remove the oil level plug and gasket.
6. Add the specified amount of manual transaxle oil through the oil level plug hole.

   Manual transaxle oil grade
   API service GL-4
   Manual transaxle oil viscosity
   SAE 75W-80
   Manual transaxle oil capacity (approx. quantity)
   1.59 L {1.68 US qt, 1.40 Imp qt}

7. Install a new gasket and the oil level plug.

   Tightening torque
   39—59 N·m {4.0—6.0 kgf·m, 29—43 ft·lbf}

8. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)

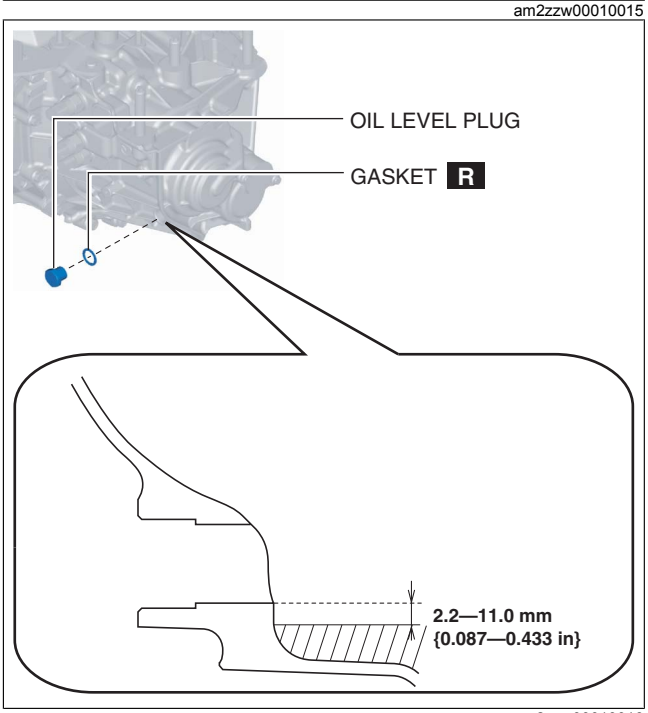

am2zzw00010016