
NEUTRAL SWITCH REMOVAL/INSTALLATION [F65M-R]

id0515n1159800

Neutral Switch No.1

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the air cleaner, air hose and fresh air duct as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Remove in the order indicated in the table.

1	Neutral switch No.1 connector
2	Neutral switch No.1
3	Gasket

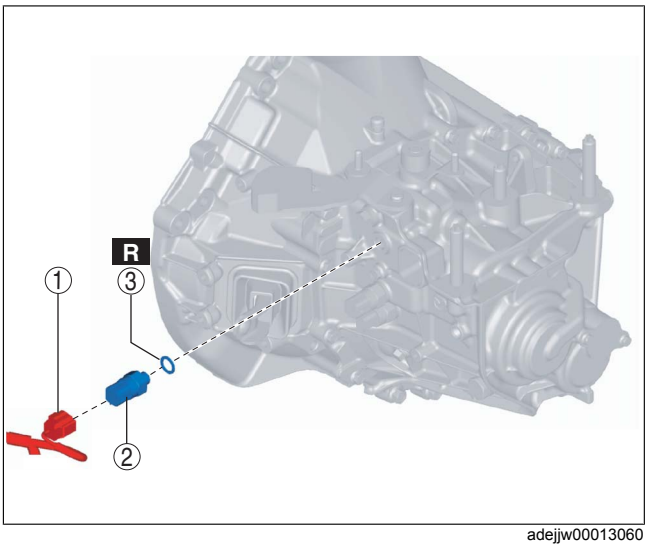


adejjw00013060

4. Install in the reverse order of removal.

Note


- White marking tape is adhered to the neutral switch No.2 connector. Verify that it is correctly installed as shown in the figure. (with i-stop)

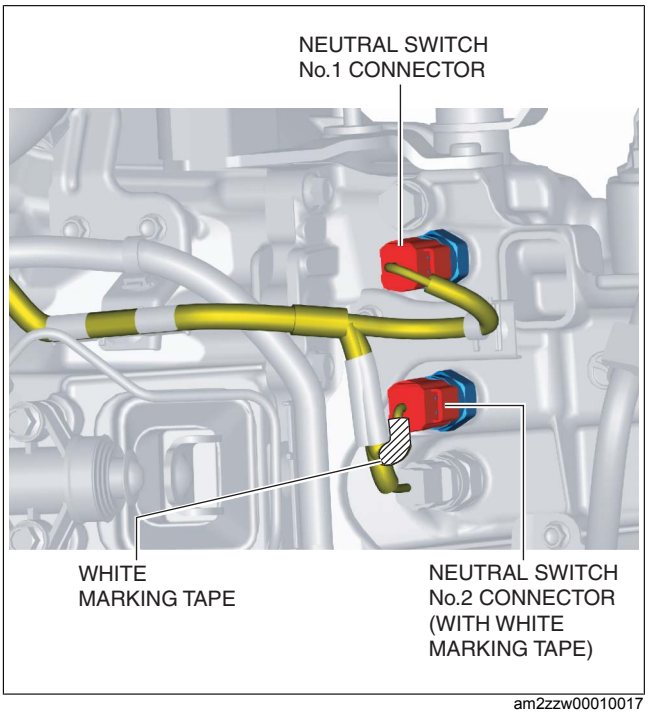

am2zzw00010017

1	Gasket
2	Neutral switch No.1
3	Neutral switch No.1 connector

5. Install the air cleaner, air hose and fresh air duct as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
6. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)

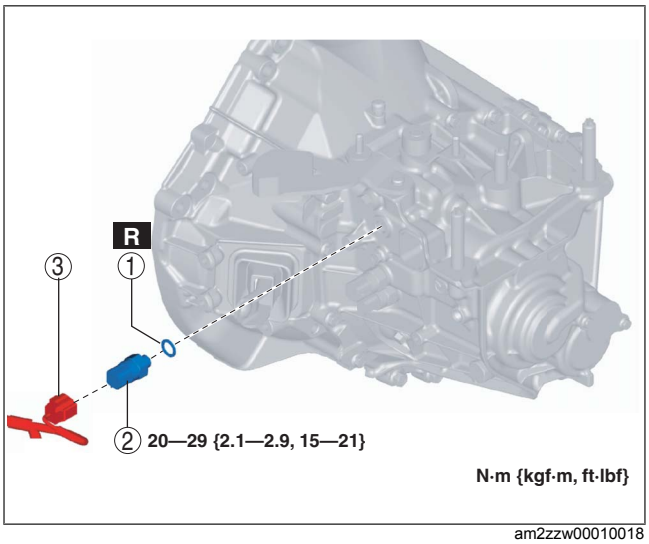


am2zzw00010018

Neutral Switch No.2 (with i-stop)

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the air cleaner, air hose and fresh air duct as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Remove in the order indicated in the table.

1	Neutral switch No.2 connector (with white marking tape)
2	Neutral switch No.2
3	Gasket

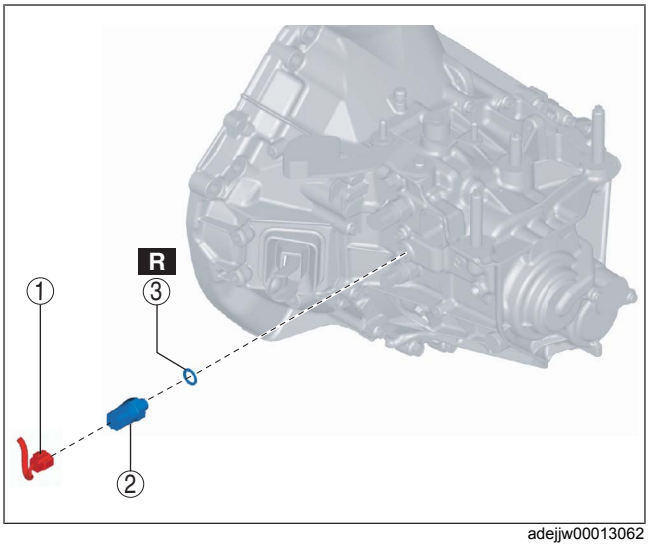


adejjw00013062

4. Install in the reverse order of removal.

Note


- White marking tape is adhered to the neutral switch No.2 connector. Verify that it is correctly installed as shown in the figure.

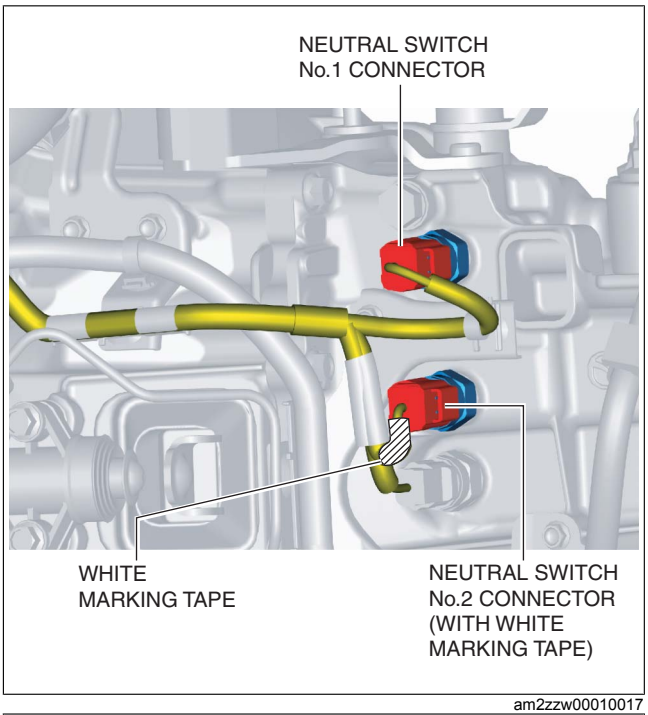

am2zzw00010017

1	Gasket
2	Neutral switch No.2
3	Neutral switch No.2 connector (with white marking tape)

5. Install the air cleaner, air hose and fresh air duct as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
6. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)

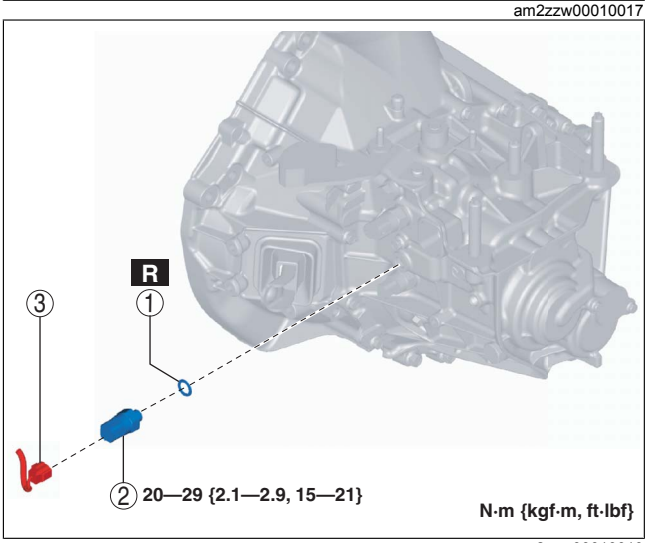

am2zzw00010019