
MANUAL TRANSAXLE [F65M-R]

id0515n1283800

Purpose, Function


- The manual transaxle converts the drive force (speed, torque, rotation direction) input from the engine according to the shift lever operation inside the vehicle.

Construction

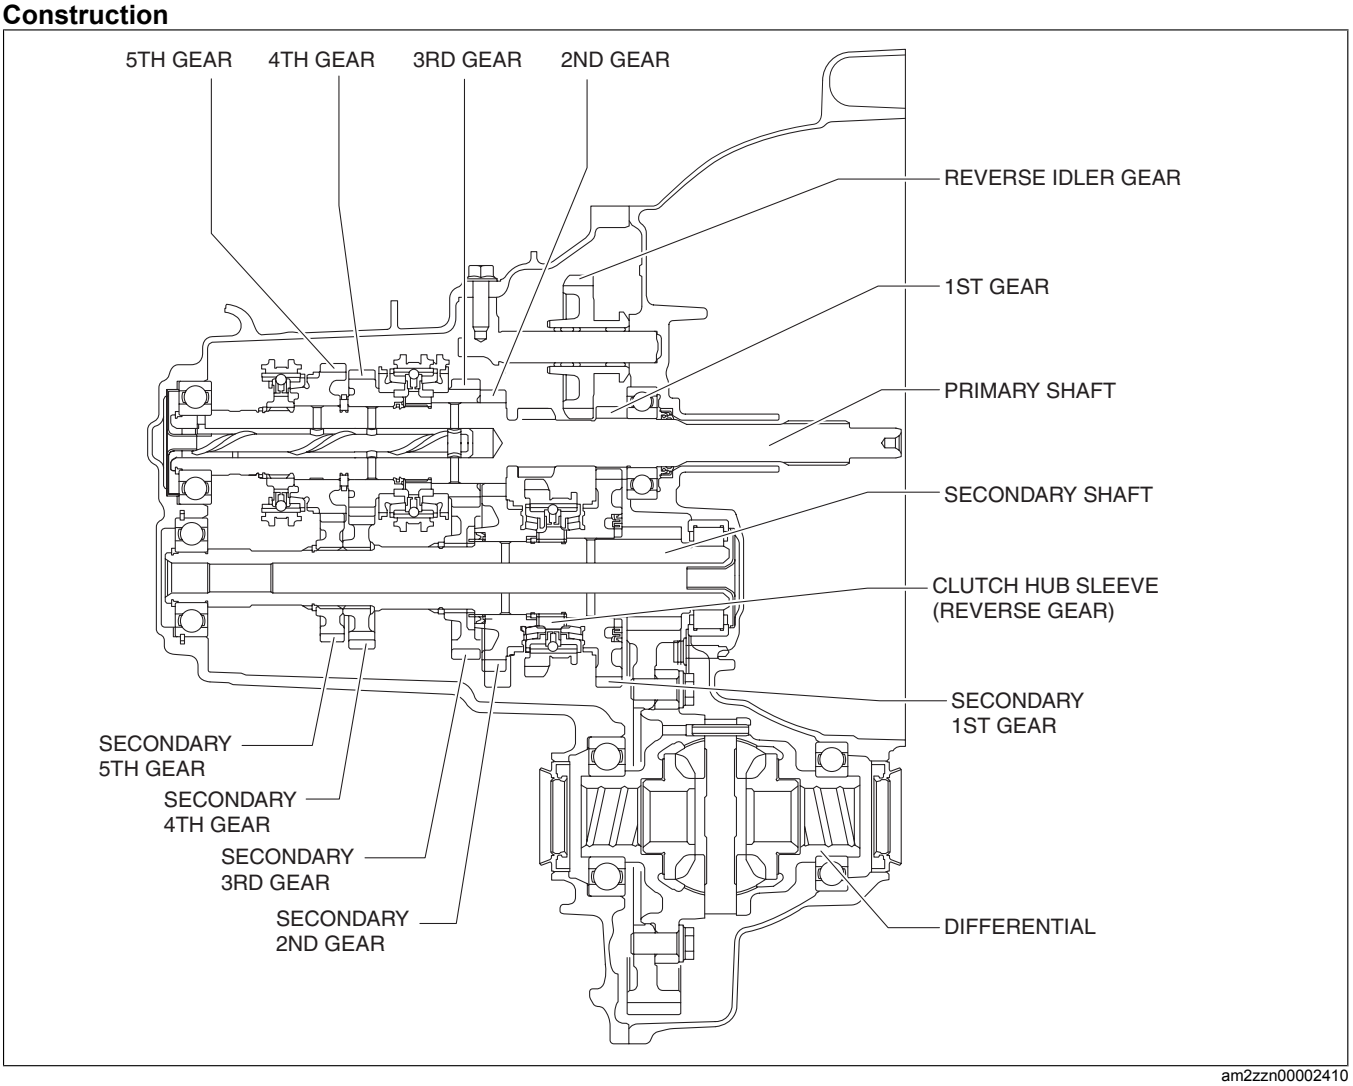

am2zzn00002410

Operation

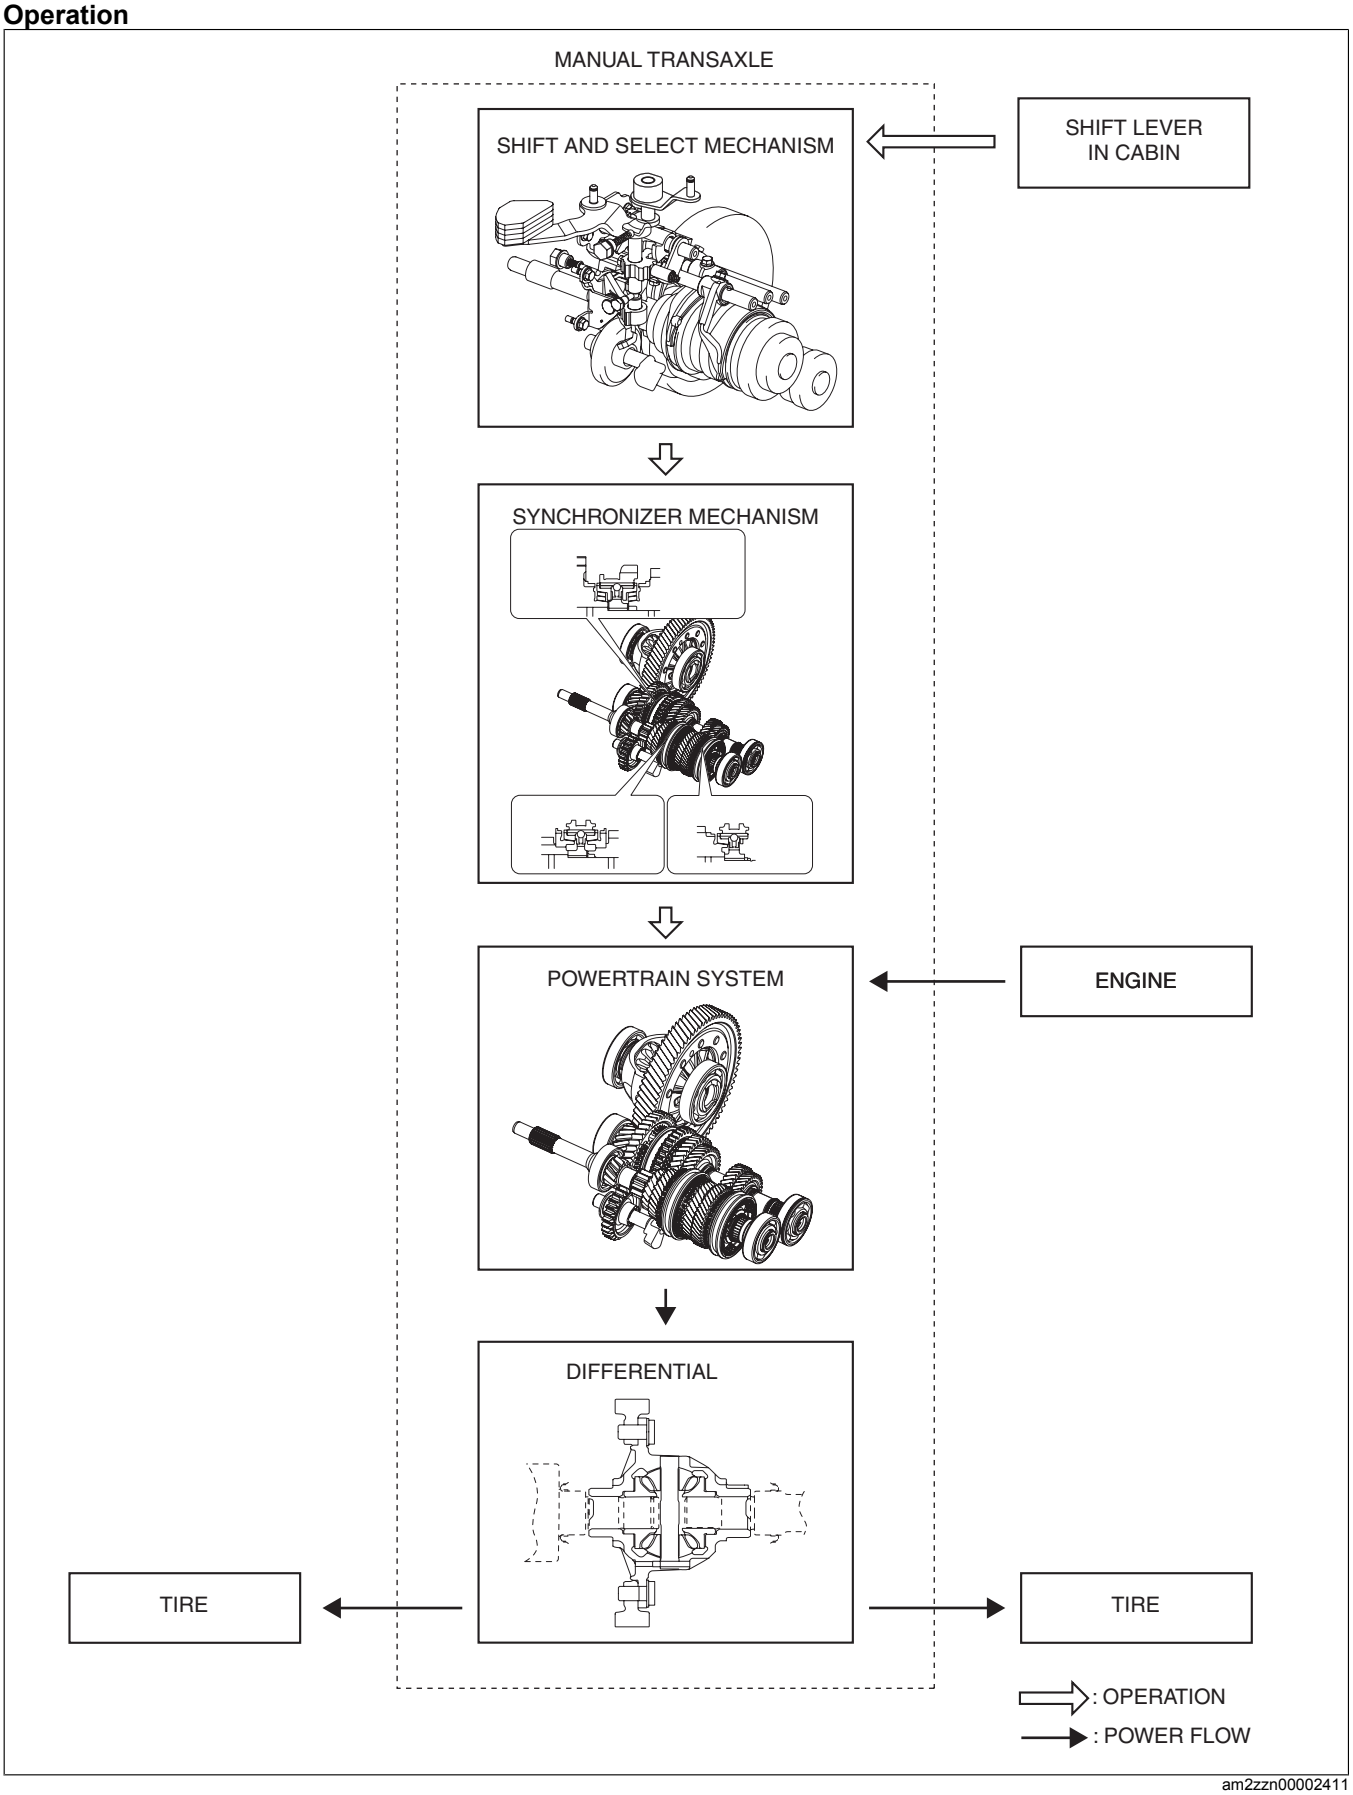

am2zzn00002411