
DIFFERENTIAL [F65M-R]

id0515n1284200

Purpose, Function

- The differential absorbs the rotation speed of the inside and outside wheel of a wheel set when the vehicle is cornering.


Construction

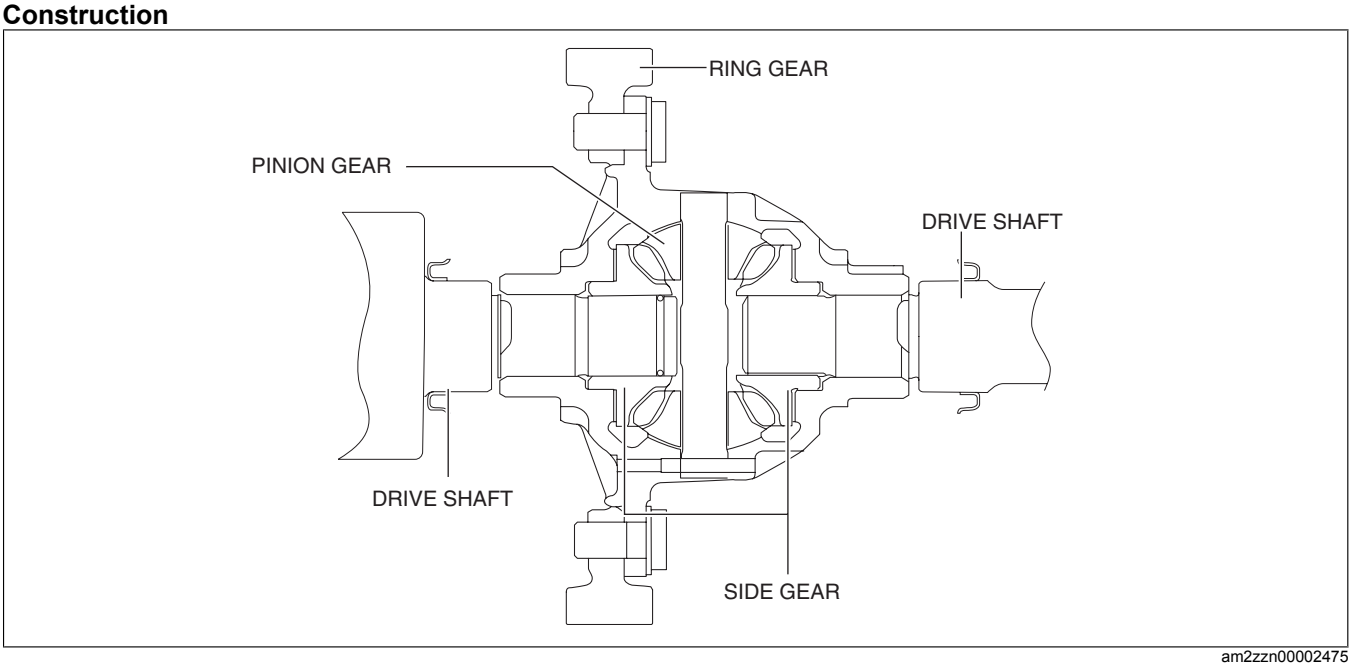

am2zzn00002475


Ball bearing

- The differential has adopted ball bearings at the locations shown in the figure, reducing rotational friction resistance of the differential.

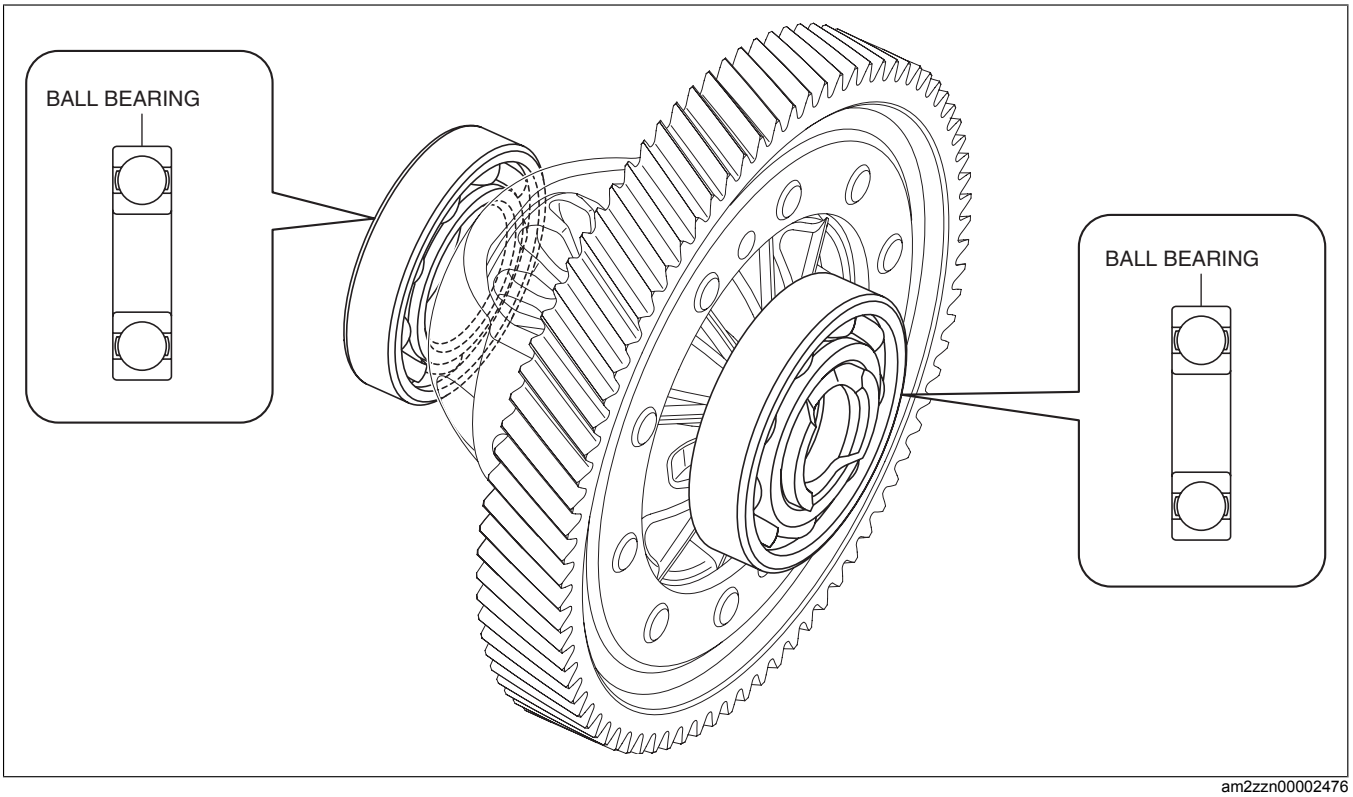


am2zzn00002476

Operation
Driving in a straight line

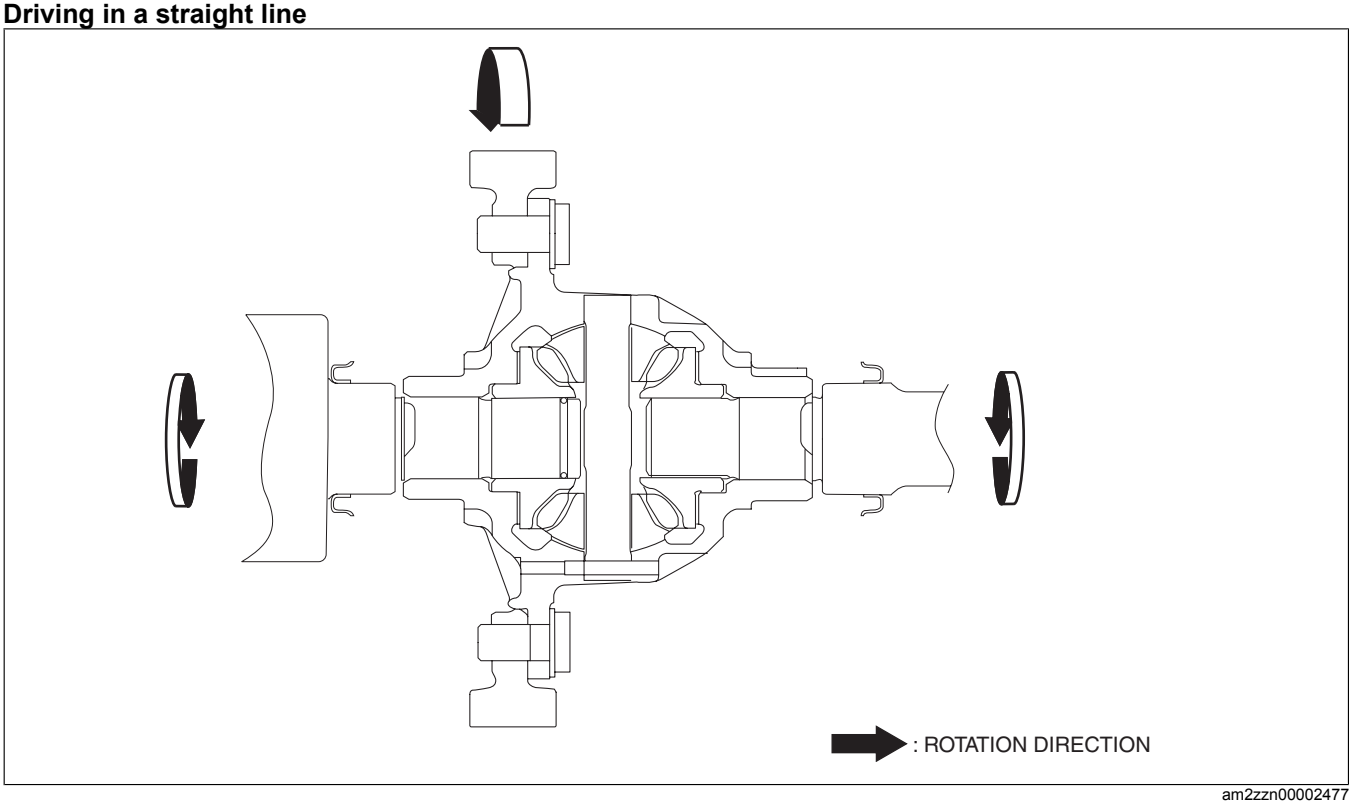

am2zzn00002477

Cornering

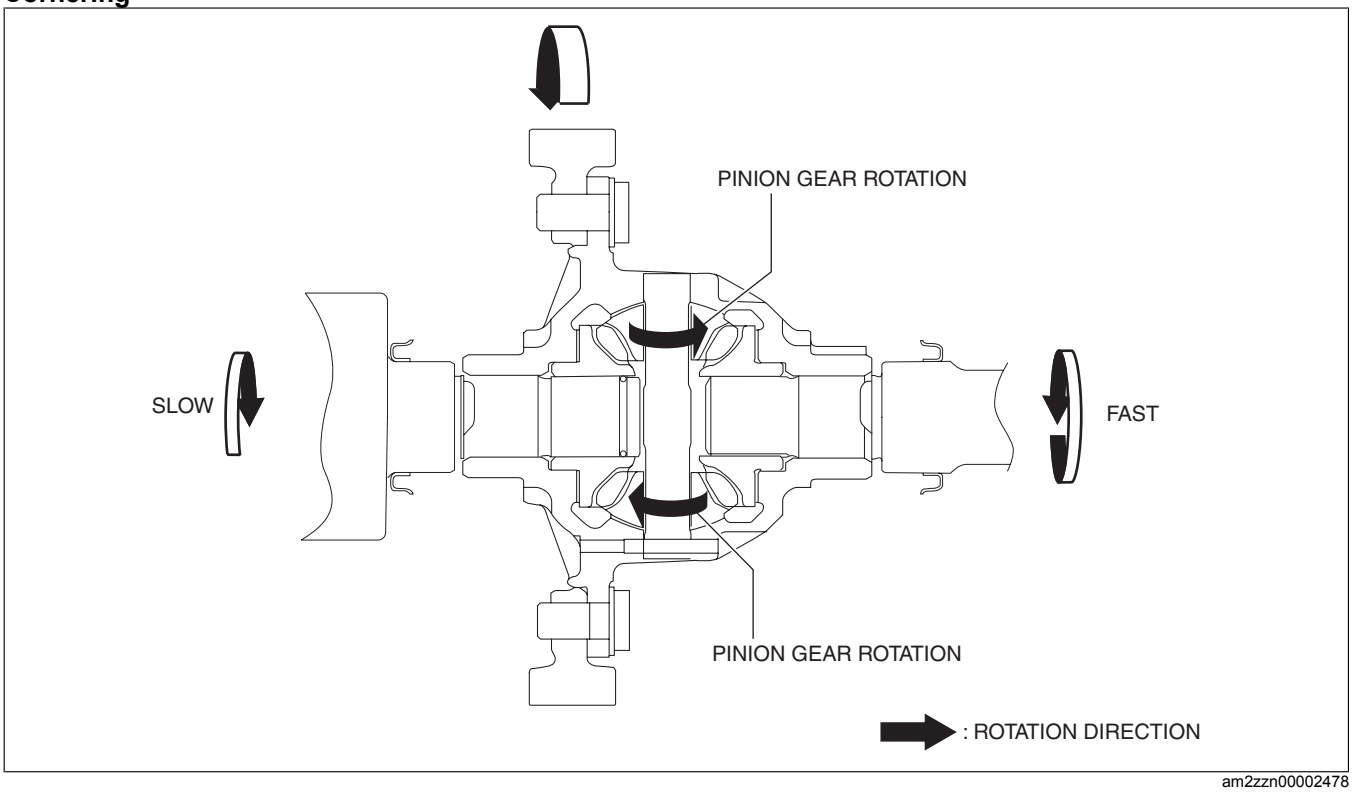

am2zzn00002478